

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800057P


Estimated Time : 5 min.

Replacement for OEM
203 830 01 18

01-07 Mercedes Benz C-Class

04-06 Mercedes Benz CLK Convertible

03-08 Mercedes Benz CLK Coupe

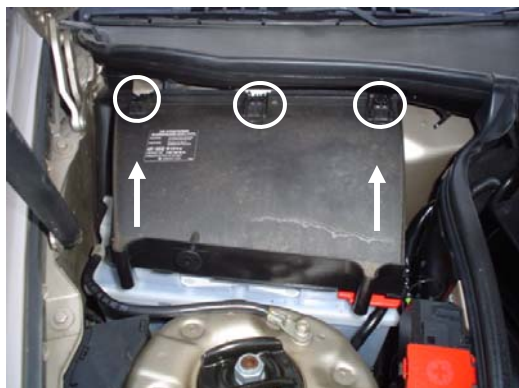

1. The filter is located under the hood below the windshield on the passenger side. Unhook the 3 metal latches to release the filter box. Pull up slightly to remove the filter box.



3. Insert new TYC filter into filter box, ensuring that the Air Flow arrow is pointing up. (It will point down later as you flip the box to reinstall)

4. Reinstall in reverse order.



2. Flip the filter box over, remove the old filter by pulling it up.

Installation guide pictures are from the **BOLD** vehicle model.

Feel the difference with TYC.

Discover other A/C and heating parts on our website.