



- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800062C

Estimated Time : 10 min.


Replacement for OEM
82205905

04-08 Chrysler Pacifica

01-07 Chrysler Town and Country

01-07 Dodge Caravan


01-03 Plymouth Voyager

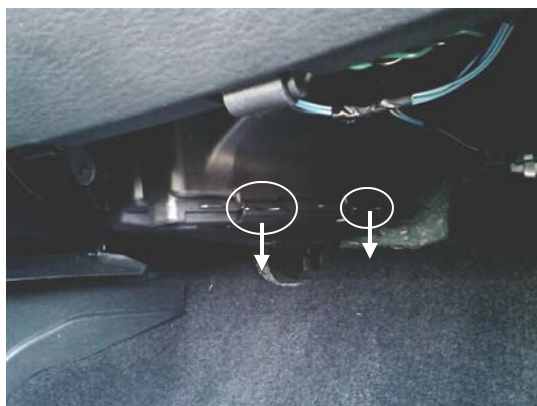

1. The filter is located under the glove compartment. Look under to identify the filter access door. Push on the 2 retaining tabs to release door.



2. Pull down the loose filter access door to expose the filter inside. Set filter access door aside.

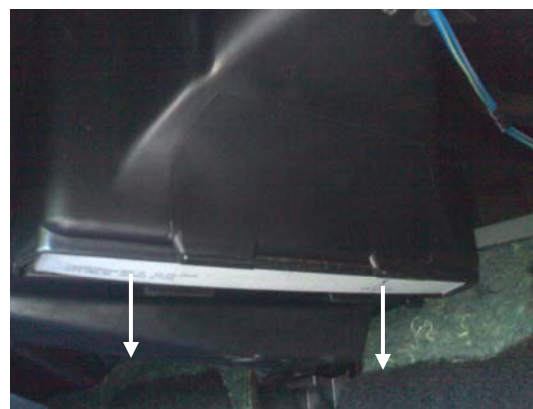

3. Pull down on the old filter to slide it out. Replace old filter with new TYC filter. Ensure that Air Flow arrow is pointing to the driver's side.

4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Feel the difference with TYC.

Discover other A/C and heating parts on our website.