

# TYC™

## CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

**TYC #: 800063C**

Estimated Time : 20 min.

Replacement for OEM  
8687389-0 (Particle)  
30676484-6 (Combination)

**04-10 Volvo 40 Series**  
05-10 Volvo 50 Series  
06-10 Volvo C70( to Ch 16250)


08-10 Volvo C30



1. The filter is located under the dash board, on the driver's side. Push in on the gray plastic retainer to release, remove the kick panel to the right side of the accelerator. Locate the 3 bolts securing the accelerator pedal, unbolt them and remove pedal.



2. Release the filter access door by unbolting the 2 bolts securing it. Set door aside.

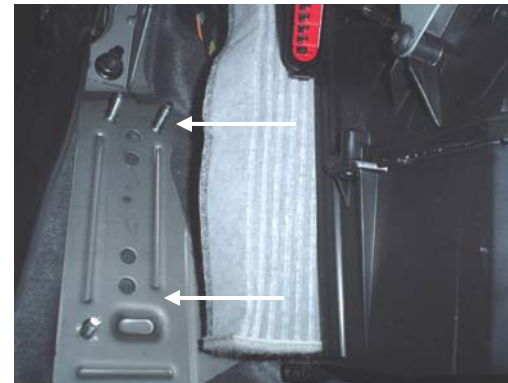

3. Remove old filter by sliding it towards the left. Replace with new TYC filter, ensuring that Air Flow arrow is pointing to the car's cabin.

4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.