

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800067C

Estimated Time : 5 min.

Replacement for OEM

211 830 02 18

211 830 08 18

221 830 00 18

06-10 Mercedes Benz CLS-Class


03-09 Mercedes Benz E-Class Sedan

04-06 Mercedes Benz E-Class Wagon

07-10 Mercedes Benz S- Class



1. The filter is located under the hood below the windshield on the passenger side. Remove the 10mm plastic nut that secures the filter box. Pull up slightly to remove the filter box.

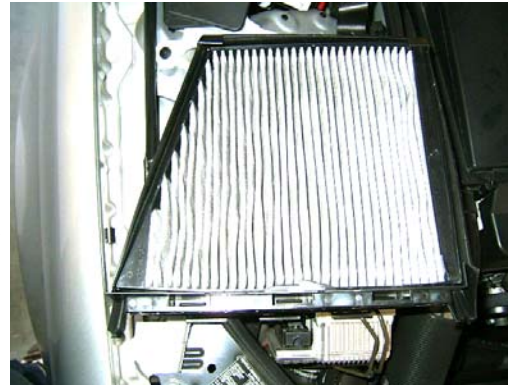

3. Insert new TYC filter into filter box, ensuring that the Air Flow arrow is pointing up. (It will point down later as you flip the box to reinstall)

4. Reinstall in reverse order.



2. Flip the filter box over, remove old filter by pulling it up.

Installation guide pictures are from the **BOLD** vehicle model.

Discover other A/C and heating parts on our website.

Feel the difference with TYC.