

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800068P2

Estimated Time : 10 min.

Replacement for OEM
91175923


99-04 Chevrolet Tracker



1. The filters are located behind the glove compartment. Push in on the sides of the glove box while pulling down to disengage the latches. Allow glove box to swing down on its hinges.



2. Pull on the tab at the top of the filter access door to release. Pull up the door to release it from its bottom groove. Set door aside.

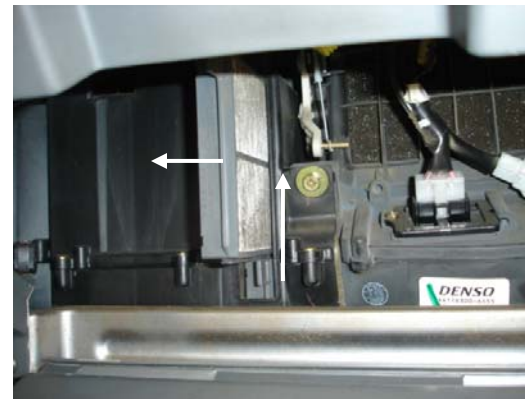

3. Grab the handle and slide out the first filter to remove. Lift up the bottom filter to where the first filter was, and slide it out the same way. Insert new TYC filters the same way, ensuring that the Air Flow arrow is pointing towards the driver's side.

4. Reinstall in reverse order.