



- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

## TYC #: 800069P2

Estimated Time : 5 min.


Replacement for OEM  
10322538 (New)  
10435138 (Old)

04-07 Buick Rainier  
02-07 Buick Rendezvous  
05-07 Buick Terraza  
05-08 Chevrolet Uplander  
**01-05 Chevrolet Venture**

01-05 Oldsmobile Silhouette  
01-05 Pontiac Aztek  
01-05 Pontiac Montana  
05-09 Pontiac Montana SV6  
05-07 Saturn Relay



1. The filters are located behind the glove compartment. Open the glove box, remove the plastic cover to expose the filter access door.

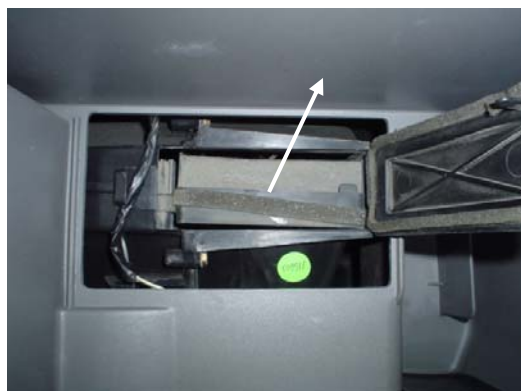

2. Pull on the filter access door and it will swing open. Pull out the first filter by sliding it out towards you.



3. Slide the second filter to the right, and then slide it outwards to remove.

Install new TYC filters in the same way, sliding in the first filter and moving it to the left to make room to slide in the second filter. Ensure that the Air Flow arrow is pointing down for both filters.

4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.