

# TYC™

## CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

**TYC #: 800071C**

Estimated Time : 5 min.

Replacement for OEM  
163 835 02 47

98-05 Mercedes Benz M-Class

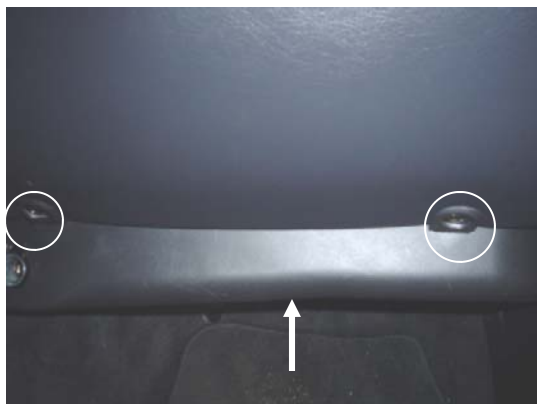

1. The filter is located under the glove box. Remove the 2 screws holding up the plastic cover panel and pull on the tab found at the middle of the cover panel.



2. Pull down the plastic cover to expose the filter access door. Pull on the retaining tab to remove door and set door aside.



3. Remove old filter by sliding it down. Insert new TYC filter, making sure that the Air Flow arrow is pointing to the driver's side.

4. Reinstall in reverse order.