



- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800074P

Estimated Time : 10 min.

***IMPORTANT!** Please refer to note below before proceeding any further.

Replacement for OEM
F65Z 19N619 AB

97-02 Ford Expedition*


97-03 Ford F Series Pickup (Light & Heavy Duty)*

02-02 Lincoln Blackwood*

98-07 Lincoln Navigator*



1. The filter is located below the glove compartment. Locate and remove the 2 screws holding up the plastic cover in front of the filter access door. Remove cover and set it aside.

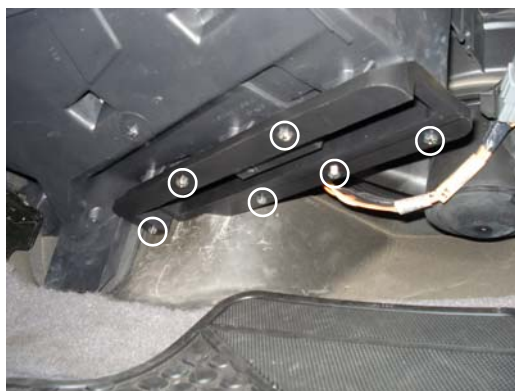

2. Locate and remove the 6 screws securing the filter access door. Remove door and set aside.



3. Grab the handle of the filter and pull it down to remove. Replace with new TYC filter. Ensure that Air Flow arrow is pointing to the cabin of the vehicle.

4. Reinstall in reverse order.

***Important Note:** All applications listed do **NOT** have the Cabin Air Filter installed as standard equipment. Purchase and pre-installation of **Filter Installation Kit** from your Ford dealer is necessary before using this TYC filter.

Installation guide pictures are from the **BOLD** vehicle model.