



- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800077P2

Estimated Time : 15 min.


Replacement for OEM
52485513

01-02 Cadillac Escalade
01-02 Chevrolet Avalanche
99-02 Chevrolet Silverado
99-02 Chevrolet Suburban

99-02 Chevrolet Tahoe
99-02 GMC Sierra
99-02 GMC Yukon
99-02 GMC Yukon Denali




1. The filters are located under the glove compartment. Locate and remove the 3 screws securing the plastic cover. Remove cover and set it aside.

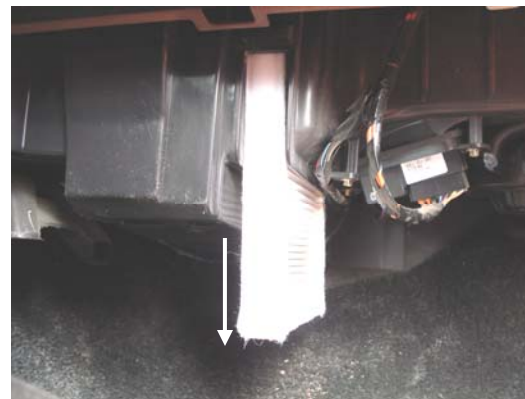

3. Pull down the first filter to remove it. The second filter is found at the deep end of the housing. Reach in, pull it outwards, then pull it down to remove.



2. Locate the single bolt securing the filter access door and remove it. Pull on the tab at the top of the access door to release it. Remove door and set it aside.

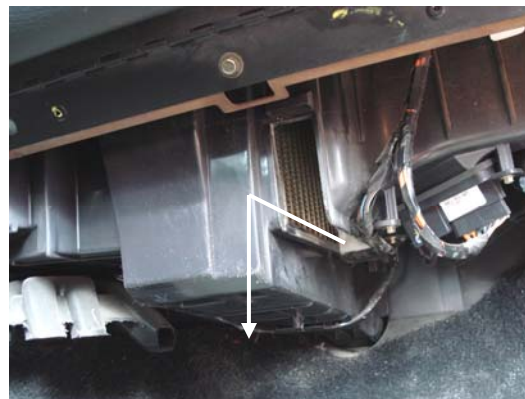

4. Replace with new TYC filters in the same location. Ensure that the Air Flow arrow is pointing towards the driver's side for both filters.

5. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Learn more about replacement A/C and heating parts on our website.