

# TYC™

## CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

**TYC #: 800084P**

Estimated Time : 5 min.

Replacement for OEM  
97133 2F010

05-10 Kia Spectra 5  
**04-09 Kia Spectra**  
09-10 Kia Borrego

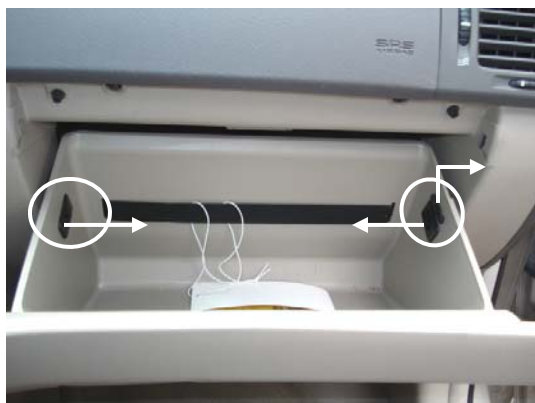

1. The filter is located behind the glove compartment. Push in on the sides of the glove box latches to disengage and remove them. Remove dampening string from glove box and allow it to retract. Allow box to swing down on its hinges.



3. Remove old filter from the frame by lifting it up. Insert new TYC filter into frame, ensuring that the air flow arrow is pointing down.



2. Pull on the 2 tabs on the sides of the filter access door, slide out the filter frame. The filter is installed inside the frame.

4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.