

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800087P


Estimated Time : 5 min. +

Replacement for OEM
2R8Z 19N619 BA

03-06 LN LS



1. The filter is located under the hood, below the cowl cover at the passenger side. Locate and remove the plastic pins securing the cowl cover.

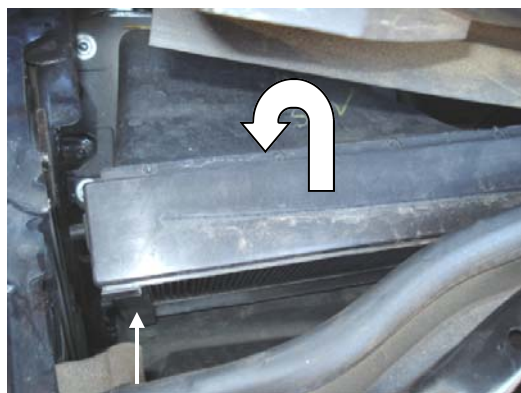

2. Lift up cowl cover to find the filter housing under it. Push on the securing tabs on each side of the housing, and flip up on the cover to gain access to the filter under it.



3. Remove the old filter by sliding it up, away from the housing.

4. Install new TYC filters by sliding it into the housing. Ensure that the air flow arrow is pointing towards the inside of the vehicle.

5. Reinstall in reverse order.