

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800090C3


Replacement for OEM
52482840

Estimated Time : 30 min. +

97-04 Buick Park Avenue
98-04 Cadillac Seville



1. The filter is located on the driver's side. Remove the kick panel next to the accelerator pedal by pulling on it to release the snap tabs.

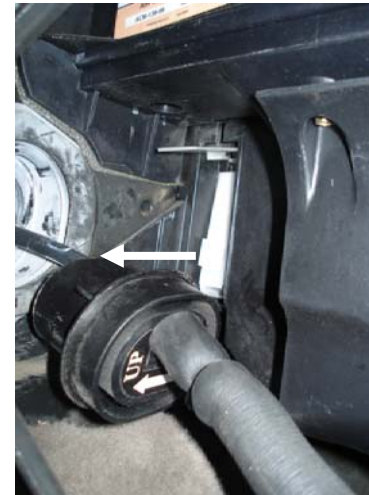


3. The filter is separated into 3 pieces, slide each piece out by pulling it towards the left, out of the cavity. The next piece will drop down after the removal of each piece. Install new TYC filters by sliding them back in reverse order, referring to the orientation shown below.



2. The filter access door is located next to the accelerator pedal. Pull on tab to remove the door and set it aside.

Filter Orientation

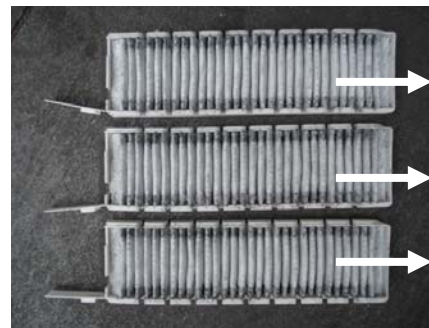

4. Reinstall in reverse order.

* Please note the orientation of the filter to be installed into the slot.

Installation guide pictures are from the **BOLD** vehicle model.