


- Cleaner Air for Passengers
- **▶** Enhanced HVAC Performance
- Easy Installation, Perfect Fit


TYC #: 800091P


Replacement for OEM 27277-EG025



1. The filter is located behind the glove compartment. Open glove box and push in on the sides to clear the latches. Disengage the damping string attached at the right corner. Allow box to swing down on its hinges.





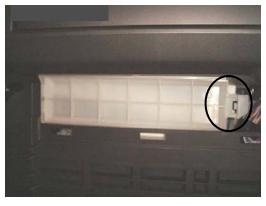



3. Pull on the retaining tab at the right of the filter access door. Remove door and set it aside.

Estimated Time: 5 min.

- 4. Slide out the old filter and replace with new TYC filter. Make sure UP arrow is pointing up.
- 5. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.