

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800096P2


Estimated Time : 15 min.

Replacement for OEM
97619-3D000


04-05 Hyundai Sonata (From 3-28-03)
01-05 Hyundai XG300/XG350



1. The filters are located behind the glove compartment. Remove the latches on each side of the glove box by pushing them inwards. Release the retaining cable and allow glove box to swing down on its hinges.

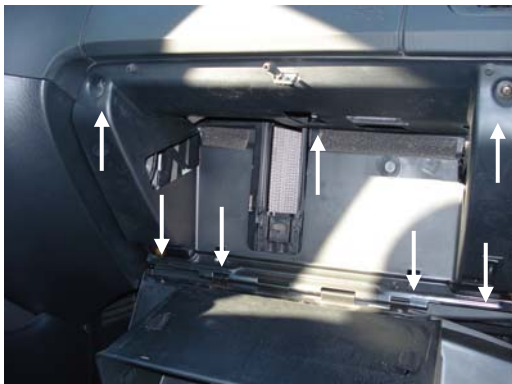

2. Remove the 2 bolts, 4 screws, and 1 nut holding the back panel of the glove box in place. Pull out the entire panel to expose the filter access doors behind it.

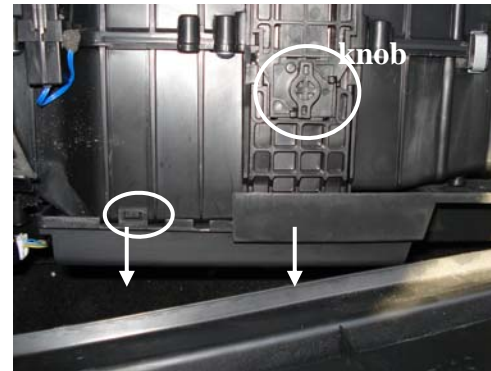

3. Unlatch and pull down the lower panel to completely access the filter door. Remove the top filter access door by turning the knob counterclockwise. Remove lower door by unlatching the bottom of the door and pulling it down. Slide out the old filters* and replace with new TYC filters.



Ensure that the air flow arrow is pointing to the driver's side.

4. Reinstall in reverse order.

*Cabin Air Filter is an OPTION on this application. Some vehicles may not come equipped with a Cabin Air Filter.

Installation guide pictures are from the **BOLD** vehicle model.