



- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800108C

Estimated Time : 5 min.

Replacement for OEM
87139-50060


07-08 Lexus LS 460

07-08 Lexus LS 460 L


07-08 Lexus LS 600h L



1. The filter is located behind the glove compartment. Open compartment and remove the t-shaped shelf in the glove box by lifting and pulling out the 3 retaining tabs securing the shelf. Remove shelf and set it aside.

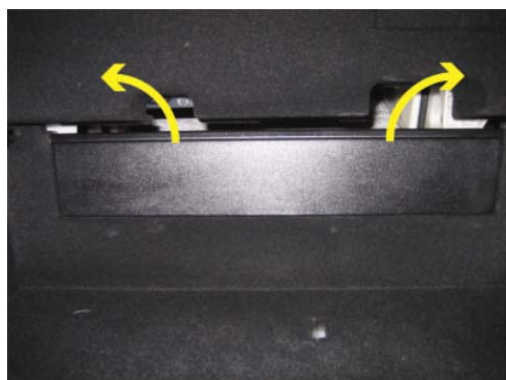

2. Slide the filter access door upwards, then pull outwards to remove. Set aside filter access door.

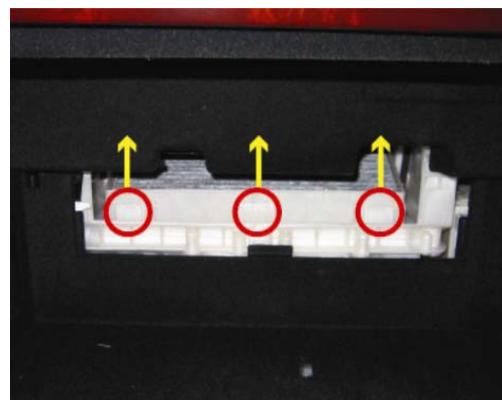

3. Push on the 3 tabs found on the front of the filter frame and lift frame up. Slide frame outwards to remove.



4. Remove filter element from frame and replace with new TYC filter, ensuring that the air flow arrow is pointing down.

5. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Feel the difference with TYC.

Discover other A/C and heating parts on our website.