

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800109P

Estimated Time : 15 min.

Replacement for OEM
OEM Filter: 5013595AB
*OEM Dealer Kit Required: 82208300


99-07 Jeep Grand Cherokee



1. The filter is located in the passenger side engine compartment. Locate and remove the 3 torx screws securing the plastic cover.



2. Lift hood and pull away weather strip located at the rear of the engine compartment. Remove and place aside.

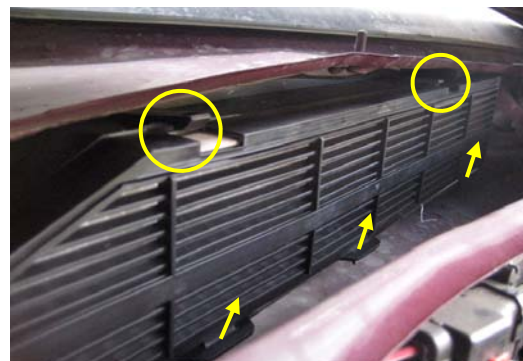

3. Lift the panel in front of the windshield and remove the cover by lifting the 2 tabs at the top and then lift upwards. Remove the cover and place aside.



4. Remove the filter and replace with new TYC filter in the same location.

5. Reinstall in reverse order.

*Note: The filter housing is optional on some vehicles. If you do not see the filter housing shown in the picture, purchase of a filter housing from your local dealer is required in order to have cabin air filtration capability.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.