

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800115C

Estimated Time : 15 min.

Replacement for OEM
64 31 9 142 115 (Carbon)
64 31 9 142 114 (Particle)

06-10 BMW 3 Series Sedan (E90)

06-10 BMW 3 Series Coupe (E92)/Convertible (E93)/Wagon (E91)
08-10 BMW 1 Series Coupe (E82)/Convertible (E88)



1. The filter is located under the hood, within the engine bay. Open the hood, locate the filter housing panel and remove the 6 bolts.




3. Install the new TYC filter by aligning the filter then pushing the filter down into the housing. Ensure the filter housing clips are engaged and locked.

* Filter only installs in one orientation.



2. Remove filter housing from the vehicle. Turn over filter housing to expose the filter. Release filter by depressing the 3 housing clips holding the filter and lift the filter upwards.

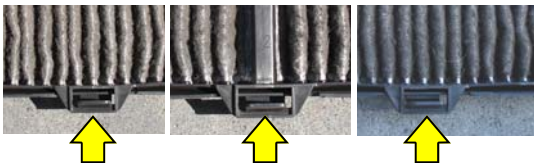

4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.