

# TYC™

## CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

**TYC #: 800116C2**


Replacement for OEM  
64 31 6 945 586

**07-10 BMW X5**  
**08-10 BMW X6**

Estimated Time : 10 min.

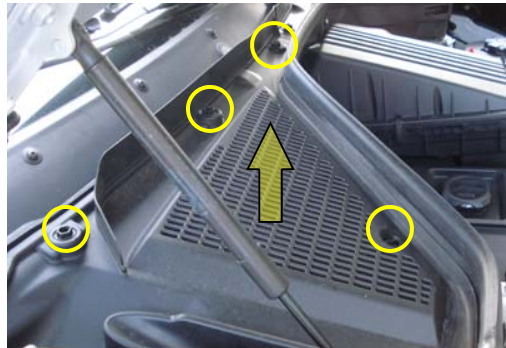

1. The filter is located under the hood. Open the hood, locate the plastic cowl on the passenger side and unlock the 4 retaining bolts by turning them counter clockwise.

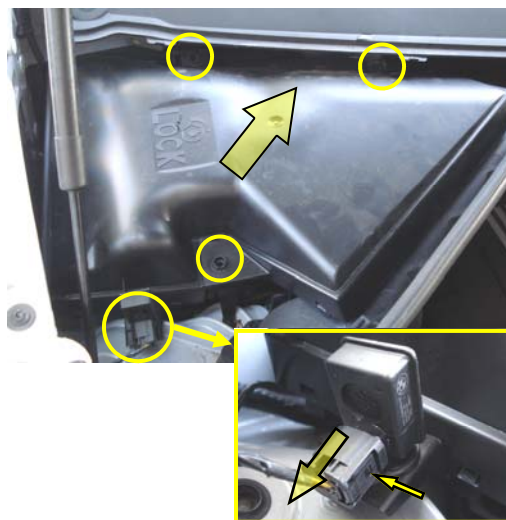


2. Remove the upper shroud cover to reveal the filter housing. Unlock the 3 filter housing retaining bolts by turning them counter clockwise.

3. Disconnect the sensor harness by depressing clip then pulling away.



4. Remove filter housing by lifting and pulling away. Turn housing over to reveal the 2 filters. Remove the filter by depressing the 4 retaining clips per filter. Lift the filter up and pull away from the housing. Repeat for the other filter.

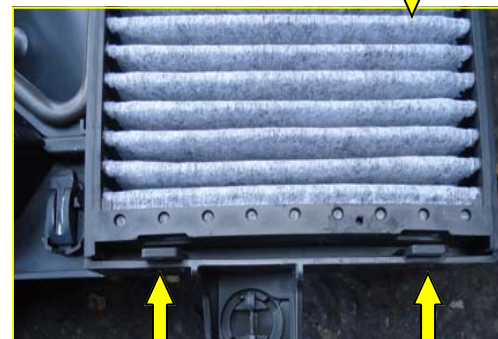

5. Install the new TYC filters by pushing the filter down into the housing. Ensure the filter housing clips are fully engaged and locked.

6. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.