

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800118P2


Estimated Time : 5 min.

Replacement for OEM
97133-3E270


06-09 Kia Sorento

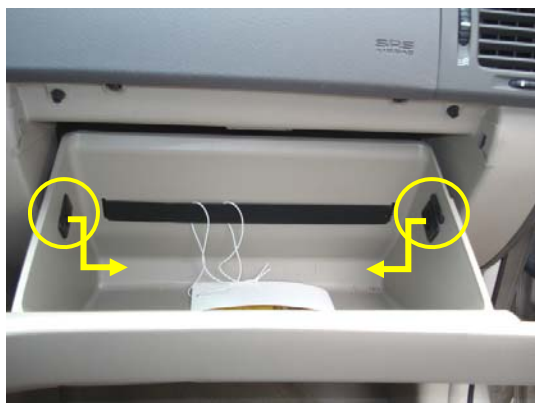


1. The filter is located behind the glove compartment. Push in on the sides of the glove box latches to disengage and remove them.

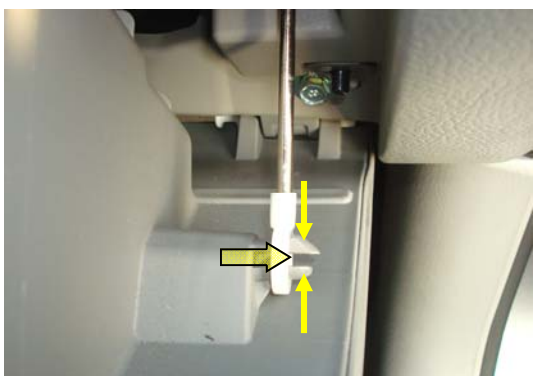

2. Remove damper from glove box by pressing in tabs and pulling away. Allow box to swing down on its hinges.

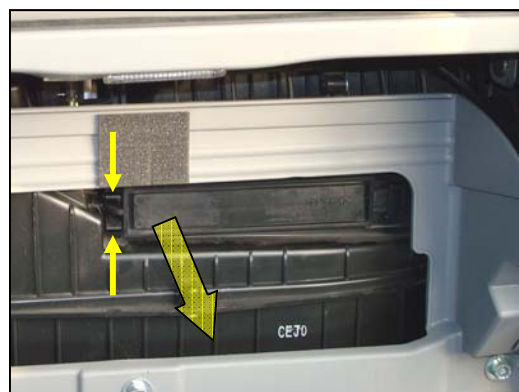

3. Remove filter access door by pushing on the 2 tabs found on the left. Remove filter door and set aside. The filters are installed inside the trays.

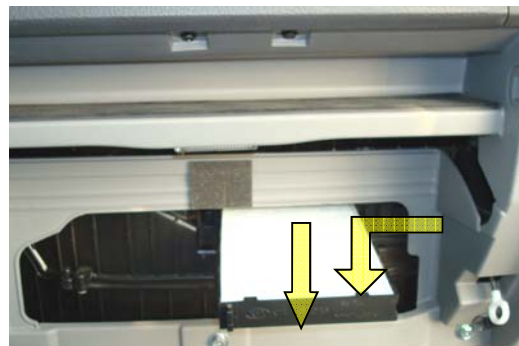

4. Remove both filter trays; begin by pulling out the first tray. Remove second tray by using the protruding tab and sliding the tray to the left. Remove filter from its tray by lifting it up. Insert new TYC filters into both trays, ensuring that the air flow arrow is pointing down.

4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.