

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit


TYC #: 800119P2

Estimated Time : 15 min.

***IMPORTANT!** Please refer to note below before proceeding any further

Replacement for OEM
G3210AE000

00-04 Subaru Legacy
03-06 Subaru Baja Sport

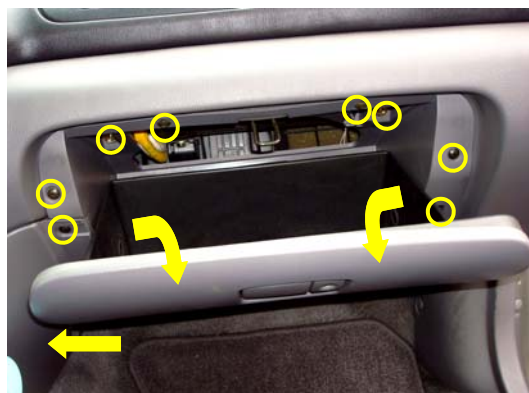


1. The filter is located behind the glove compartment. Push in on both sides of the glove box while pulling down to clear the two knock pins on each side. Allow it to swing down on its rear hinges. Remove the center console's lower right panel by removing screws and pulling it out. Next, remove the screws holding the glove box in place.



2. While supporting the glove box, disconnect the lamp plug to the right. Fully lower glove box then remove the two knock pins to facilitate reinstallation later. With glove box removed, the filter housing will be visible.



3. Disconnect resistor plug found on filter cover. Release filter cover by removing four clips holding it in place by prying with a flat-head screwdriver. Remove the lower filter first by grabbing its handle. Remove top filter by pulling it down, then out.

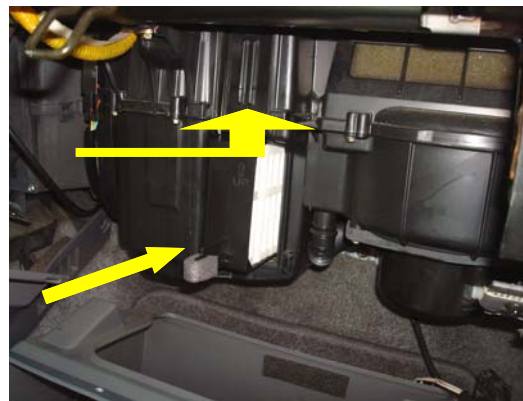

4. Install new TYC filters in reverse order, pushing up the first filter before inserting the second. Make sure the "UP" arrow on both filters are pointing upwards.

5. Reinstall in reverse order.

***Important Note:** Vehicle may not NOT have a Cabin Air Filter installed as a standard equipment. However, there is a provision within the housing to insert new Cabin Air Filters.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.