

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800120P2

Estimated Time : 20 min.


***IMPORTANT!** Please refer to note below before proceeding any further.

Replacement for OEM


01-04 Nissan Frontier




1. The filter is located below the glove compartment. Locate and remove the 6 screws holding the glove compartment. Remove entire assembly and set it aside.

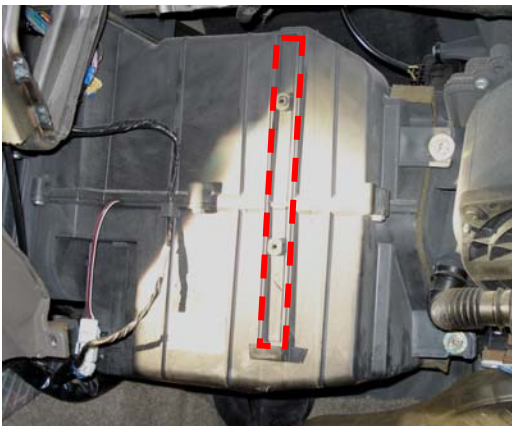

2. If the vehicle is not pre-equipped with a cabin filter a slot will need to be cut out. Cut out the inner panel using the surrounding edge as a guide. Remove and discard cut out material.

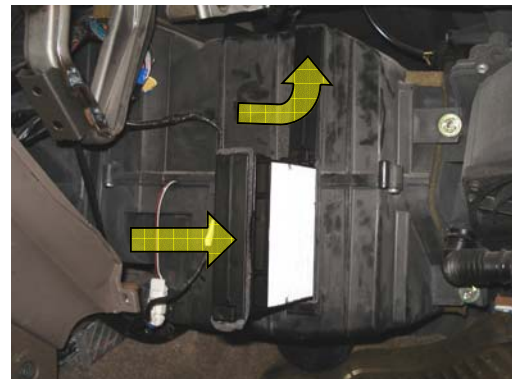

3. Ensure the filter tabs of both filters are facing the bottom. Fully insert the first filter and slide upwards. Follow by sliding the second filter underneath the first.

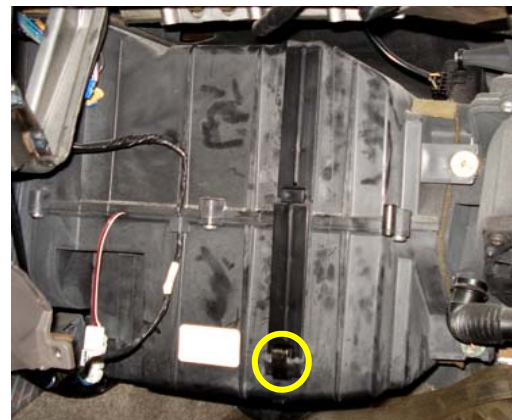

4. Attach the supplied metal clip onto the lower filter and protruding tab of the AC housing.

5. Reinstall in reverse order.

***Important Note:** Vehicle may **NOT** have a Cabin Air Filter installed as standard equipment. Modification to the vehicle is necessary before using this TYC filter.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.