

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800122P


Estimated Time : 5 min.

Replacement for OEM
72880FG000


08-10 Subaru Impreza
09-10 Subaru Forester



1. The filter is located behind the glove compartment. Pinch the arrow-like head found on the right side of the compartment, then pull the retainer arm to the right to disconnect.

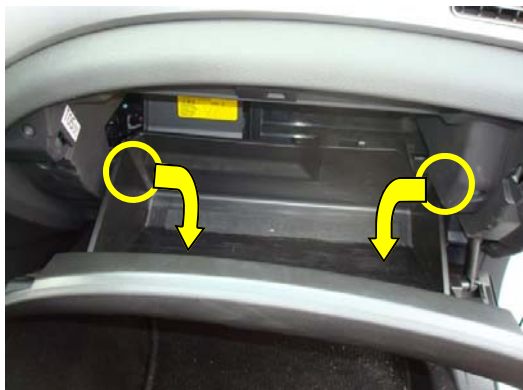

2. Push in on the sides of the glove box latches while pulling down to clear them from the rest of the glove box. Allow the glove box to swing down on its hinges.

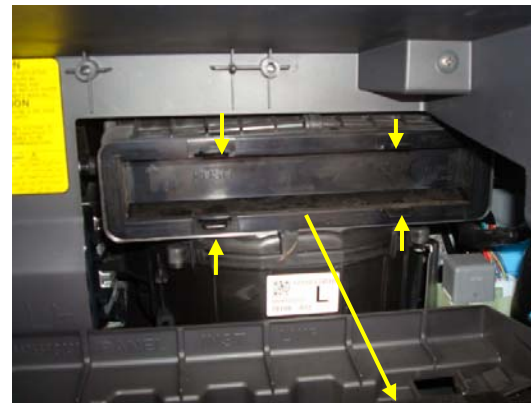

3. Pinch on the top & bottom tabs towards each other to release. Then, slide the entire filter out from its housing to remove.

4. Install new TYC filter by inserting it into the housing. Ensure that the “Up” arrow is pointing upwards.

5. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.