

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800125P


Estimated Time : 5 min.

Replacement for OEM
80292-TF0-G01

09-10 Honda Fit

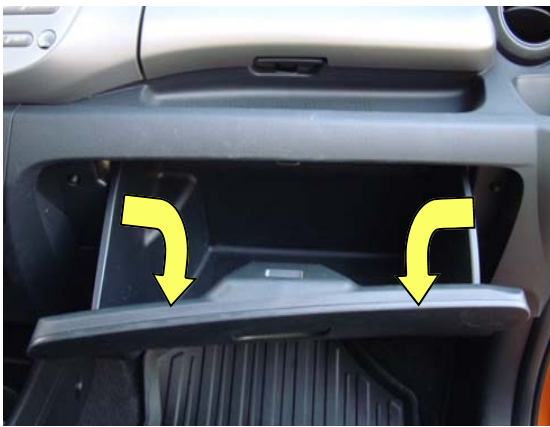

1. The filter is located behind the glove compartment. Push in on the sides of the glove box while pulling down to disengage the latches. Allow glove box to swing down on its hinges.

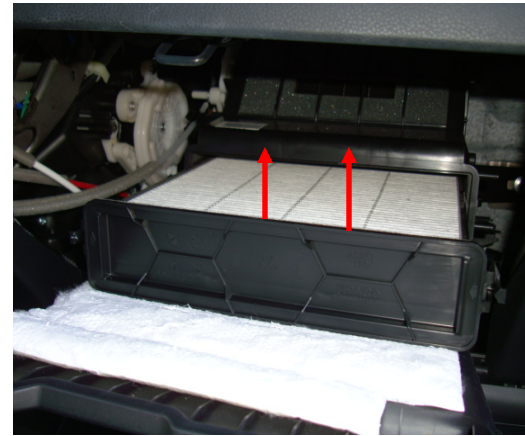

3. Pull up old filter from inside the frame to remove.



2. Push in on the retaining tabs on each side of the filter frame to release it. Slide the filter frame outwards.



4. Install new TYC filter into frame, ensuring that the air flow arrow is pointing down.

5. Reinstall in reverse order.