

# TYC™

## CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800128C

Estimated Time : 5 min.

Replacement for OEM  
15861929

### 05-09 Chevrolet Corvette

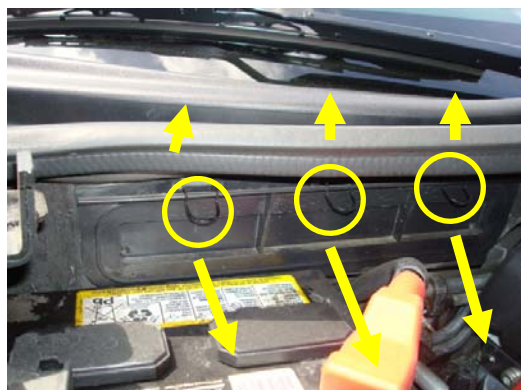

1. The filter is located under the hood, below the windshield on the passenger side. Remove the filter access door by lifting the three clips and pulling it out. Set access door aside.



2. Reach into the cavity and slide out the old filter.



3. Install the new TYC filter by sliding it in. Ensure that the Air Flow indicator is pointing down.



4. Reinstall access door in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.