

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800129C2


Estimated Time : 5 min.

Replacement for OEM
164 830 02 18


06-10 Mercedes Benz M-Class

06-10 Mercedes Benz R-Class


07-10 Mercedes Benz GL-Class

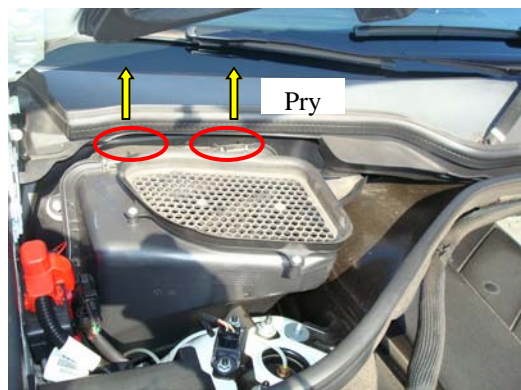

The filter is located under the hood, at the passenger's side. Using a flat head screwdriver, pry open the 2 locking clips on the air box. Lift the loose air box up to remove. Set air box aside.

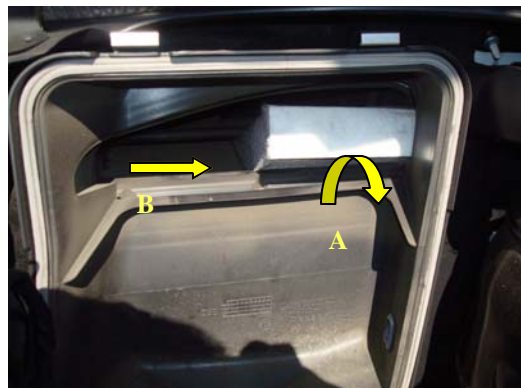

2. Reach in and pull up the first filter on the right, bending the filter slightly. Pull filter towards you to remove (A). Slide the 2nd filter to the right (B), then remove the same way as the first filter.

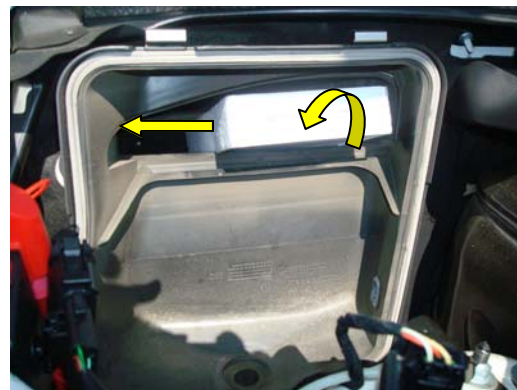

3. Be sure to orientate the new TYC filters where it the Air flow arrow is pointing down. Install the first filter by bending it slightly into the housing and pushing it forward. After inserting first filter, slide it to the left. Install second filter by slightly bending it and pushing it into the housing.



4. Ensure that both filters are sitting snugly in the cavity, with no gaps in between them that allows dirty air to pass through. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.