

- Cleaner Air for Passengers
- Enhanced HVAC Performance
- Easy Installation, Perfect Fit

TYC #: 800130C

Replacement for OEM 27277-AR225



1. The filter is located behind the glove compartment. Remove the four screws along the top of the glove box.




- 2. Remove retaining bolt by turning counter-clockwise.
- 3. Remove the two remaining screws holding up the glove box on each side.

Installation guide pictures are from the **BOLD** vehicle model.

08-08 Infiniti G35 Sedan

09-10 Infiniti G37 Sedan 02-06 Infiniti Q45 (From 08/01)

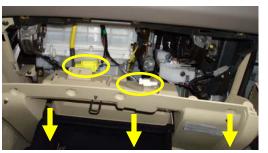

- SAIR FLOMO MAY A MAY A MAY A MAY

4. With retaining screws removed, pull down the entire glove box. Disconnect the white and yellow connectors to gain access to the filter housing.

Estimated Time: 20 min.

- 5. Push on the locking tab on the right of the filter access door, then pull door outwards to remove. Set access door aside.
- 6. Slide out old filter from housing, replace with new TYC filter. Ensure that Air Flow arrow is pointing down.
- 7. Reinstall in reverse order.