

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800131P

Estimated Time : 5 min.

Replacement for OEM
GS3L-61-148


09-10 Mazda 6



1. The filter is located behind the glove compartment. Push in on the sides of the glove box latches while pulling down to clear the latches. Allow the glove box to swing down on its hinges.



2. Pry open 6 tabs at the front of filter cover to open. Set access door aside. The filter will become visible.

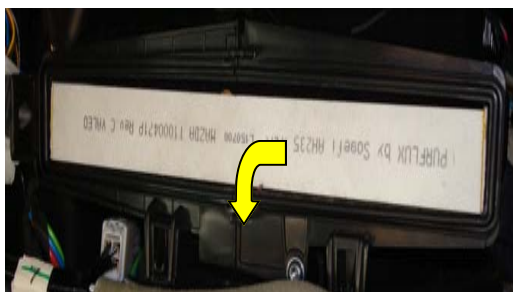

3. Install new TYC filter by inserting it into the housing. Ensure that the arrow is pointing downwards.

4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.