

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800137C

Replacement for OEM
30767024-0

07-10 Volvo S-80
08-10 Volvo V-70
10-10 Volvo XC-60
08-10 Volvo XC-90

Estimated Time : 20 min.

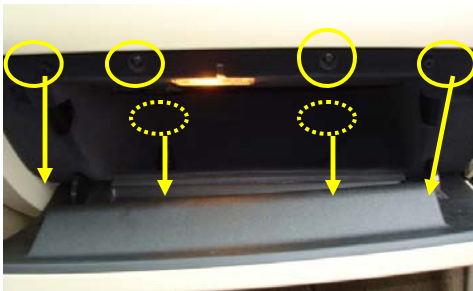


1. The filter is located below the glove compartment. Remove the 4 screws along the top, 2 in the middle, and 2 under the glove box. Gently pull down the loose glove box.




2. Disconnect the 2 electrical connectors behind the glove box to allow it to be completely removed. Set glove box aside.




3. Filter access door is located on the left, towards the center of the vehicle. Pull on the securing tabs and swing filter access door outwards to remove.

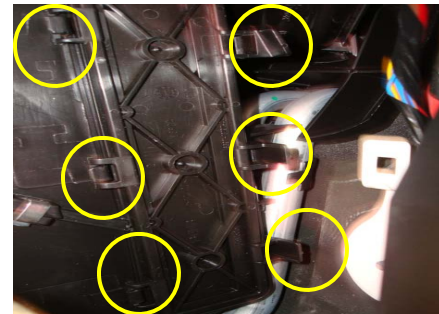

4. Remove filter cover and slide out the old filter.

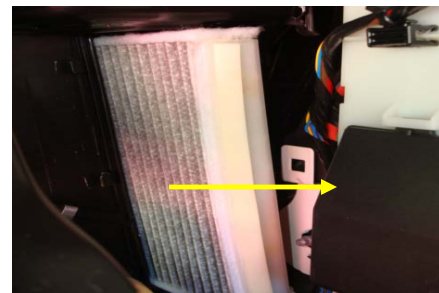

5. Insert the new TYC filter and ensure the air flow arrow is pointing towards the inside of the vehicle.

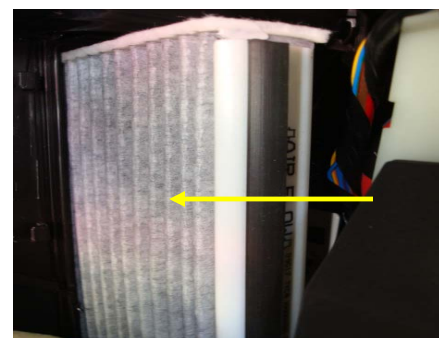

6. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.