

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800138P

Replacement for OEM
B789-1FC0A

Estimated Time : 20 min.

09-10 Nissan Cube

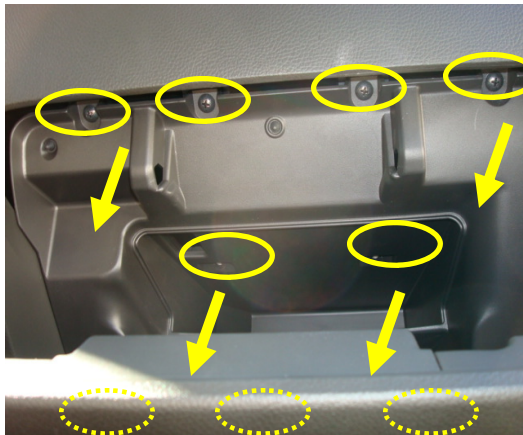

1. The filter is located below the glove compartment. Remove the 4 screws along the top, 2 in the middle, and 3 at the bottom of the glove box. Pull down entire glove compartment and set aside.



2. Filter access door is located on the left towards the center of the vehicle. Pull on securing tab at the bottom and swing filter access door outwards to remove. Set access door aside.



3. Remove filter by grabbing on the white handle and pulling it to the right.

4. Install new TYC filter by squeezing the sides of the filter and pushing it into the housing. Make sure air flow arrow is pointing towards the inside of the vehicle.



5. Reinstall in reverse order

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.