

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800143P


Replacement for OEM
80291-TF0-E01

Estimated Time : 5min.


10-10 Honda Insight

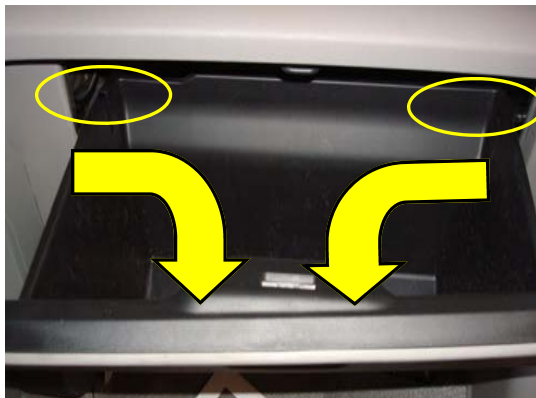

1. The filter is located behind the glove compartment. Push on the sides while pulling down to disengage the latches. Allow glove box to swing down on its hinges. Remove glove box and set it aside.

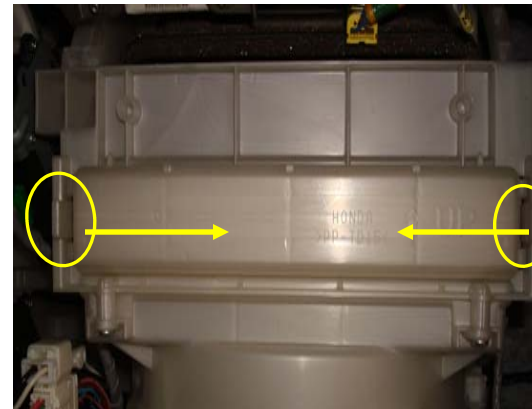

3. Pinch the right and left tabs toward each other to remove the filter access door. Then slide the filter out from the housing to remove.

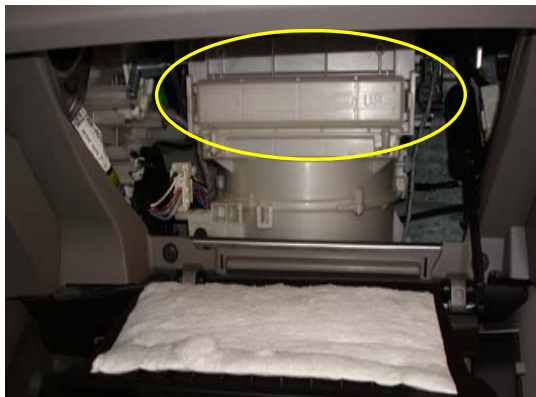

2. With globe box removed, filter access door is now visible.



4. Install new TYC filter into the housing. Ensure that the air flow arrow is pointing down.

5. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.