

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800144P

Estimated Time :5 min.

Replacement for OEM
AE5Z 19N619


10-11 Ford Fusion

10-11 Mercury Milan

10-11 Lincoln MKZ



1. The filter is located behind the glove compartment. Push in on the sides of the glove box while pulling down to disengage the latches.

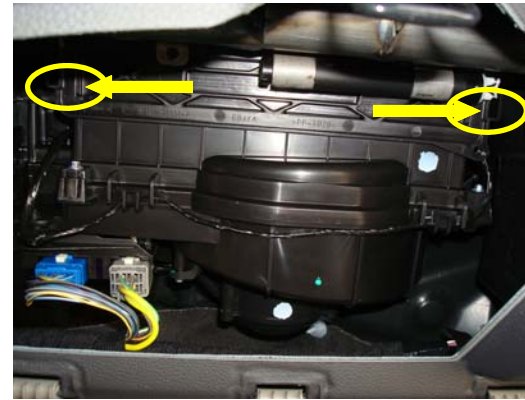

3. Pry away the right and left tabs to remove the filter access door. Then slide the filter out from the housing to remove.



2. Remove the string that is attached to the glove box. Allow glove box to swing down on its hinges. Filter access door will now be accessible.



4. Install new TYC filter into the housing. Ensure that the air flow arrow is pointing down.

5. Reinstall in reverse order

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.