

# TYC™

## CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

**TYC #: 800145C**


Replacement for OEM  
8K0 819 439 A

Estimated Time : 10 min.

09-10 Audi A4 / S4

**08-10 Audi A5 / S5**

09-10 Audi Q5

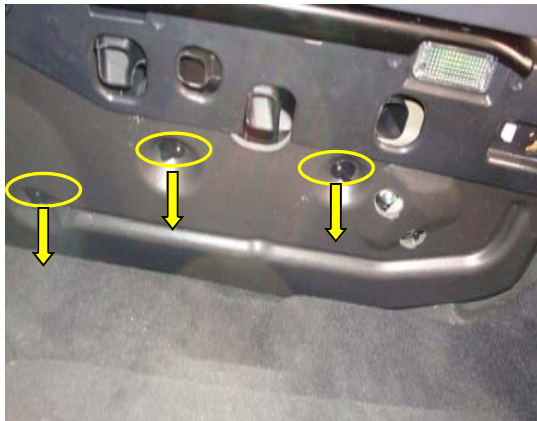

1. The filter is located below the glove compartment. Look below the glove box towards the inside of the vehicle. Locate and remove the 3 plastic screws holding the gray foam cover. Set foam cover aside.



2. The white filter access door is now accessible. Reach in and pull the access door to the left to release. Set filter access door aside.



3. Grab the removal flap and slide the filter out of the housing to remove.

4. Insert new TYC filter into the housing. Ensure that angled corner is at the upper right side.



5. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.