

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800149C

Replacement for OEM
13271191

Estimated Time : 10 min.

10-11 Buick LaCrosse 10-11 Cadillac SRX

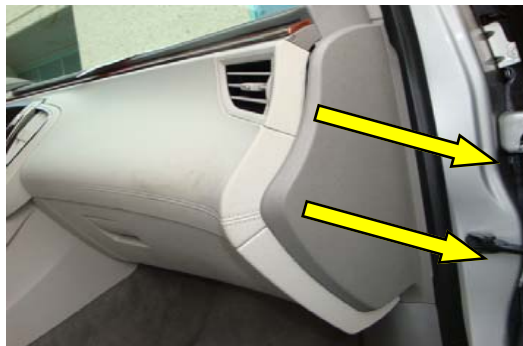


1. The filter is located behind the glove compartment. Remove the end cover located on the side of the dashboard.




2. Open the glove compartment and remove the three screws along the top .



3. Remove the four lower screws holding up the glove box. Pull down plastic cover at the bottom of glove box and set it aside.

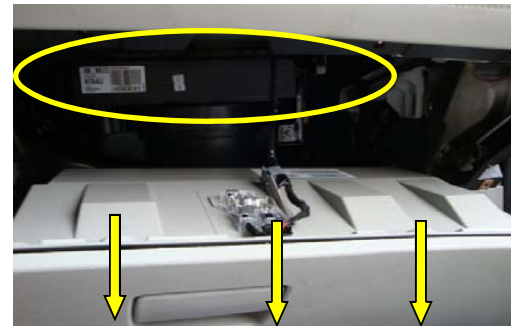

3. Remove the glove box by pulling the entire assembly downwards. Filter access door is now visible.

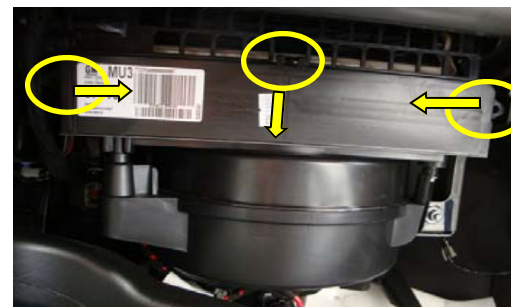

4. Pull the three tabs to loosen and open the filter access door.

Remove old filter by sliding it out. Replace with new TYC filter, and ensure that the air flow indicator is pointing down.



5. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.