


TYC #: 800150C

Replacement for OEM JKR500020




Cleaner Air for Passengers
Enhanced HVAC Performance
Easy Installation, Perfect Fit

05-10 Land Rover LR 3

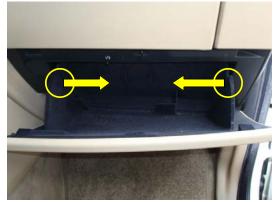

1. The filter is located behind the glove compartment. Push in on the sides of the glove box while pulling down to disengage the latches.

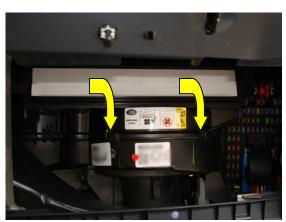


3. Grab the removal flap and slide the filter out from the housing to remove.

Estimated Time : 5min.

4. Install new TYC filter into the housing. Ensure that the air flow arrow is pointing down.

5. Reinstall in reverse order

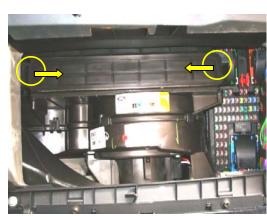

 Allow glove box to swing down on its hinges. Filter access door will now be accessible.
Release filter access door by pushing in the 2 tabs on the side.

Installation guide pictures are from the **<u>BOLD</u>** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.