

TYC™

CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC #: 800155C2

Replacement for OEM
64 11 9 163 329

Estimated Time : 10 min.


11-11 BMW 5 Series
09-11 BMW 7 Series



1. The filter is located under the glove compartment. Locate and remove the 4 screws holding up the black foam cover panel.



3. Grab the removal flap and slide the both filters out of the housing to remove. Insert new TYC filters, ensuring that the air flow arrow is pointing to the inside of the vehicle.

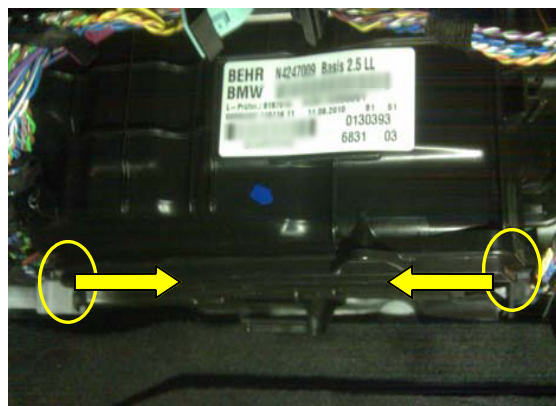

2. Pull down the cover to expose the filters access door. Pull on the locking tab on both side. Set filter access door aside.



4. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Looking for replacement A/C and heating parts? Visit our website.