

TYC™

CABIN AIR FILTER


- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

TYC # 800156P:

Replacement for OEM
92234714

Estimated Time : 10 min.


10-11 Chevrolet Camaro

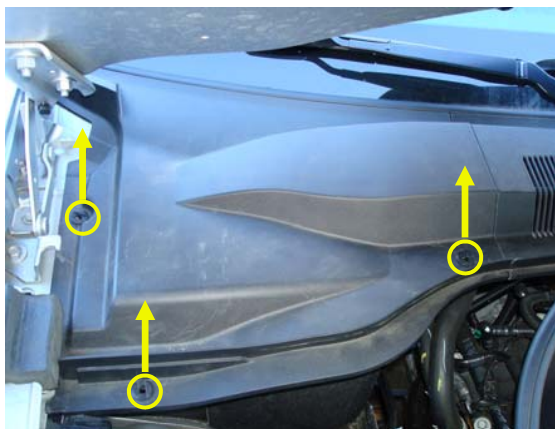

1. The filter is located under the hood, below the windshield on the passenger side. Remove the 3 retainer studs to loosen the cowl cover.



3. Remove old filter from the tray by Pulling it outwards/upwards.

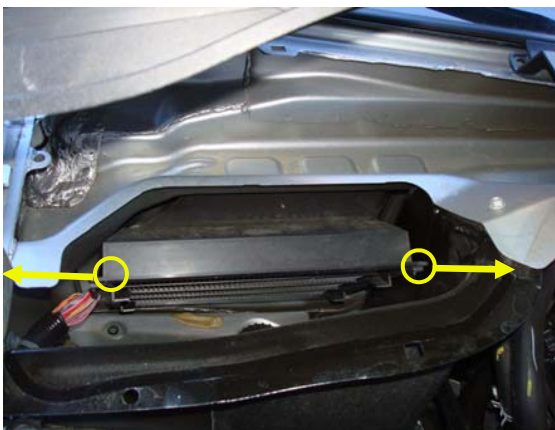

2. Lift up cowl cover to expose the filter access door. Remove it by pulling both of latches on either side.



4. Slide in new TYC filter. Ensure that the filter is seated snugly . Make sure the Air Flow arrow is pointing to the vehicle's cabin.

5. Reinstall in reverse order.