

# TYC™

## CABIN AIR FILTER

- ▶ Cleaner Air for Passengers
- ▶ Enhanced HVAC Performance
- ▶ Easy Installation, Perfect Fit

**TYC #: 800165P**


Replacement for OEM  
68071668AA

Estimated Time : 10 min.

**11-12 Chrysler 300**  
**11-12 Dodge Charger**



1. The filter is located under the hood, below the windshield on the passenger side. Remove the plastic cover.

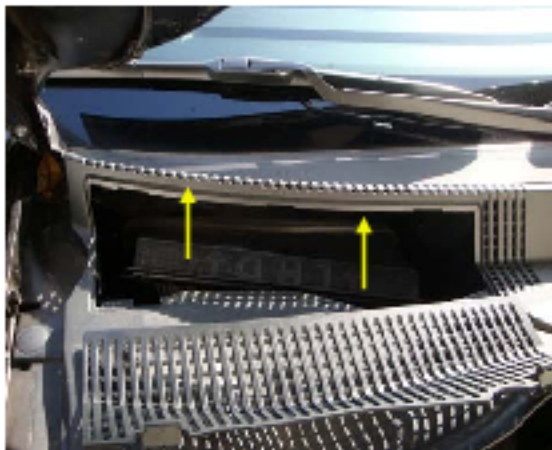

2. Lift up plastic cover to expose the filter cover. Flip open filter cover to gain access to the filter under it



3. Remove old filter from the tray by first lifting it up, then pulling outwards.



4. Install new TYC filter. Ensure that the filter is seated snugly on the tray.

5. Reinstall in reverse order.

Installation guide pictures are from the **BOLD** vehicle model.

Learn more about replacement A/C and heating parts on our website.