



TYGER®

TYGER ARMOR™

TG-AM2T20018

Driver/left Side Armor Illustrated



Passenger/Right Side Armor Illustrated

Parts List

- x1** Driver Sidebar
- x1** Passenger Sidebar
- x12** 8-1.25mm x 30mm Hex Bolts
- x12** 8mm Lock Washers
- x12** 8mm x 24mm OD x 2mm Flat Washers

Before Installation

ASSISTANCE IS HIGHLY RECOMMENDED. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.

Warning


To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish. Please use only mild soap to clean the Side Armor.

STEP 1


PRIOR TO INSTALLATION

Starting on the passenger side of the vehicle and remove the plastic plugs or hex bolts from the factory mounting location along the bottom of the body, (Figures 1 & 2). **IMPORTANT:** There are (4) mounting locations along the body, installation will use the 1st, 2nd and 4th locations.

Remove plastic plugs (if equipped) or hex bolts from threaded holes

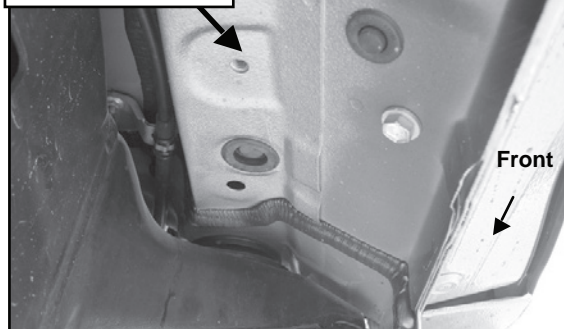

(Fig 1) Passenger/right Front Mounting Location

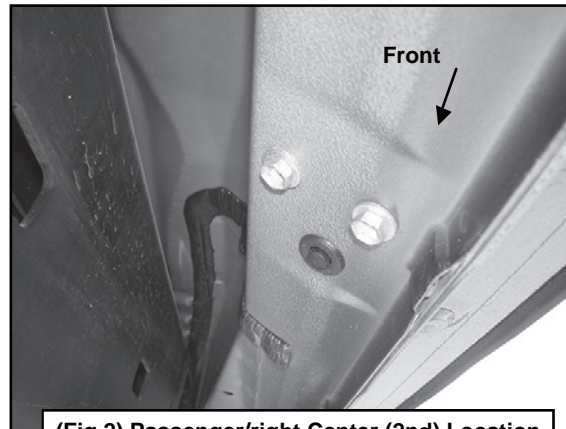

(Fig 2) Passenger/right Center (2nd) Location

There are four sets of threaded holes in the side panel. Starting from the front of the vehicle, use the first, second, and fourth sets of holes.




TYGER[®]

STEP 2


Select the Passenger Side Armor. With assistance, line up the (3) mounting brackets on the Side Armor with the factory holes in the body. Attach the Side Armor to the factory locations with the included (6) 8mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Flat Washers, (Figures 3 & 4). Do not tighten hardware at this time.

8mm x 30mm Hex Bolts
8mm Lock Washers
8mm Flat Washers

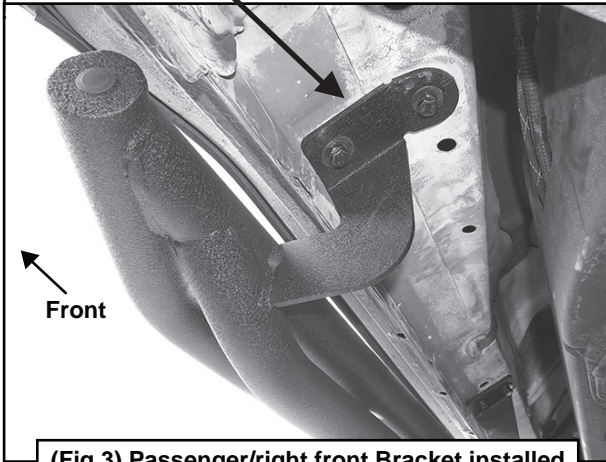

(Fig 3) Passenger/right front Bracket installed

8mm x 30mm Hex Bolts
8mm Lock Washers
8mm Flat Washers

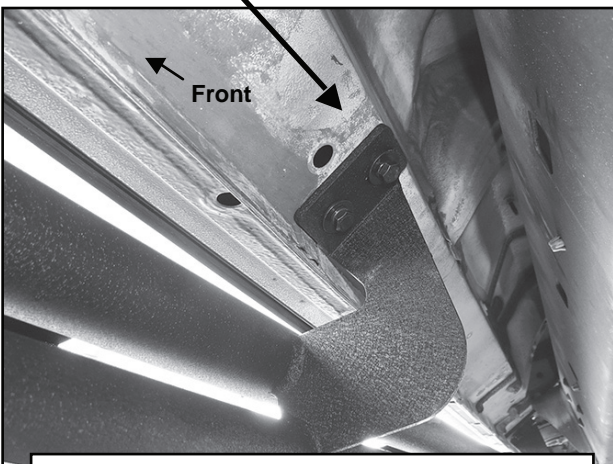


(Fig 4) Passenger/right Center Bracket installed

STEP 3

Adjust the position as necessary and tighten all hardware.

STEP 4

Repeat Steps 1 - 3 for driver Side Armor installation.

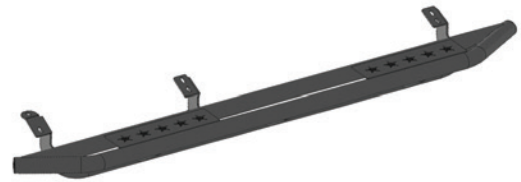

STEP 5

Do periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation