




MODEL SPECIFIC GUIDE

Hidden Hinge Version

Model 4146 Toyota Tacoma Std/Ext/Double Cab 6' Long Bed 2016-Current *(with multi-track system)*


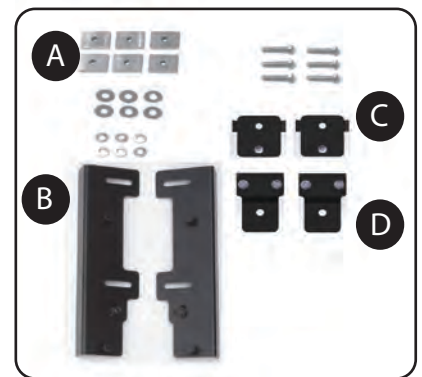


Tacoma Bracket Kit

- A:** Mounting Hardware
- B:** Front Brackets
- C:** Prop Brackets
- D:** Rear Brackets

RE: Step 2 on the Quick Start Guide

Remove the end caps from the Multi-Track system. Install the prop mounting brackets. Slightly screw the Multi-Track flat clamps on to the bolt and through the prop mounting bracket. Slide the flat clamp into the Multi-Track system. Position according to the measurement on the reverse side.


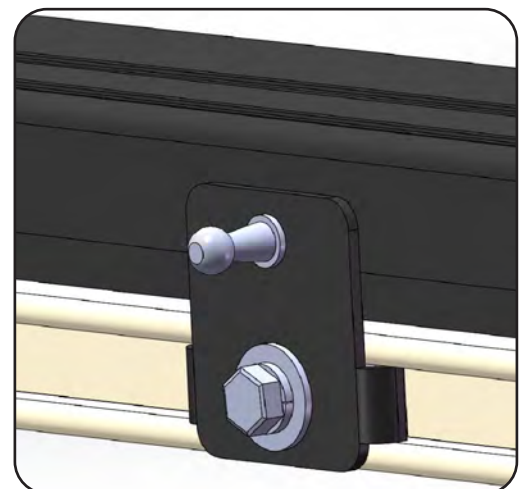
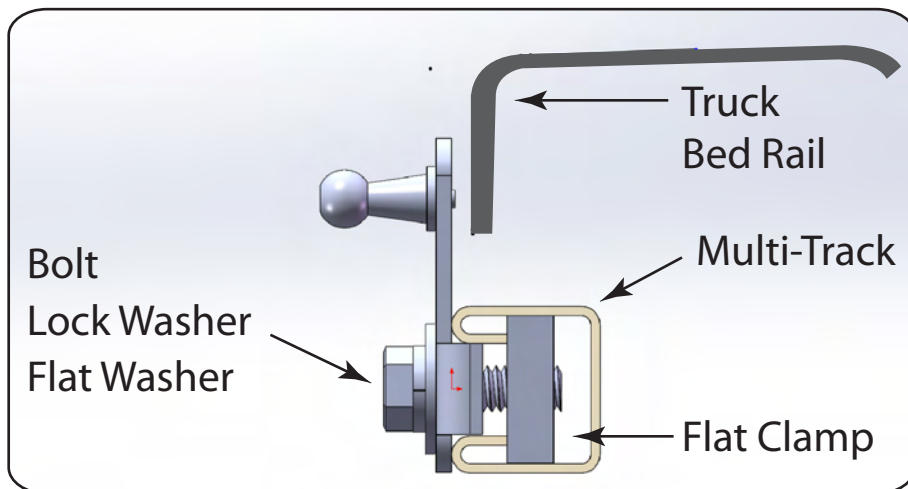


MODEL SPECIFIC GUIDE Hidden Hinge Version

Model 4136 Toyota Tacoma 6' Long Bed

Continued - RE: Step 2 on the Quick Start Guide

Position the prop mount bracket 49 5/8" from the front of the bulkhead to the center of the ball stud. Install the rear brackets using the bolt nearest the tailgate, close to the top rail of the truck.

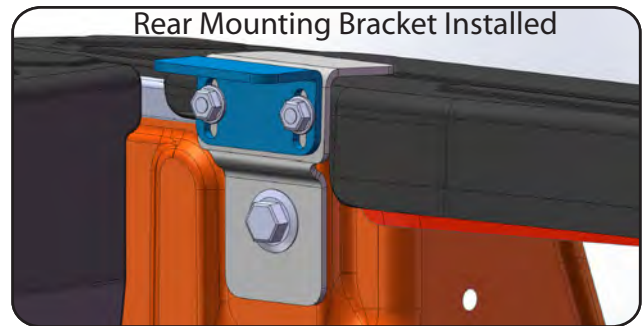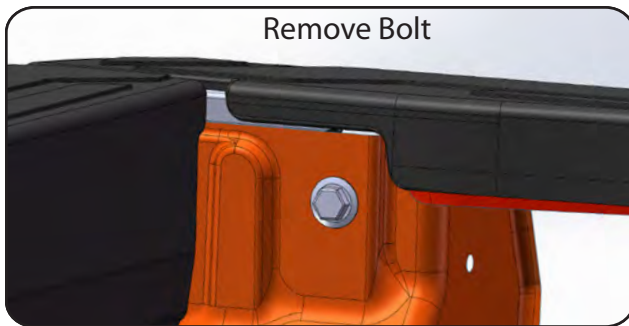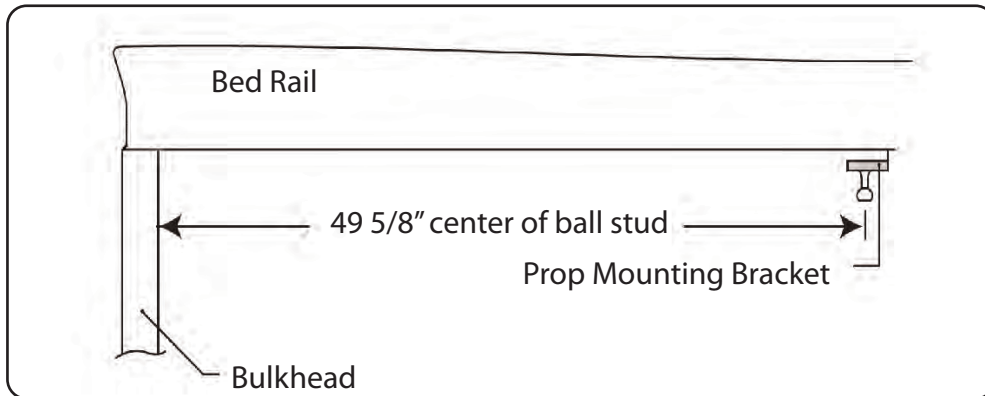

RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 16 1/8" from the back side of the bulkhead to the end of the bracket. Install using the Multi-Track flat clamp.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

