



# MODEL SPECIFIC GUIDE

Hidden Hinge Version

**Model 2176 Ford Super Duty Std/Ext/Crew  
6.5' Short Bed 2017**




Note: This Cover will work with or without a tailgate step.



## MODEL SPECIFIC GUIDE Hidden Hinge Version Model 2176 Ford Super Duty 6.5' Short Bed 2017

### RE: Step 2 on the Quick Start Guide

Measurement for the rear mounting bracket is 54 1/4" from the back side of the bulkhead to the front edge of the bracket.

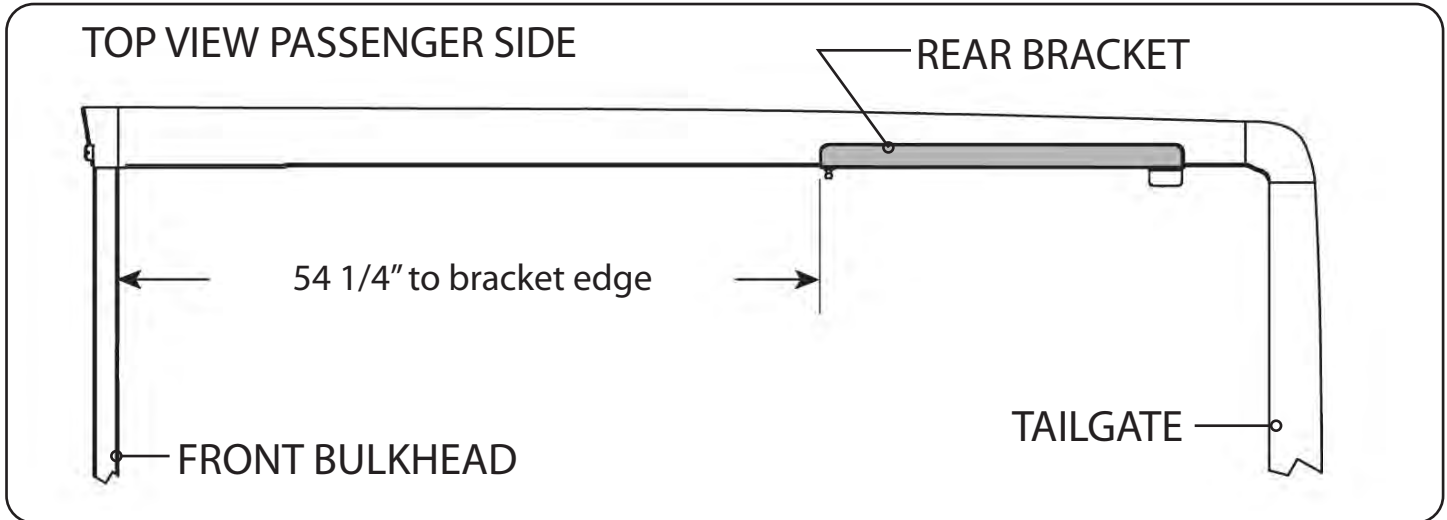

### RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 16 1/4" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

