



INSTALLATION INSTRUCTIONS – WIPER LINKAGE

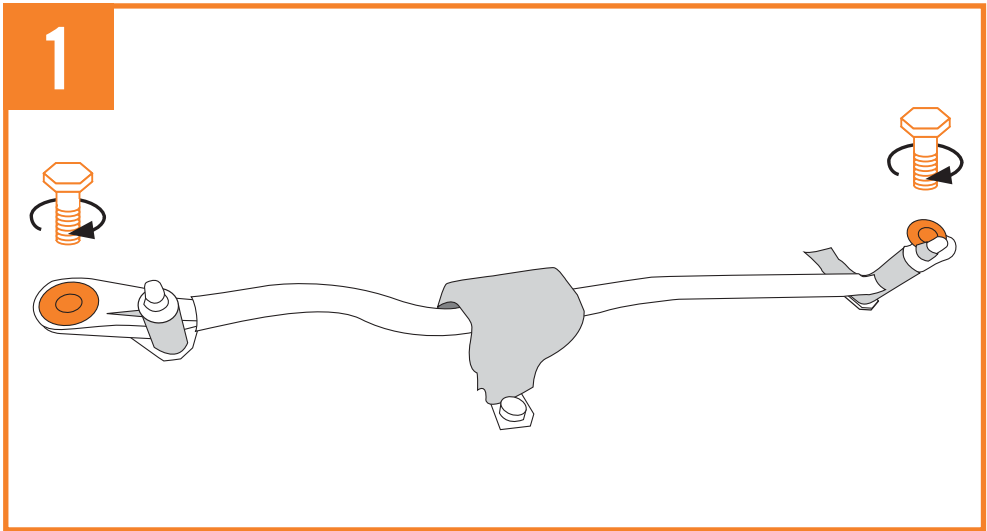

First please tighten the screw with a force of 10 Nm at the fixing points top left and right.

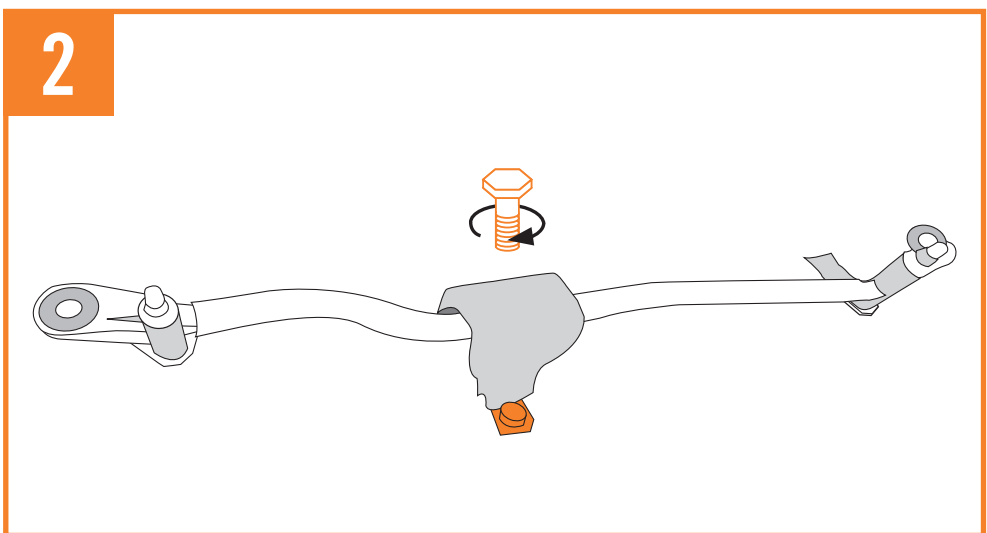

Then please tighten the screw at the lower holder with 10 Nm as well.