




INSTALLATION INSTRUCTION

ATTENTION



1. Please read this installation instruction before installing this part.
When install it, please pay attention to protecting your vehicles.
2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

PARTS LIST




No	Name /Qty	Photo	No	Name/Qty	Photo
1	Side bend 2 lateral symmetry		11	Flat washer 16 M10	
2	Top bend 1		12	Hex Bolt 14 M10x25	
3	Middle tube 1		13	Lock washer 16 M10	
4	Sand baffle plate 1		14	Nut 4 M10	
5	Sub plate 2 lateral symmetry		15	1 Hex Bolt 2 M10x40 (70x20x4.5)	
6	Corner code 2 lateral symmetry		16	Cylinder 2 $\phi 20 \times \phi 11 \times 17$	
7	Reinforcement 2 lateral symmetry		17	Flat washer 4 M12	
8	Flat washer 2 M8		18	Hex Bolt 4 M12x30	
9	Hex Bolt 2 M8x40		19	Lock washer 4 M12	
10	Lock washer 2 M8		20	Nut 4 M12	

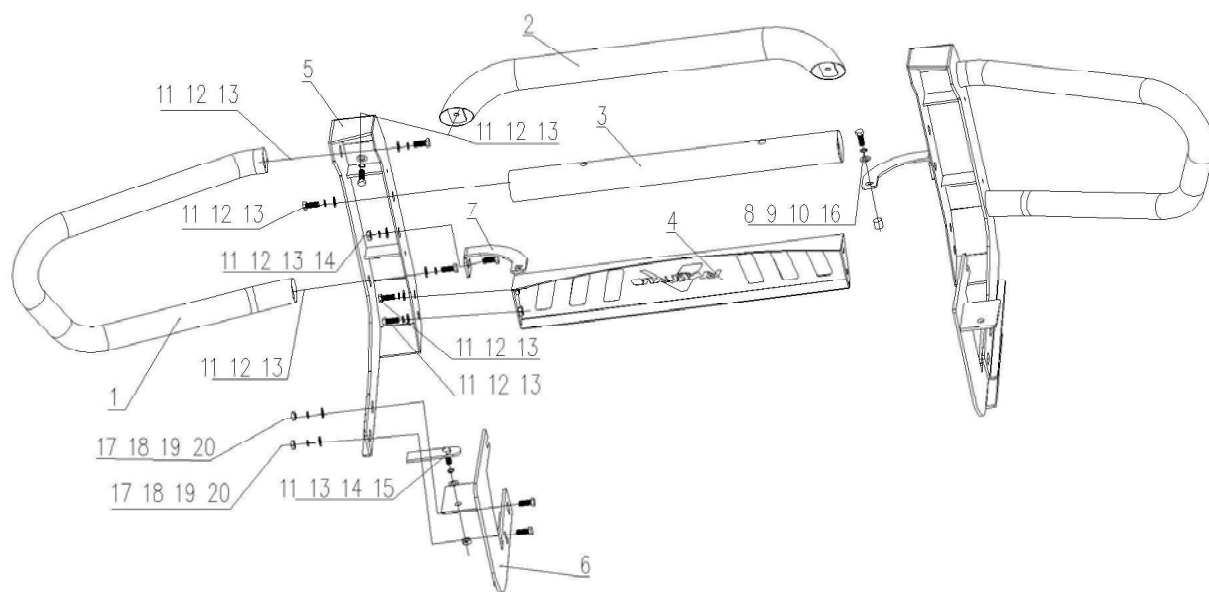

The original screw

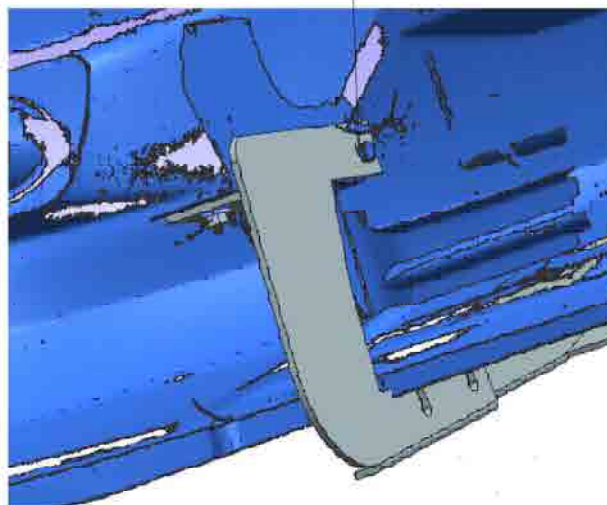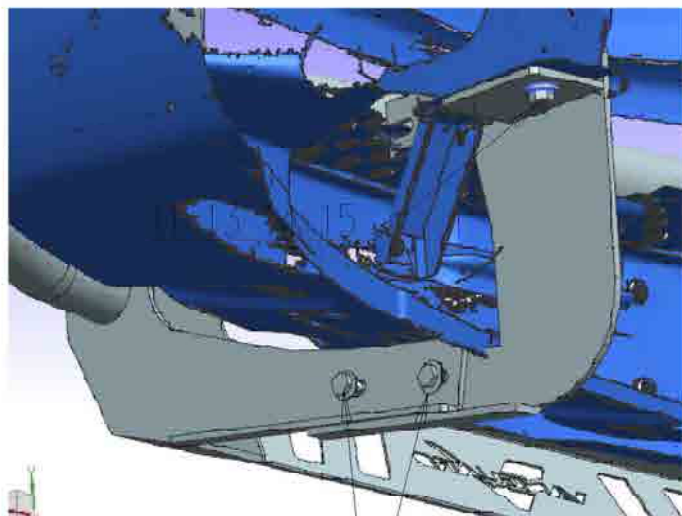

17 18 19 20

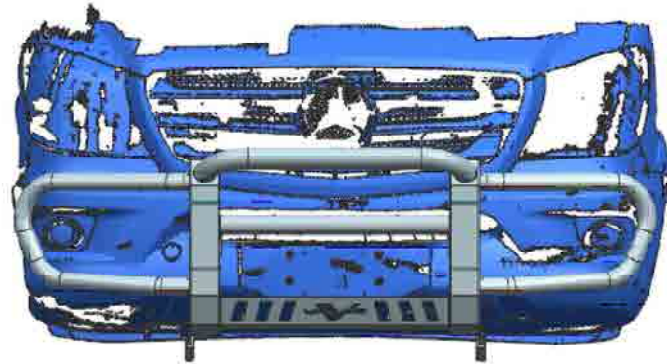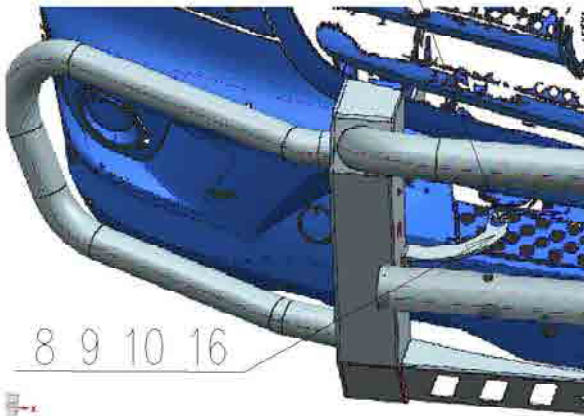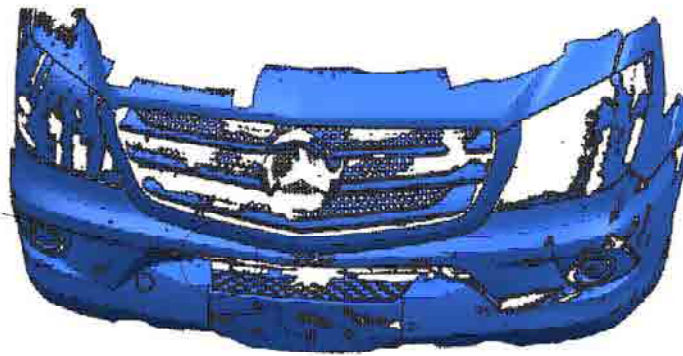

STEP 1: Check the parts in the box carefully if match above parts list .

STEP 2: Pls prepare the tools for installation, follow as: 12-14wrench, 17-19wrench.


STEP 3: Put the mount bracket c into the girder of the car, and tighten it with H.

STEP 4: Put the mount bracket a on the head of the car and then tighten it with E.

STEP 6: Install the grille guard A on the mount c and tighten it with I

STEP 7: Test and make sure that the grille guard is steadily fixed.

STEP 8: Installation is finished.

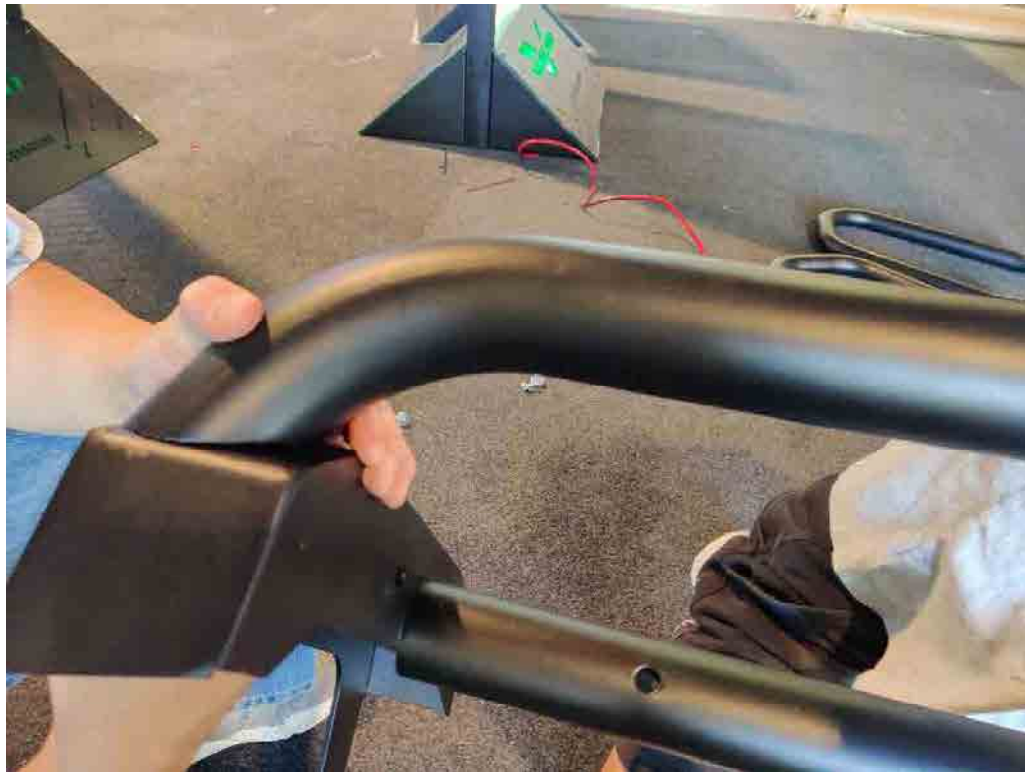











[Find more Vanguard Off-Road products on our website.](#)

[Learn more about grille guards and bull bars we have.](#)