
PARTS LIST:

Description	Description
Rear Bumper Guard	12mm Lock Washers
Driver/Left Frame Bracket	12mm x 24mm OD x 2.5mm Flat Washers
Passenger/Right Frame Bracket	12-1.75mm Hex Nuts
Driver/Left Bumper Guard Brackets	8-1.25mm x 25mm Hex Bolts
Passenger/Right Bumper Guard Brackets	8mm x 24mm OD x 2mm Flat Washers
12-1.25mm x 35mm Special Fine Thread	
Hex Bolts	8mm Lock Washers
12-1.75mm x 30mm Hex Bolts	

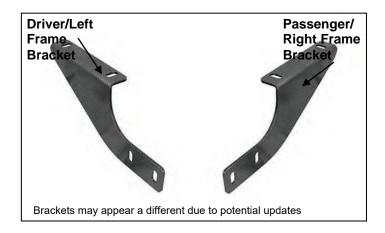




PROCEDURE:

- REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS
 CAREFULLY BEFORE STARTING INSTALLATION. IMPORTANT! The passenger side mounting
 location is very close to the muffler. Allow muffler to completely cool before starting the installation. Tow
 hitch, if equipped, must be removed for installation and cannot be reinstalled.
- 2. Remove the factory tie down bracket located on the bottom of the driver side frame channel, (Figure 1). NOTE: Tie down bracket will not be reinstalled.
- 3. Locate the factory threaded holes in the bottom of the frame rail channel. Position the Frame Bracket up to the frame channel and line it up with the two outside threaded holes, (Figure 2).
- **4.** Attach the driver side Frame Bracket to the bottom of the frame channel frame with the included (2) 12-1.25mm x 35mm **Special Fine Thread** Hex Bolts, (2) 12mm Lock Washers and (2) 12mm Flat Washers, **(Figure 3)**. Snug but do not tighten hardware at this time.
- **5.** Carefully position the Rear Bumper Guard onto the Mounting Brackets. Attach the Rear Bumper Guard to the Brackets with the included (4) 8mm x 25mm Hex Bolts, (4) 8mm Lock Washers and (4) 8mm Flat Washers. **(Figure 5)**.
- 6. Adjust the Rear Bumper Guard properly and tighten all hardware.
- **7.** Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Rear Bumper Guard. Gloss black finishes: Mild soap may be used to clean the Bumper Guard.

Driver side installation pictured

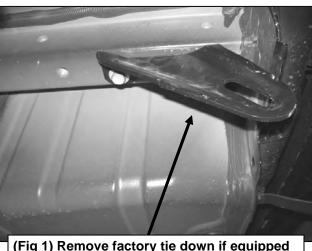


(Fig 1) Remove factory tie down if equipped

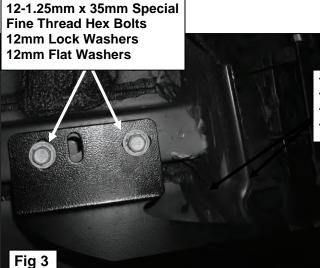

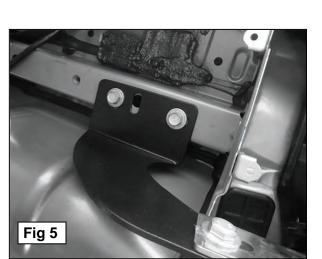

Driver Side Frame Bracket Mounting Location

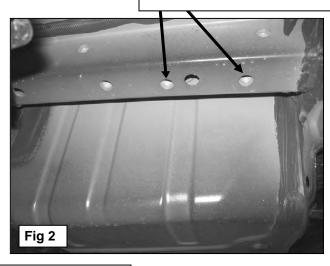

12-1.75mm x 30mm Hex Bolts 12mm Lock Washers 12mm Flat Washers 12mm Hex Nuts

Passenger Side Mounting Locationremove hook on exhaust

