INSTALLATION INSTRUCTIONS

14-19 Acura MDX/16-19 Honda Pilot/17-19 Honda Ridgeline/19 Passport OEM STYLE RUNNING BOARD

Qty	Hardware	Qty	Hardware
2	Front Mounting Brackets	12	Long Screw
2	Middle Mounting Brackets	12	Short Screw
2	Rear Mounting Brackets		




Vanguard Off Road 1 | Page

STEP1: Verify all parts are present. Read instructions carefully before starting installation.



STEP2: Starting from the Passenger Side, install the Front (R1), Middle (R2) and Rear (R3) Mounting Brackets on the chassis using two Long Screws on each bracket as shown on Fig2.

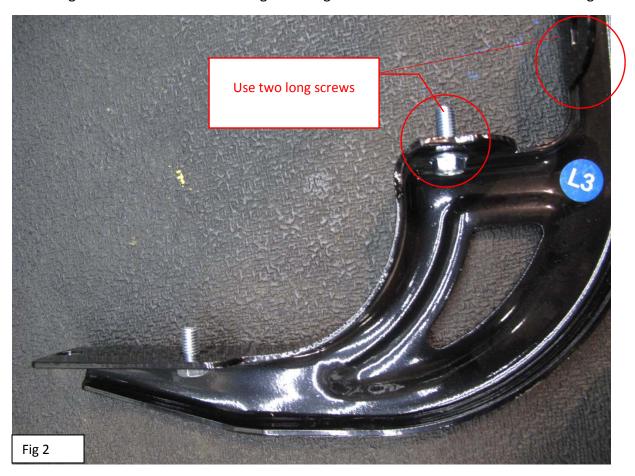

Vanguard Off Road 2 | Page

STEP3: Mount the Passenger side running broad on the brackets using two Short Screws on each bracket as shown on Fig3. Level and adjust the board, tighten the hardware in the end.



Vanguard Off Road 3 | Page





STEP4: Repeat step2-3 for the Driver Side Installation.

Vanguard Off Road 4 | Page