





FITTING INSTRUCTION

Deployable Side Steps

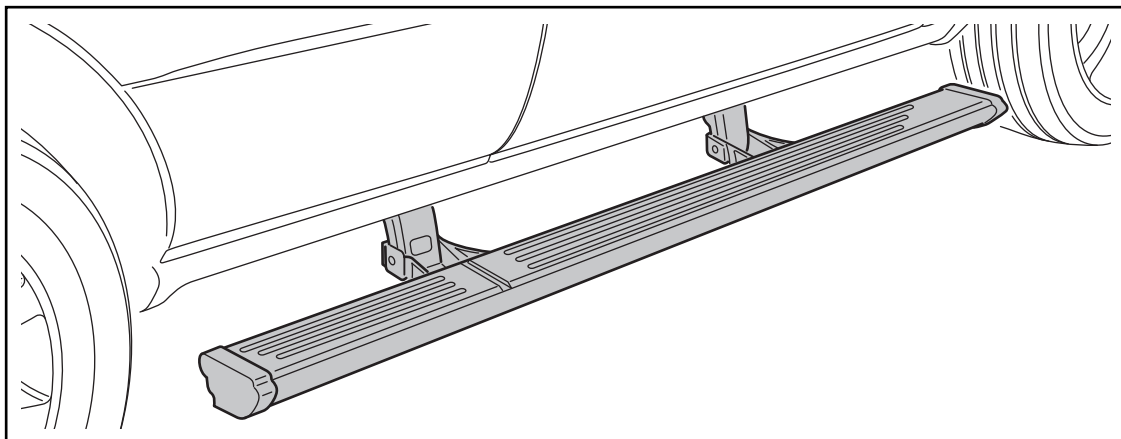


➡ MY10

VPLMV0022

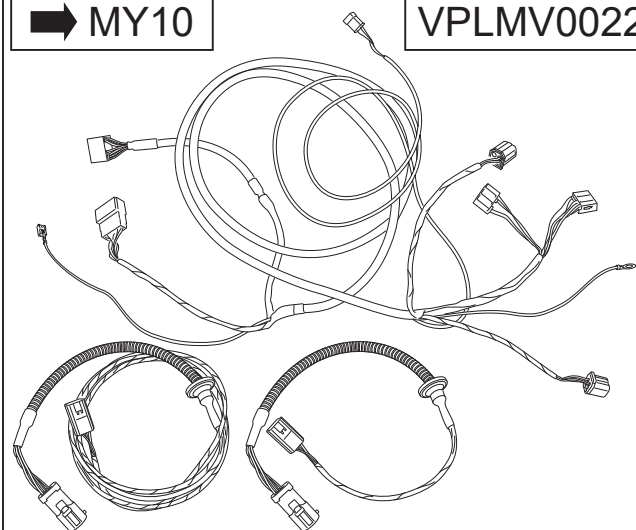


MY10 ➡

VPLMV0023

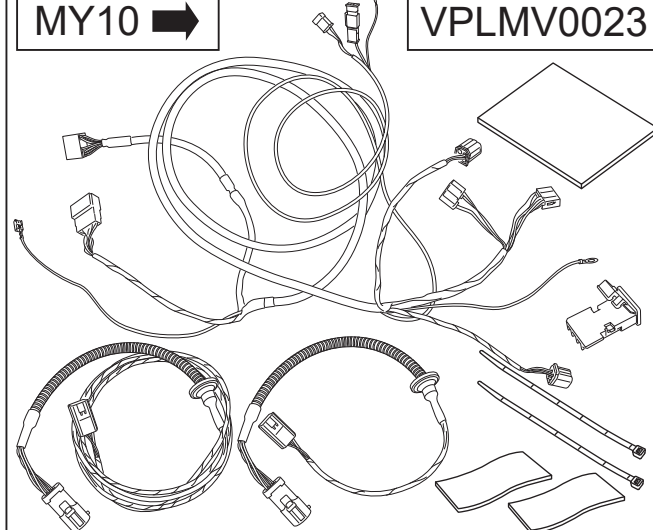



➡ MY10








LR04028








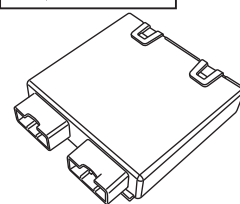


MY10 ➡


VPLMP0026

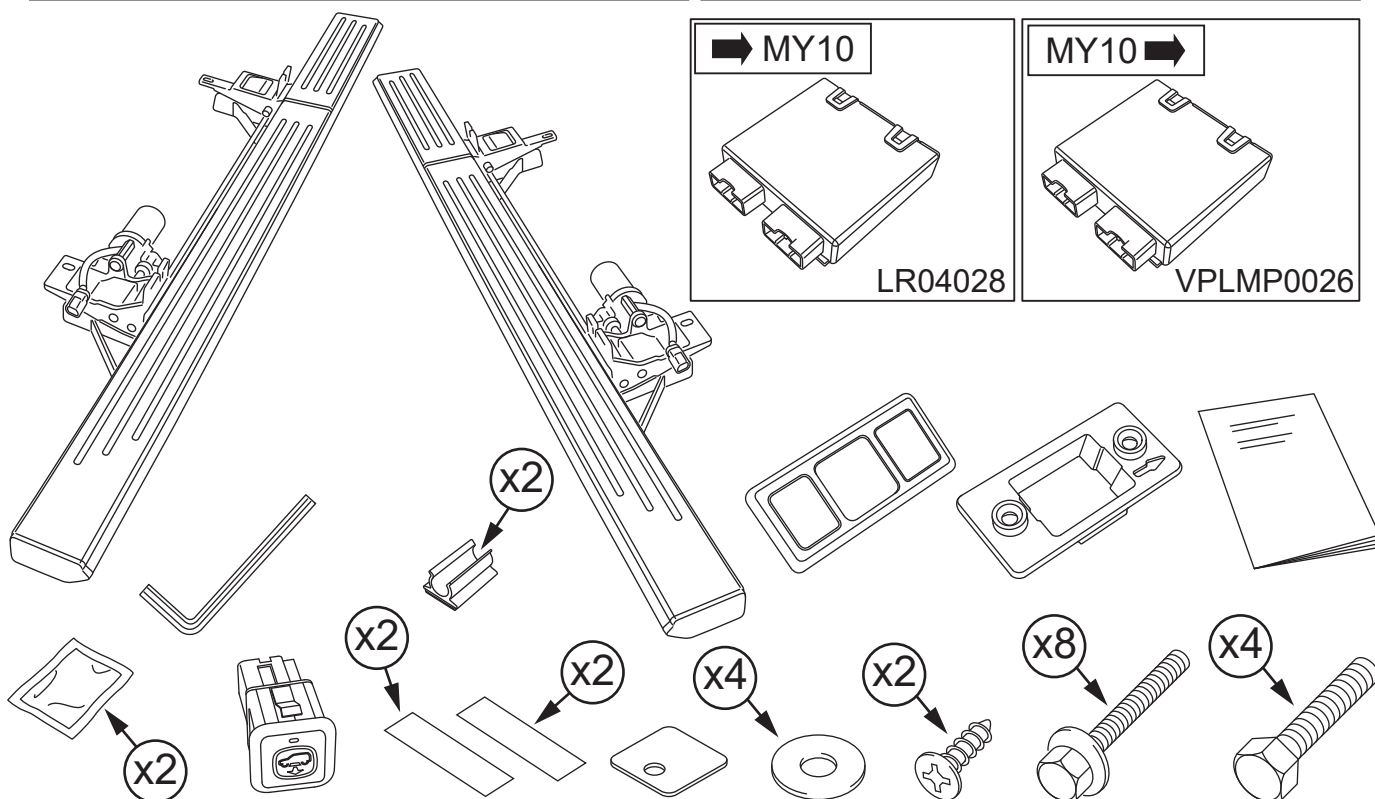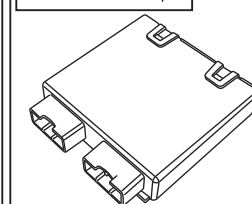

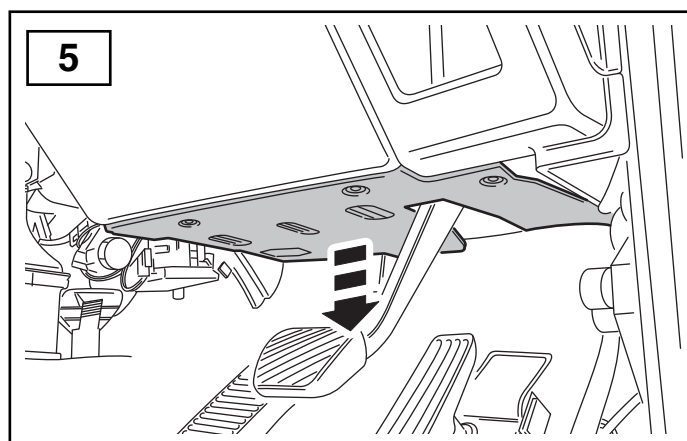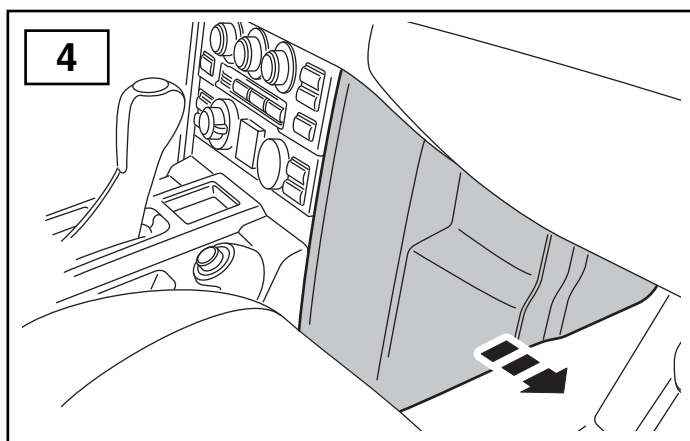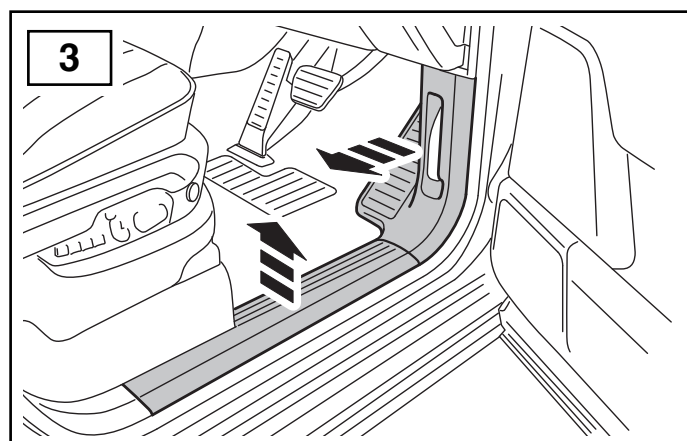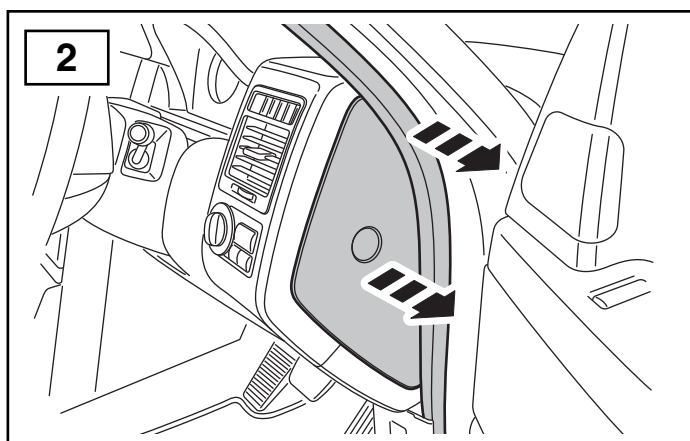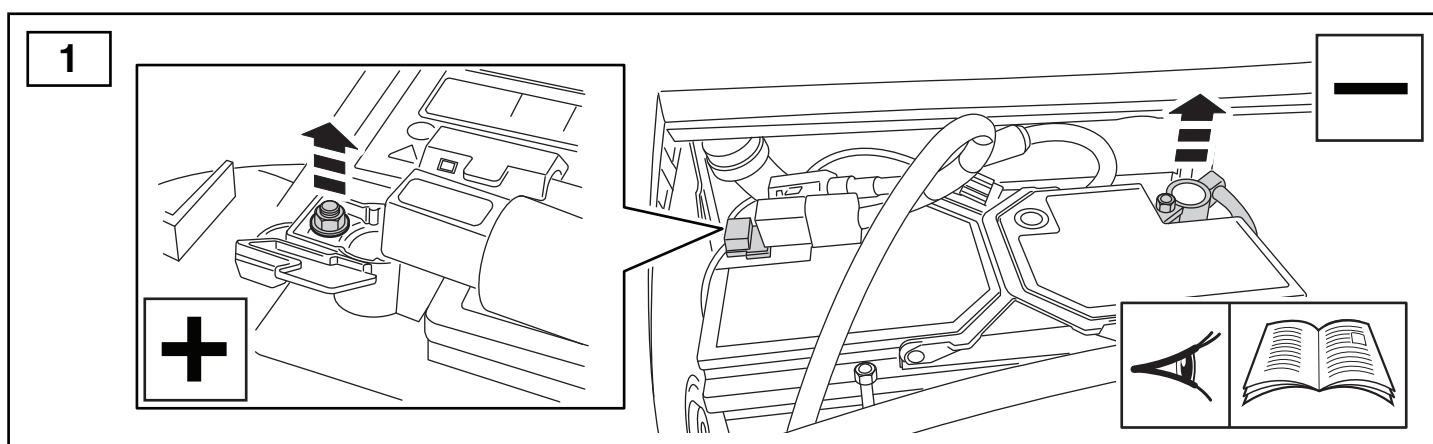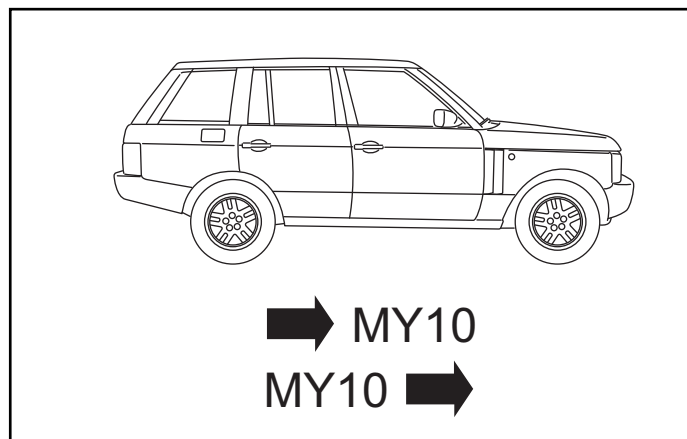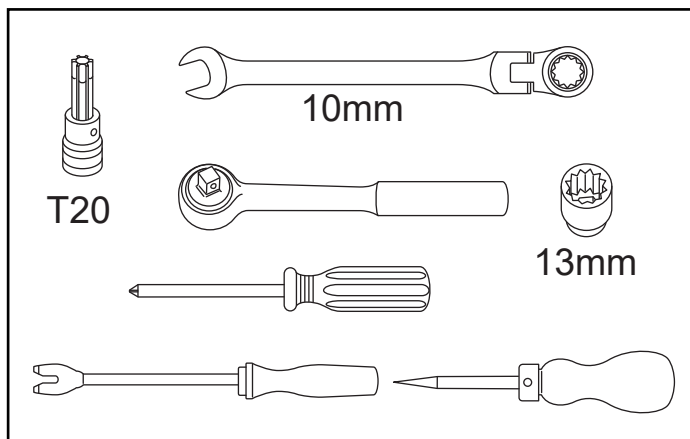


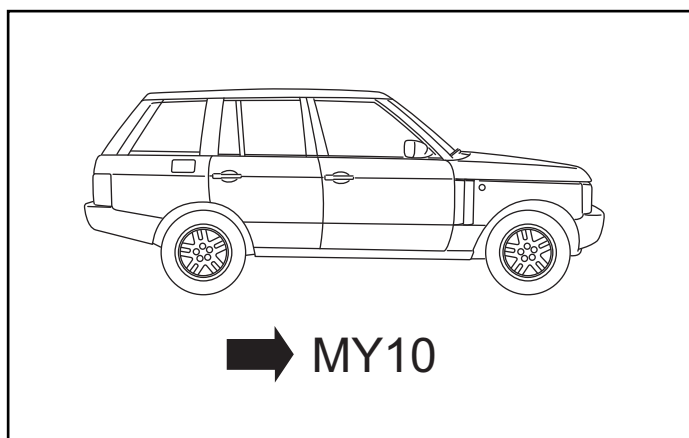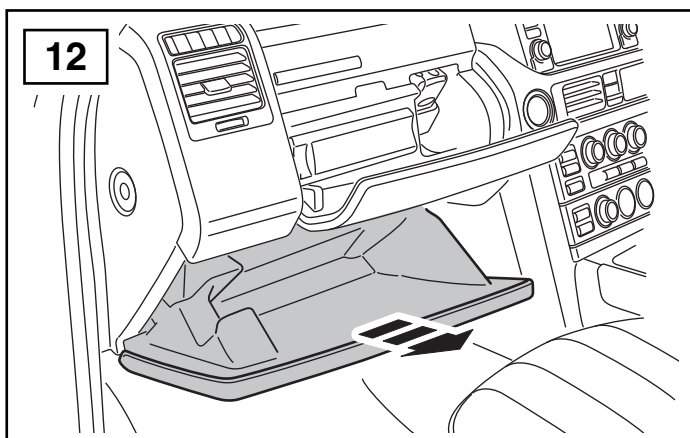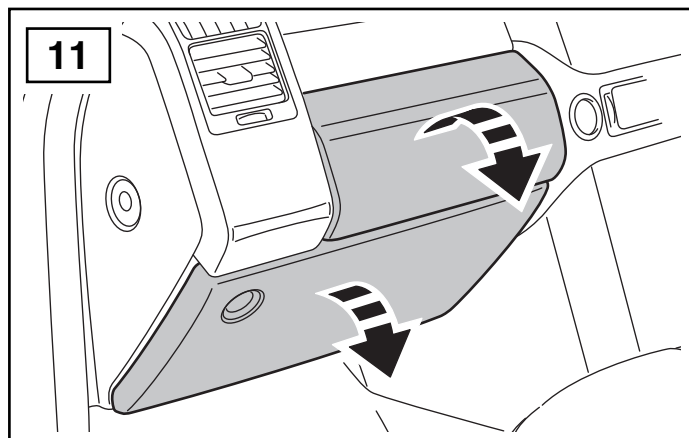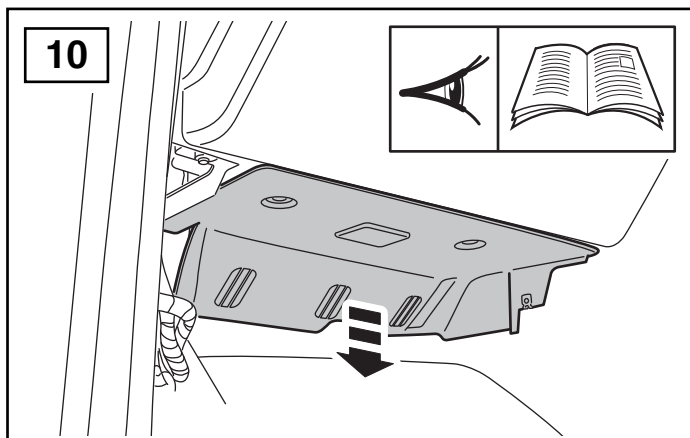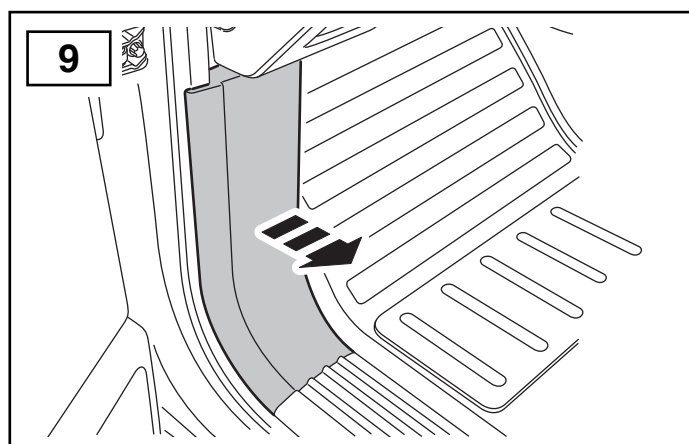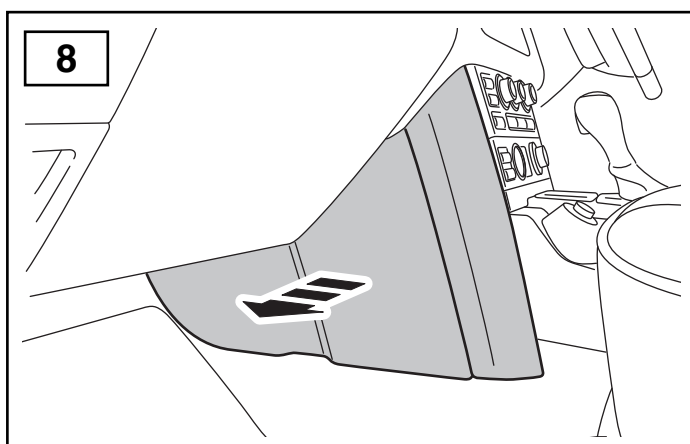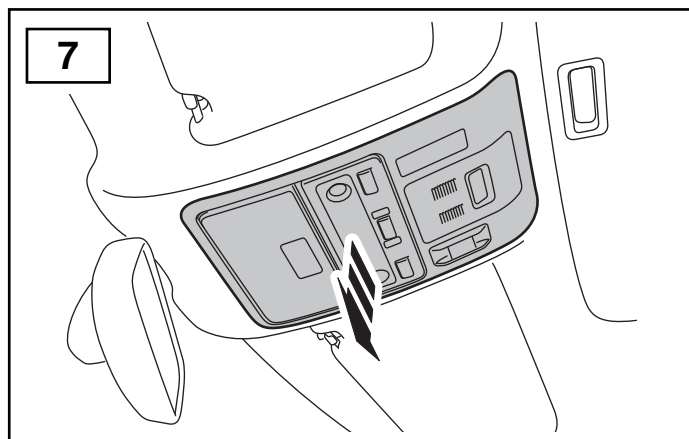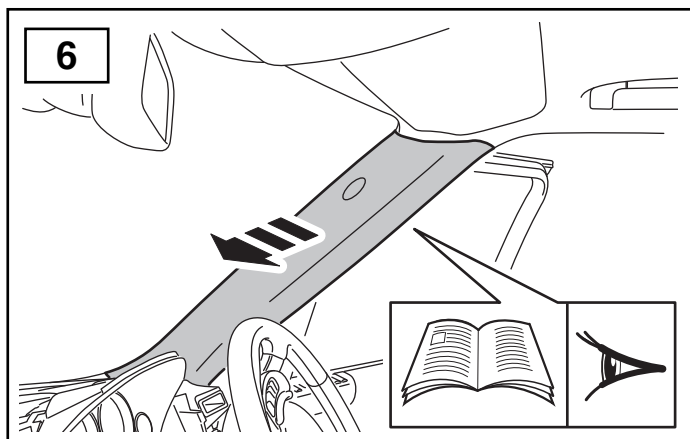


13

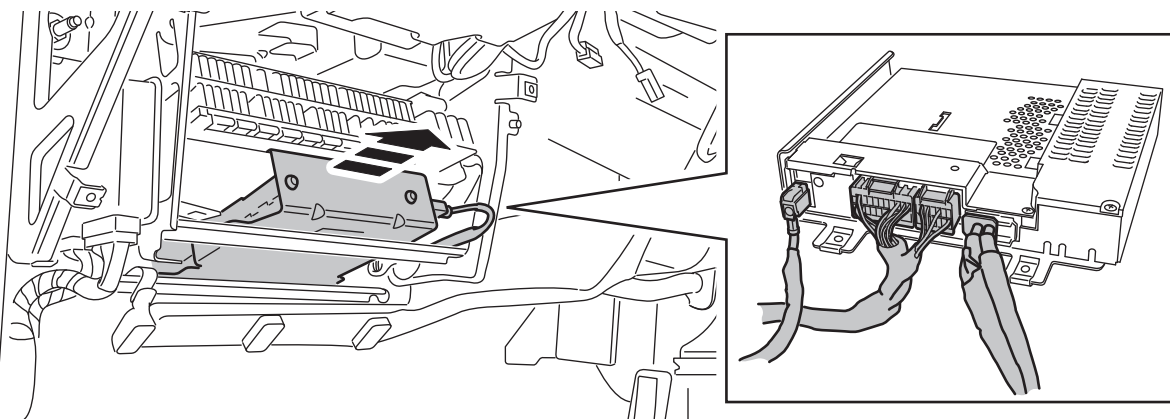



14

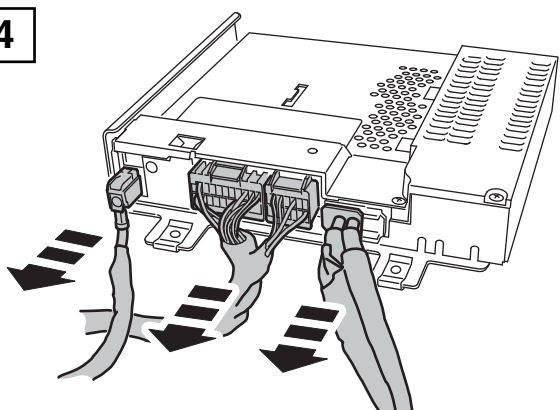



15







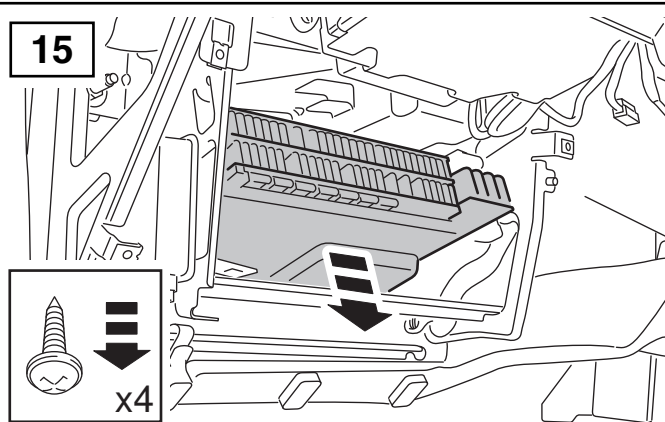


16

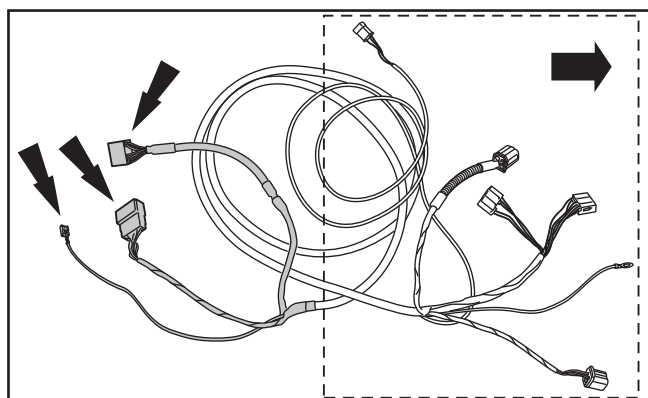
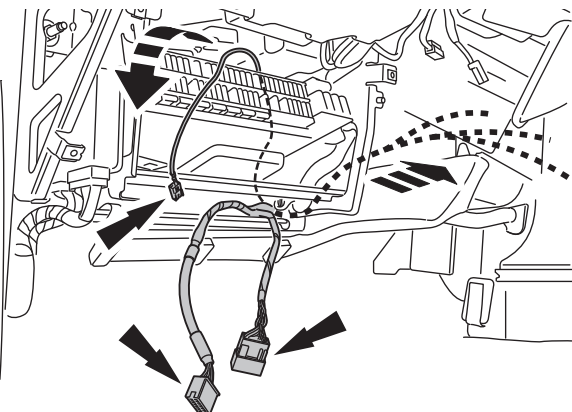


17

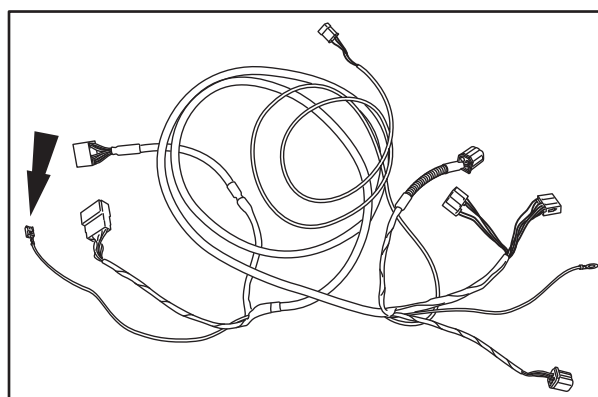
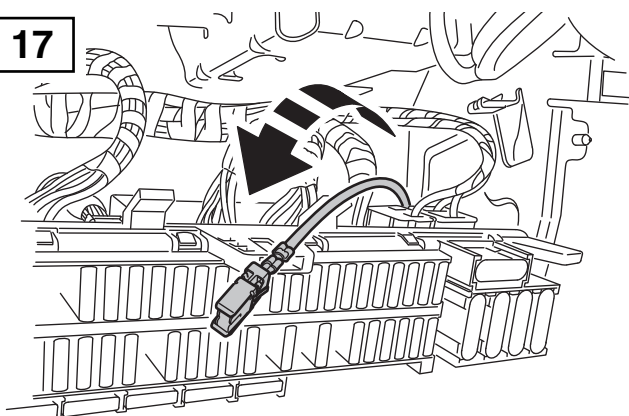


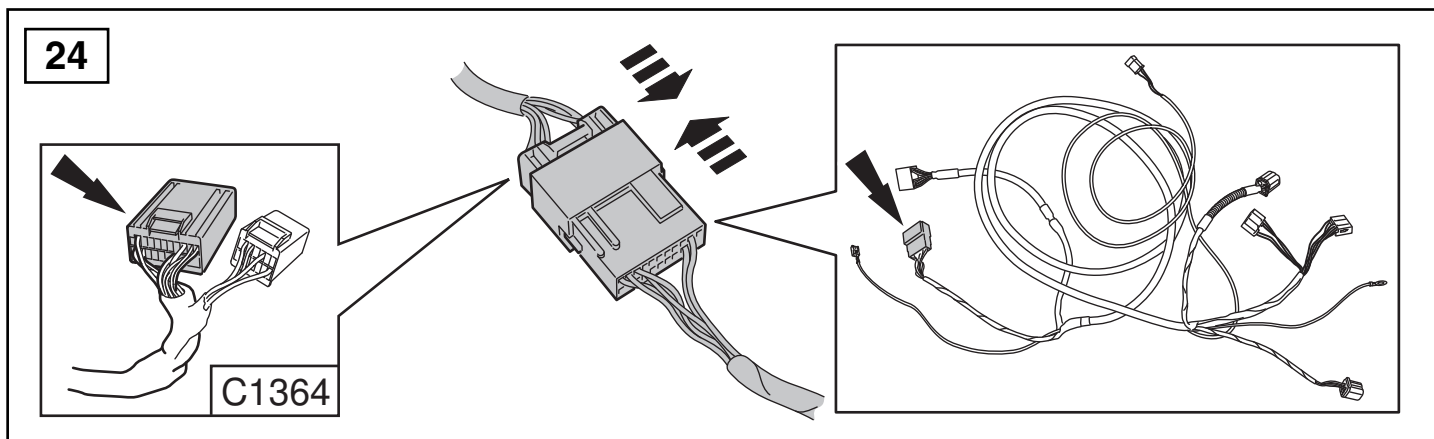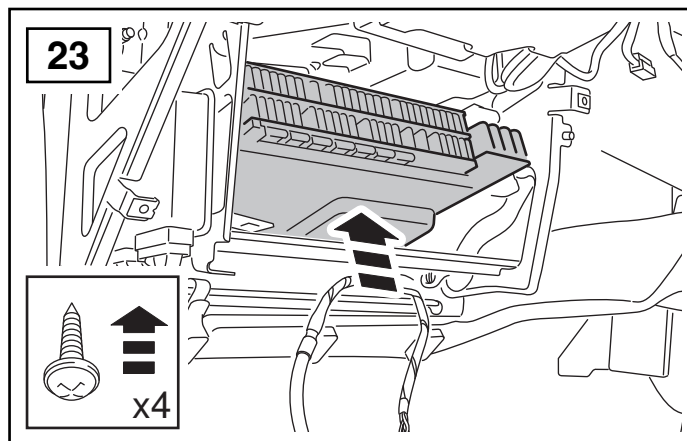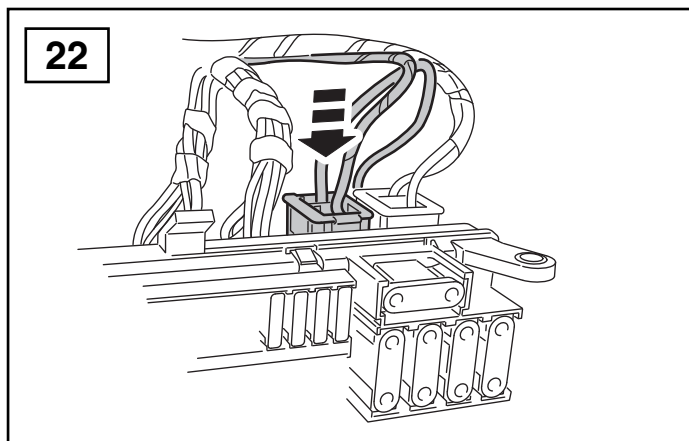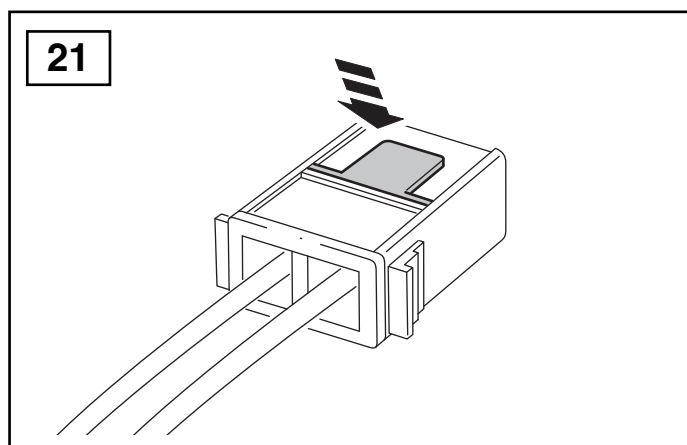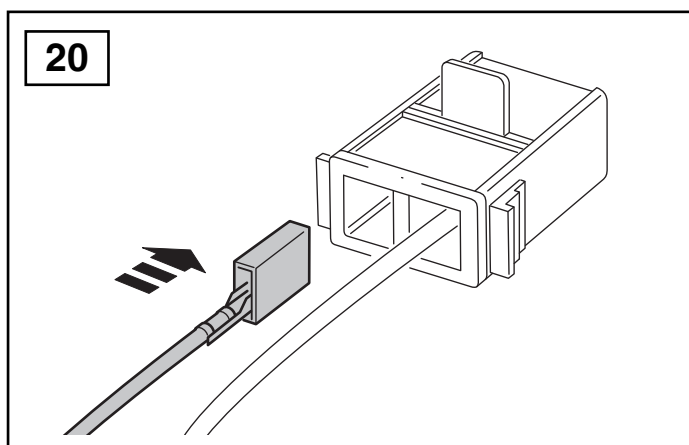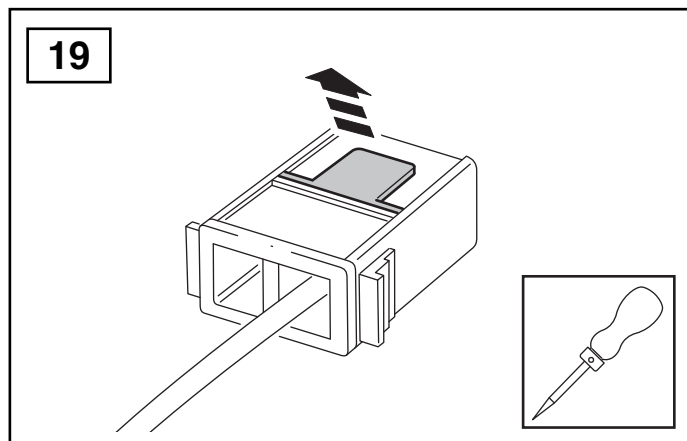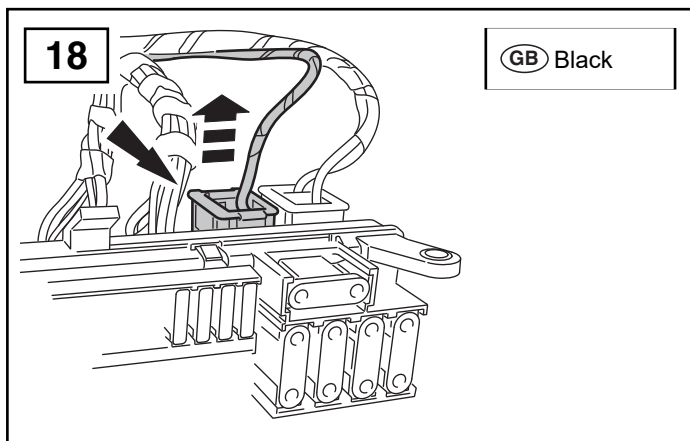



25

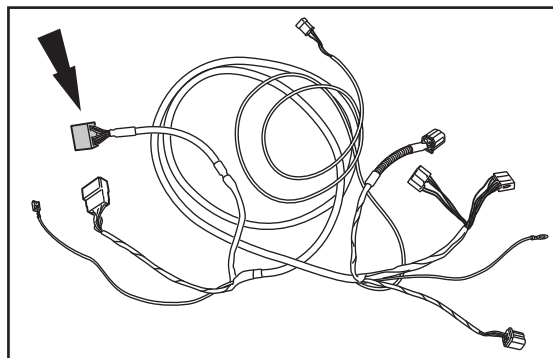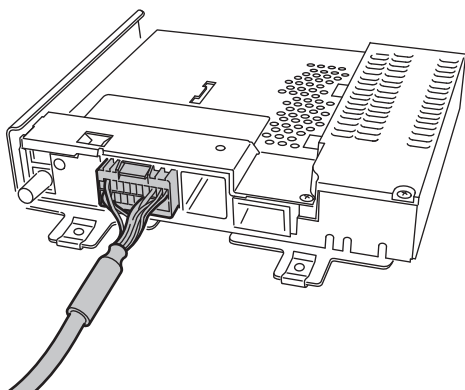



26

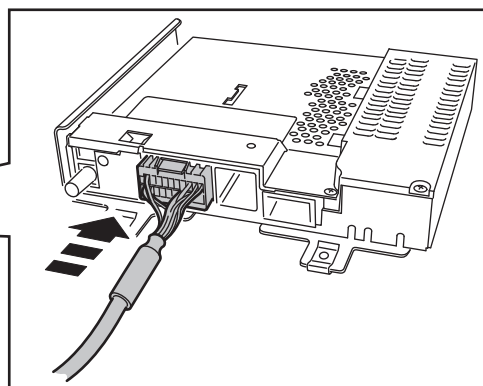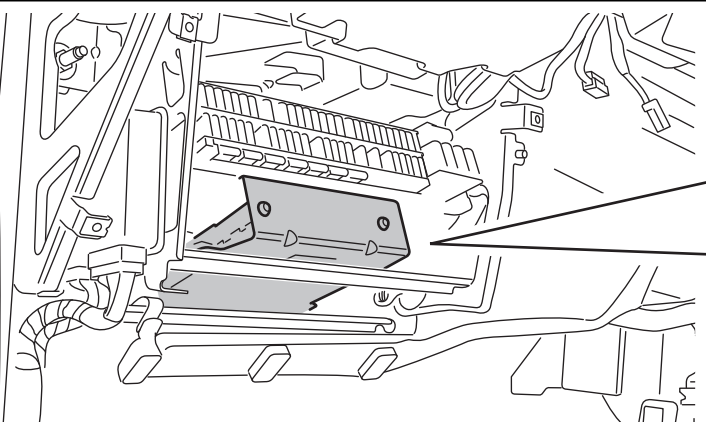







27

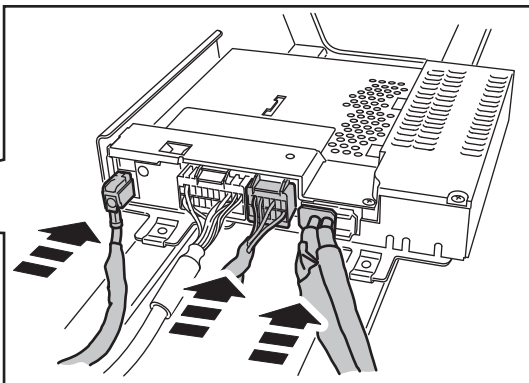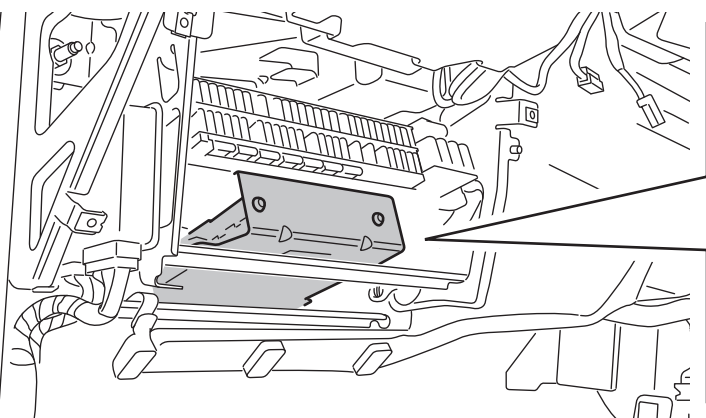




28

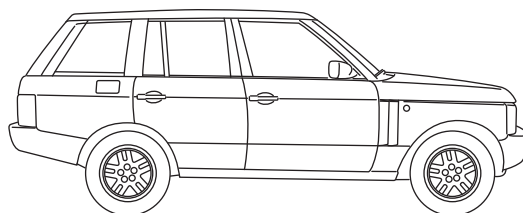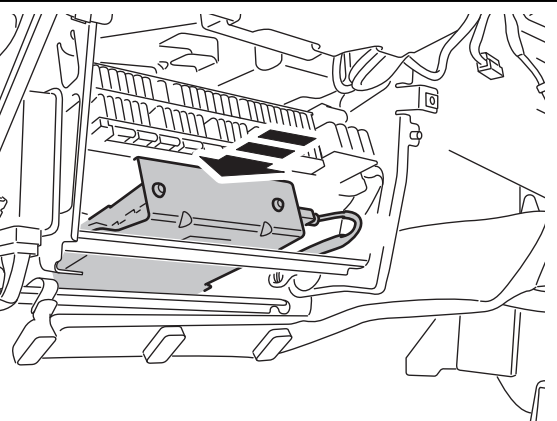


MY10 →

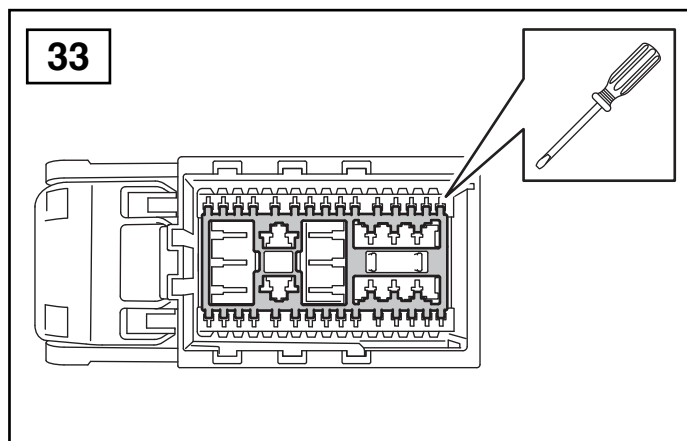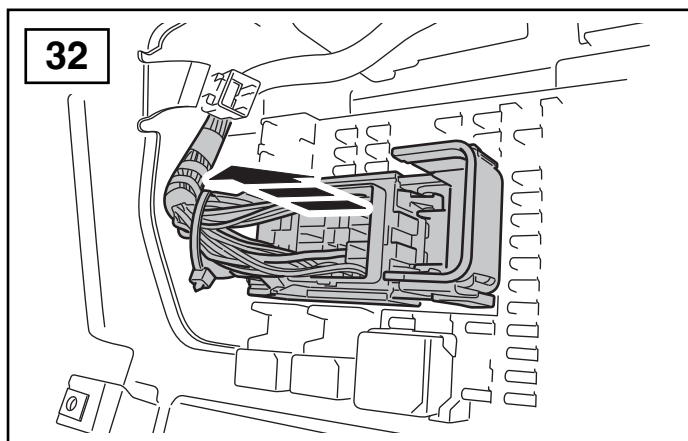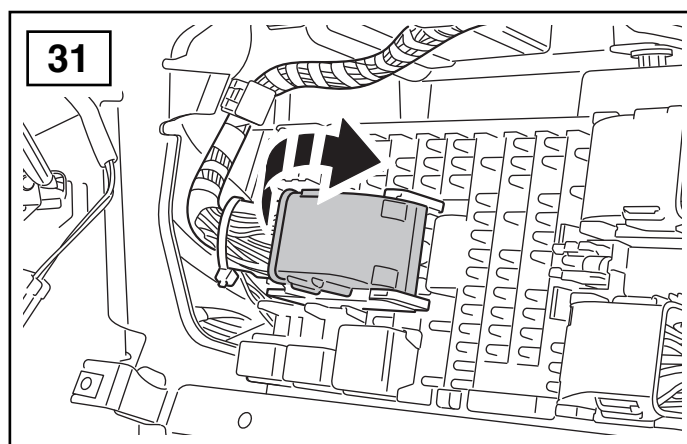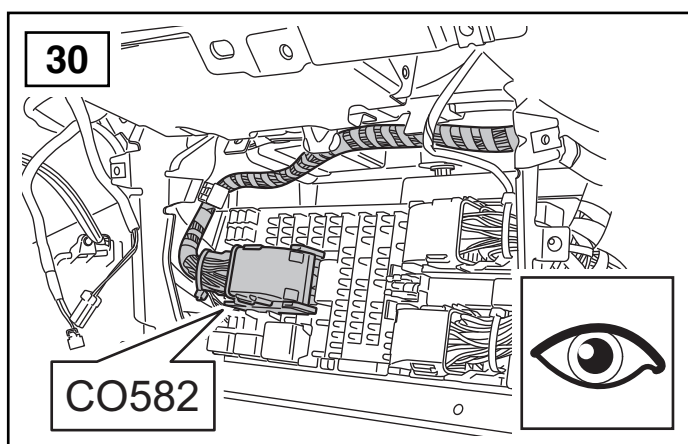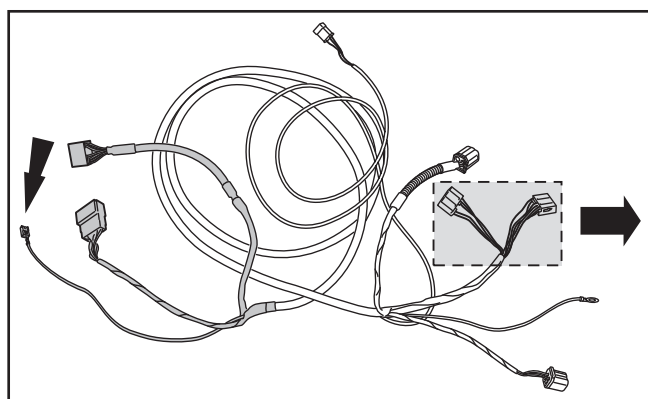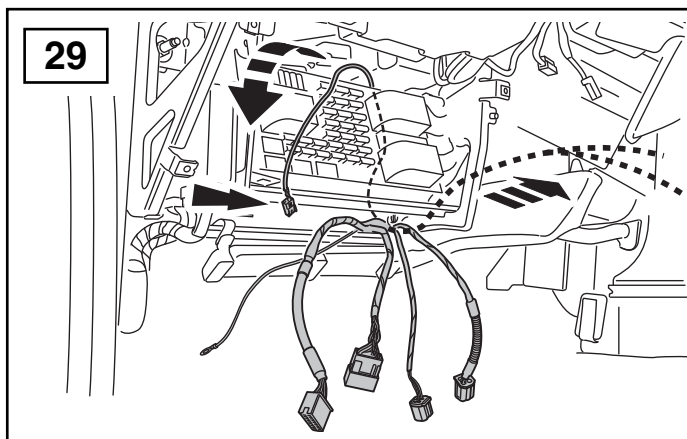


34

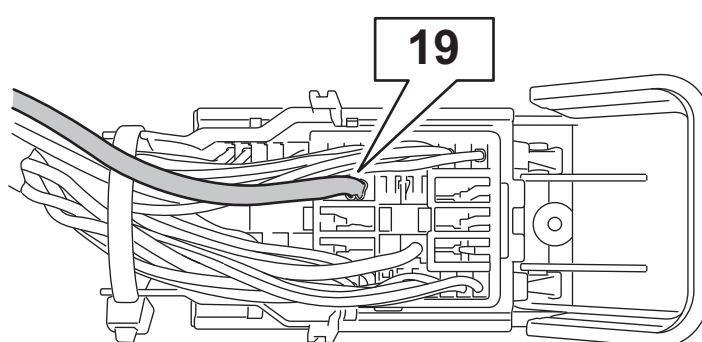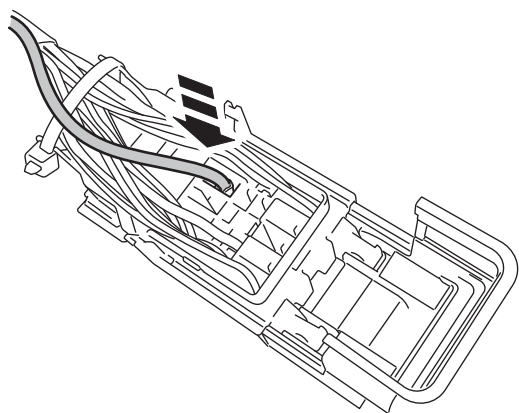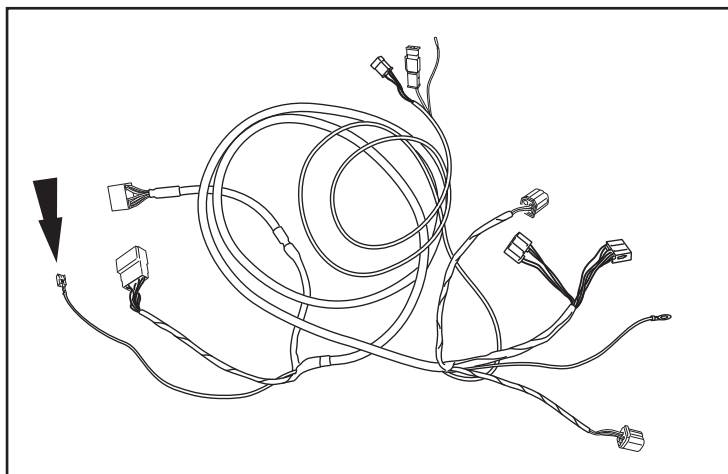


35

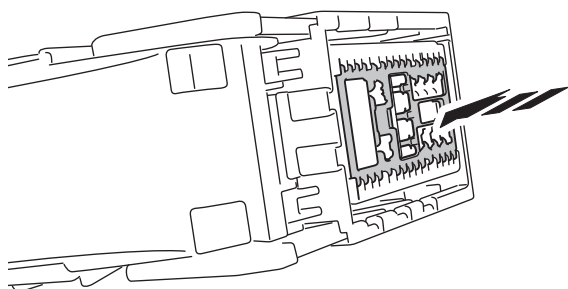


36




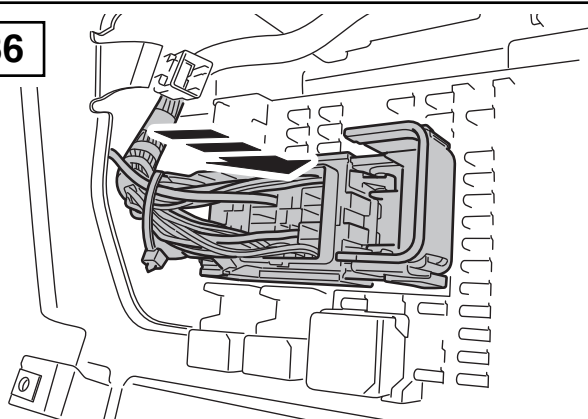








37







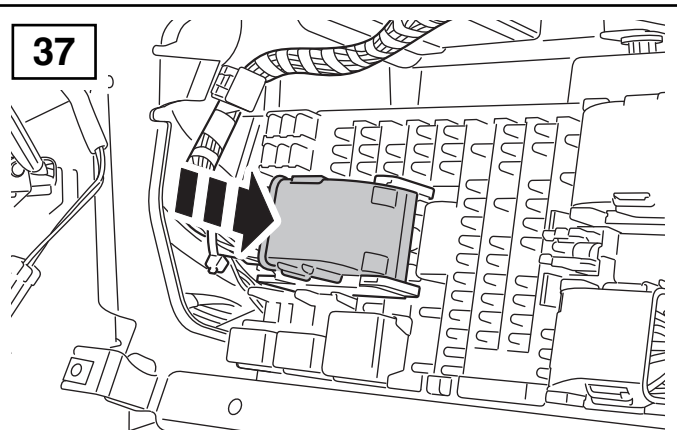







38

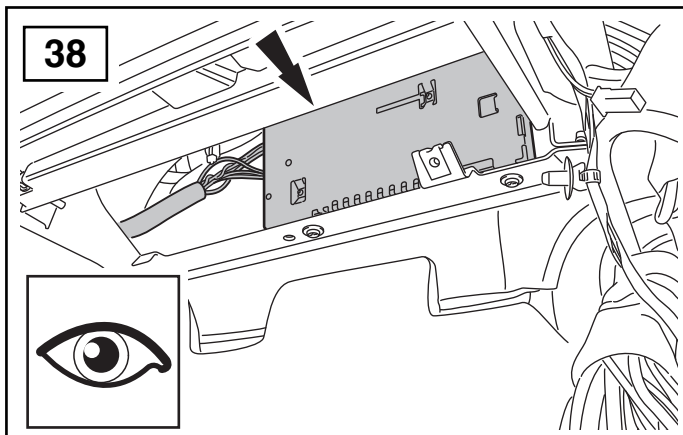

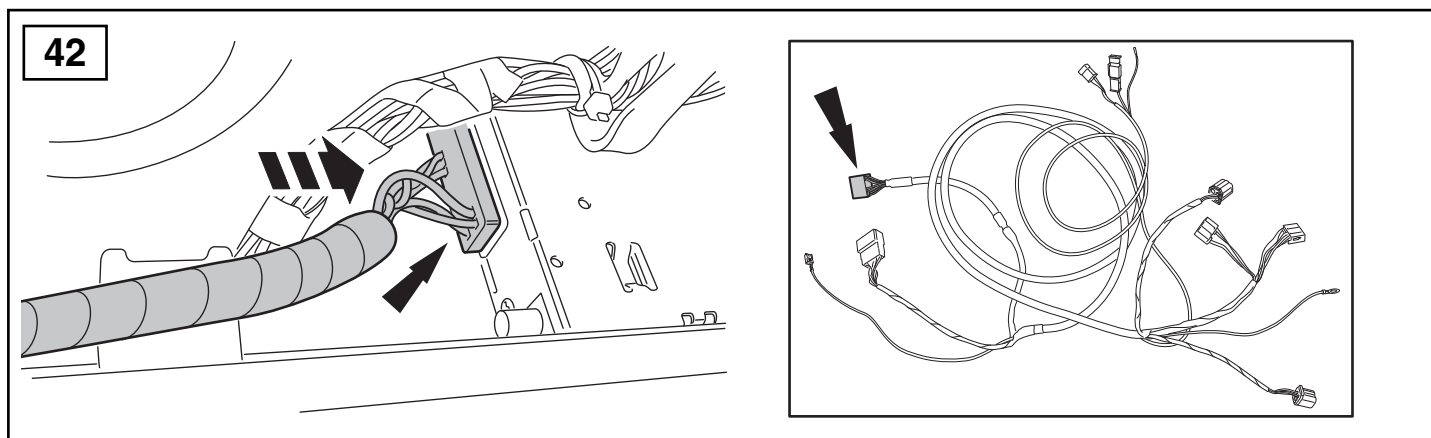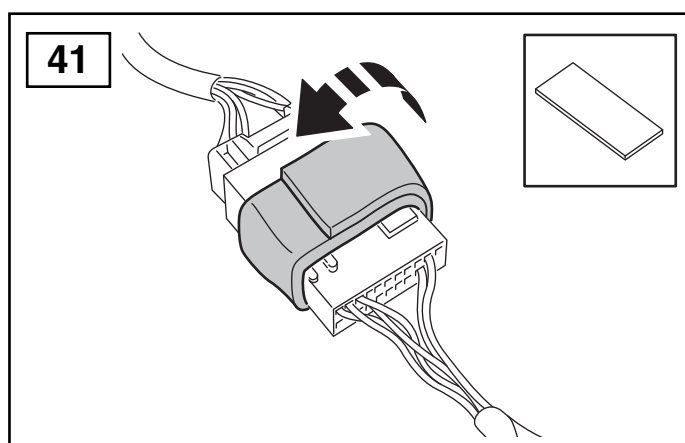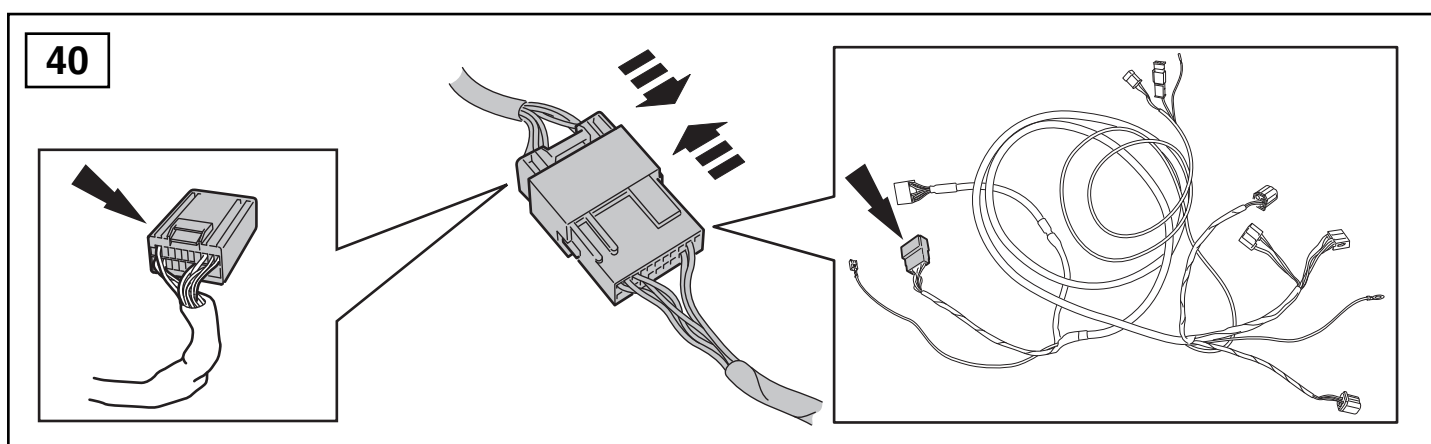
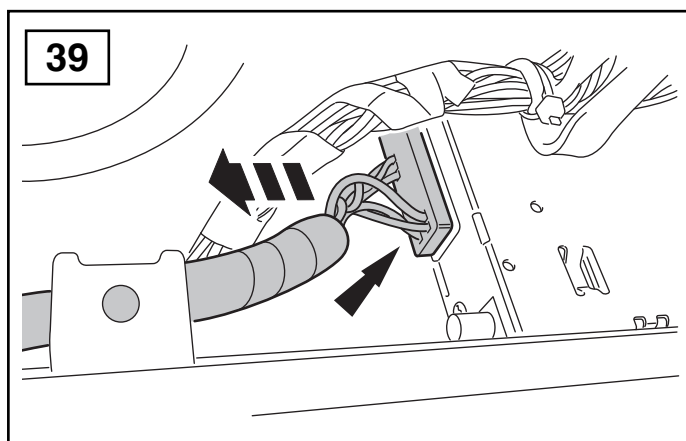


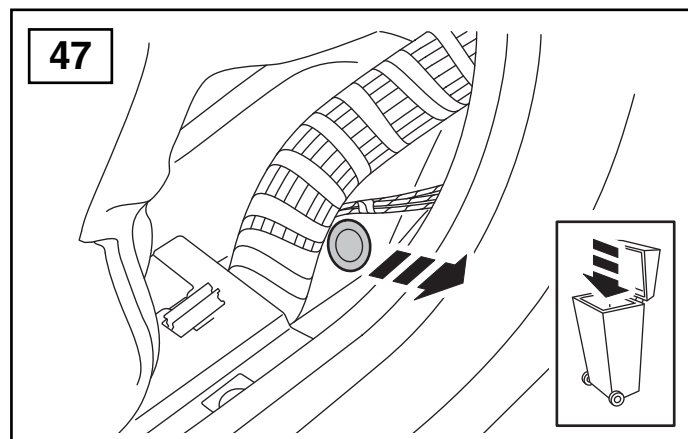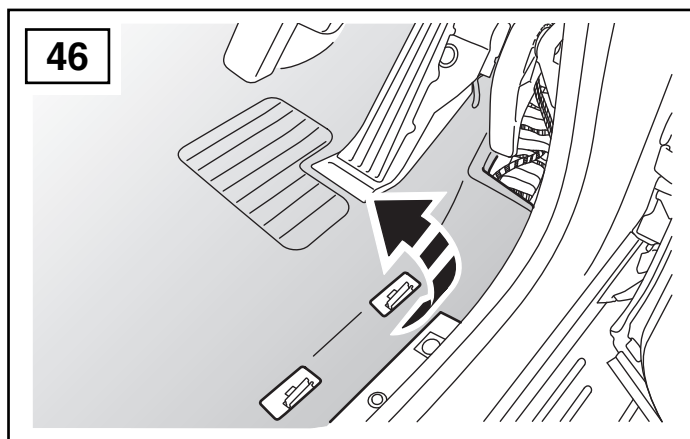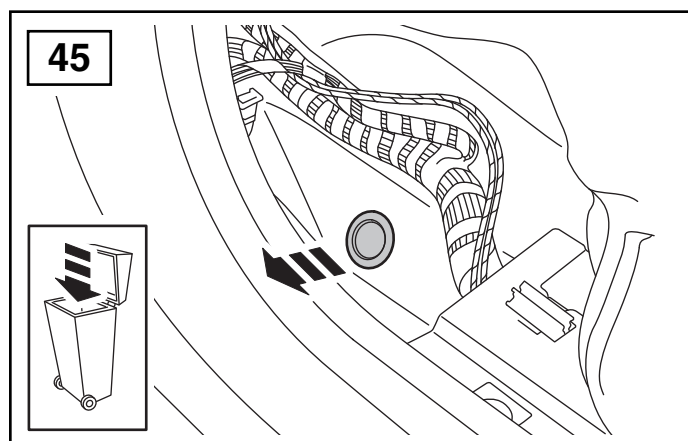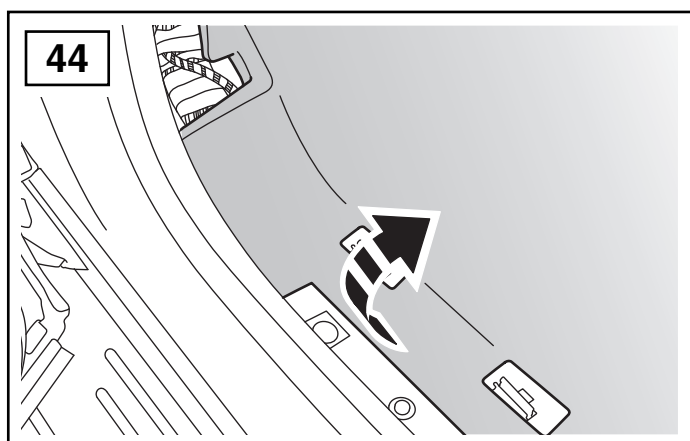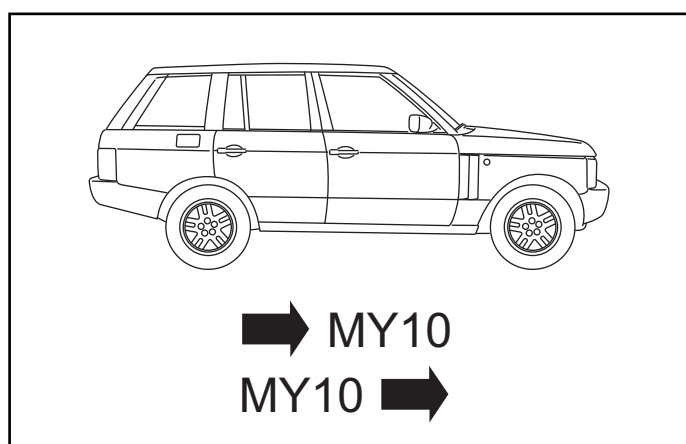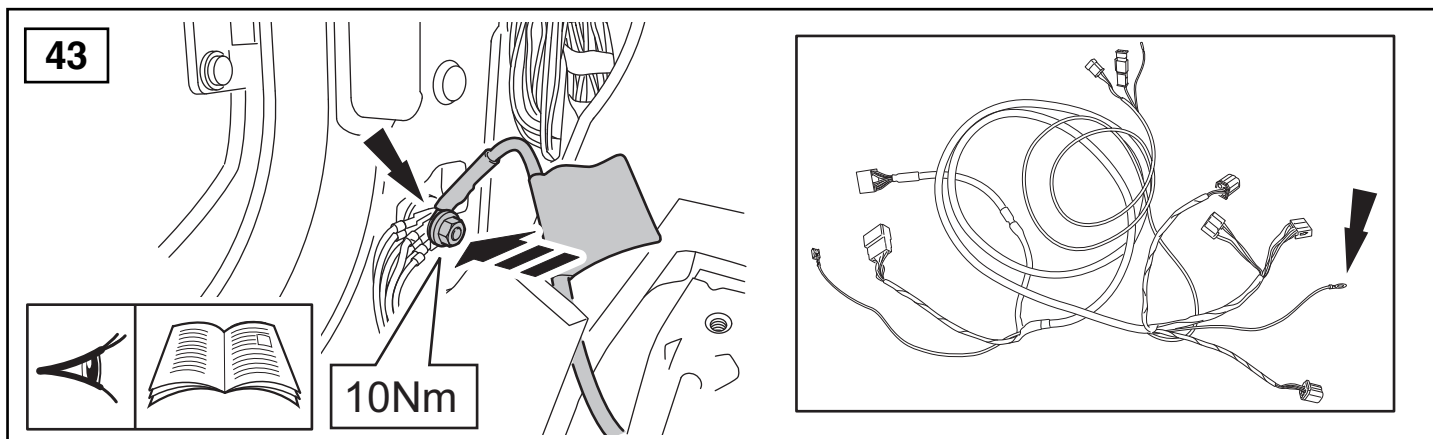

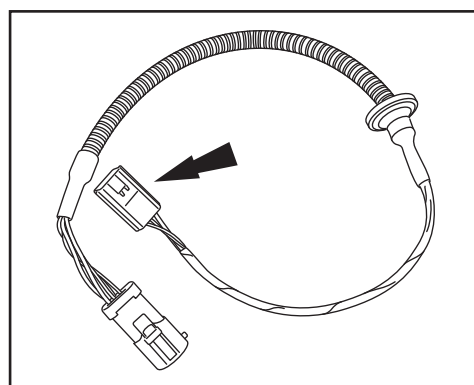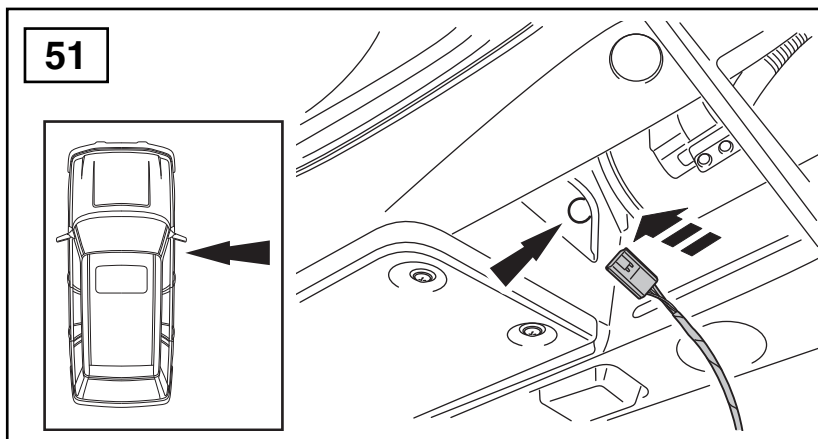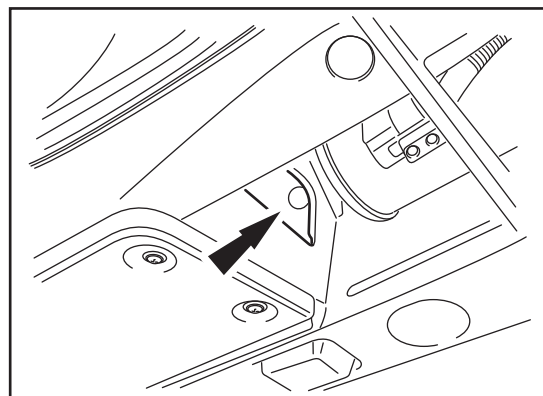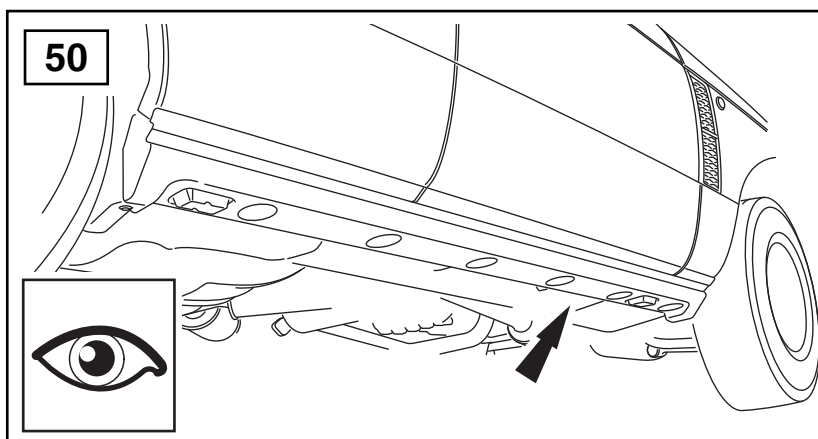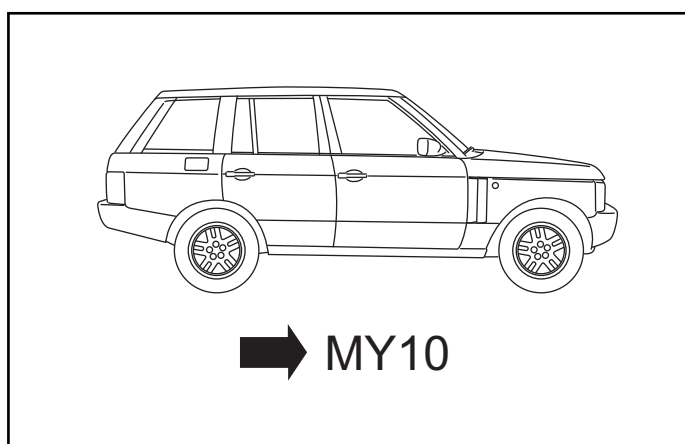
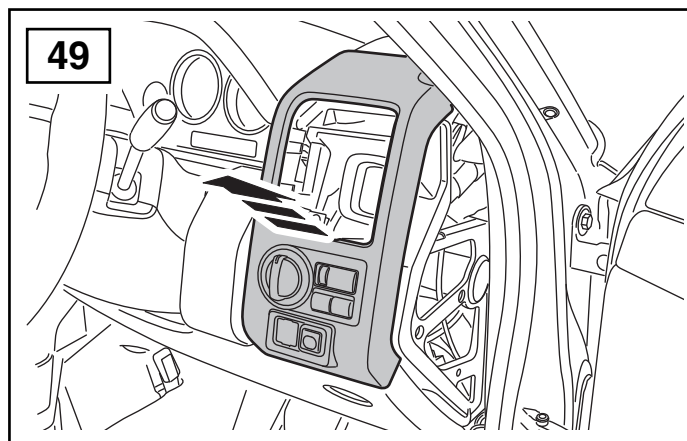
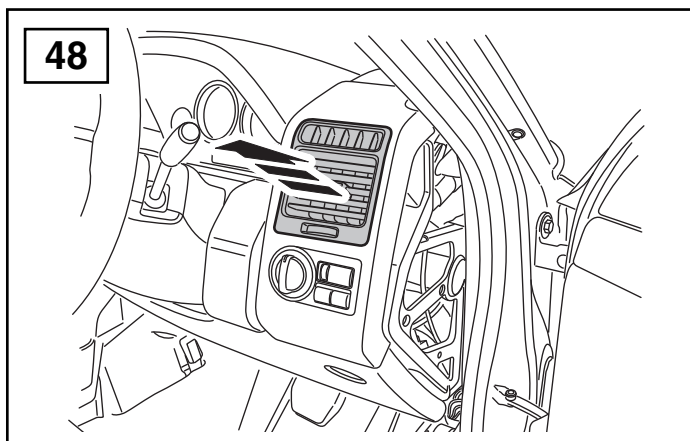


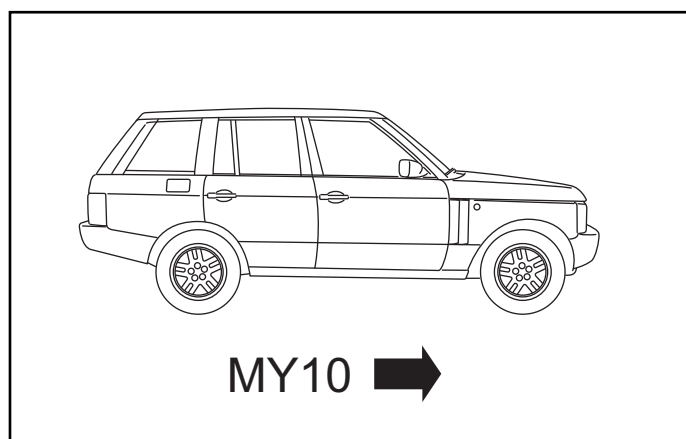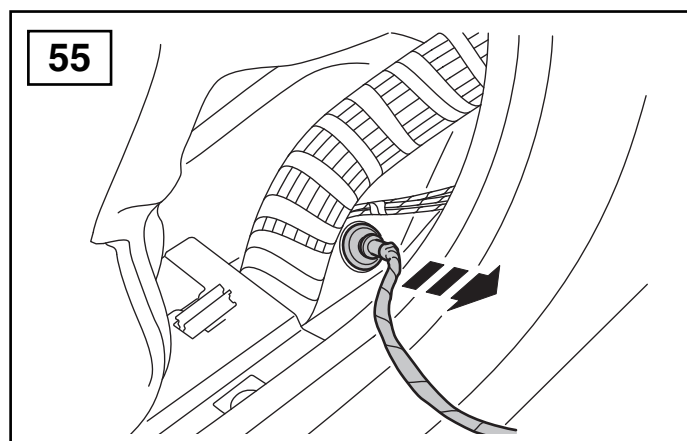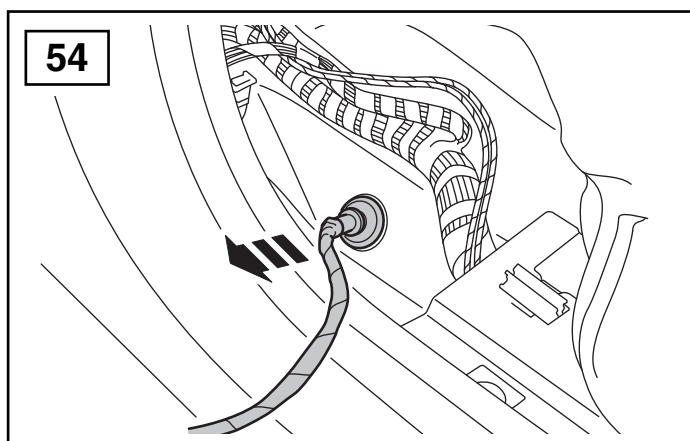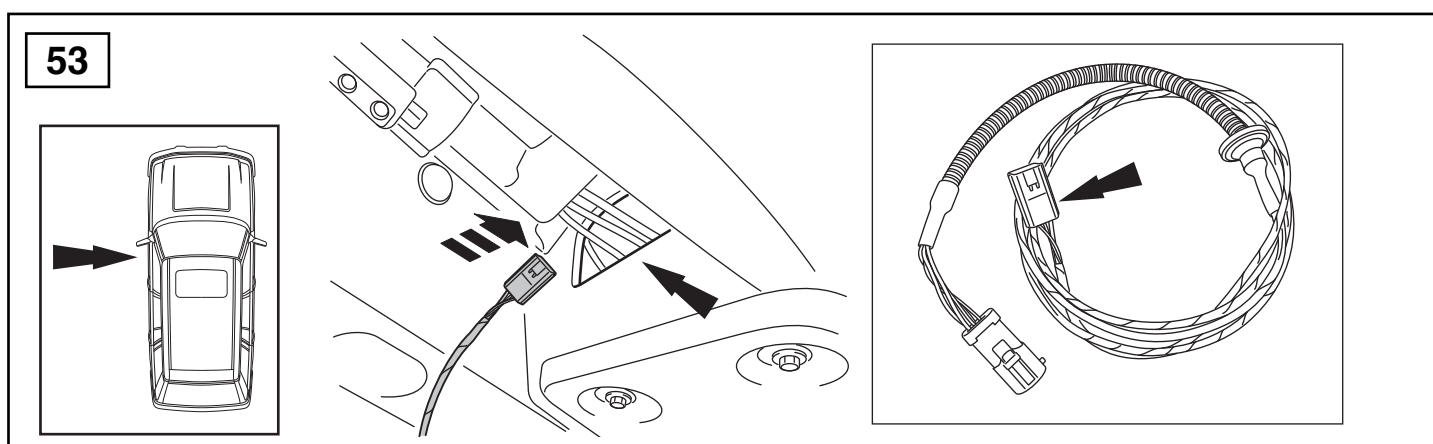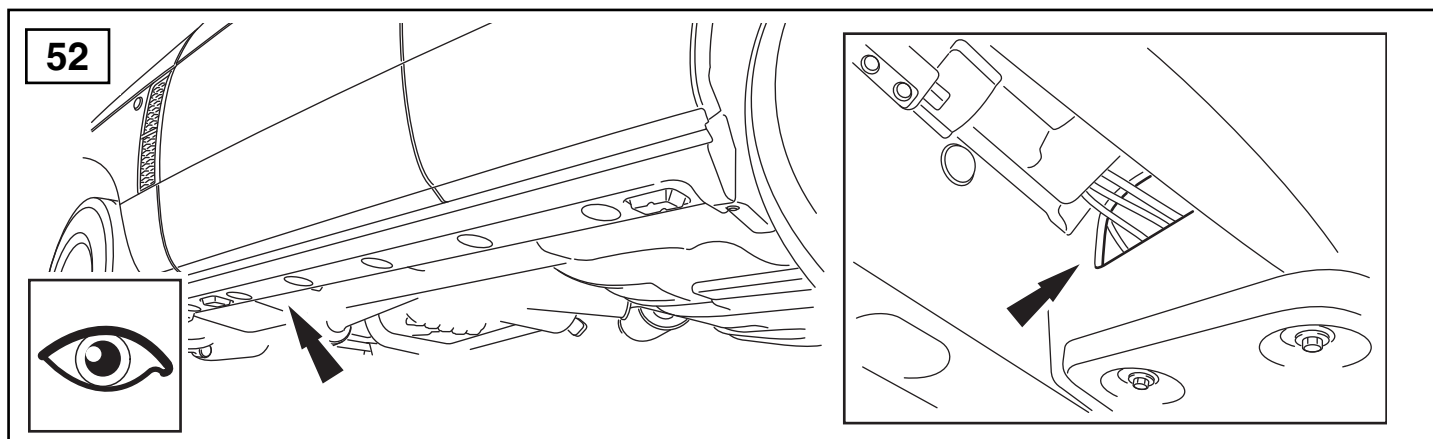




56

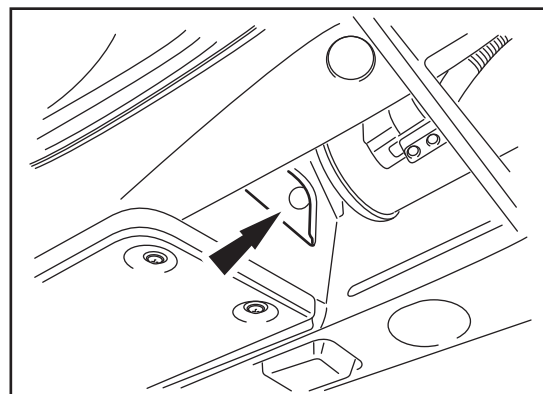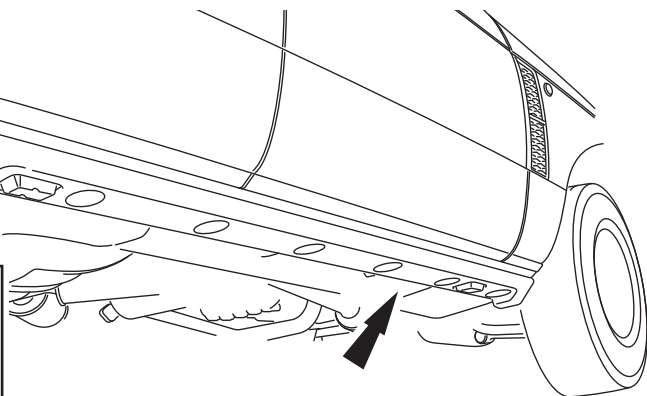




57





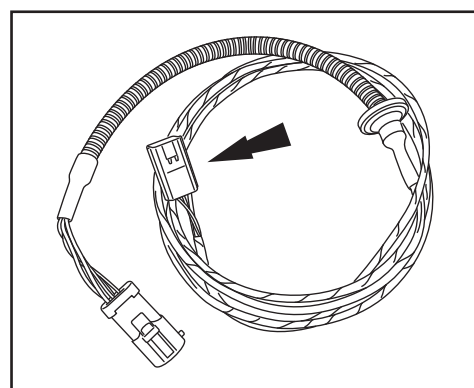
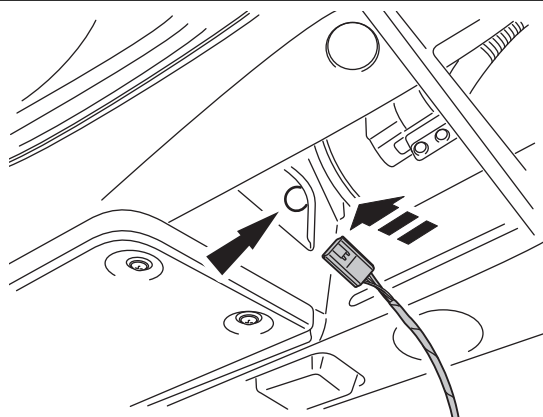
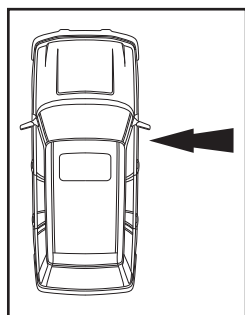









58

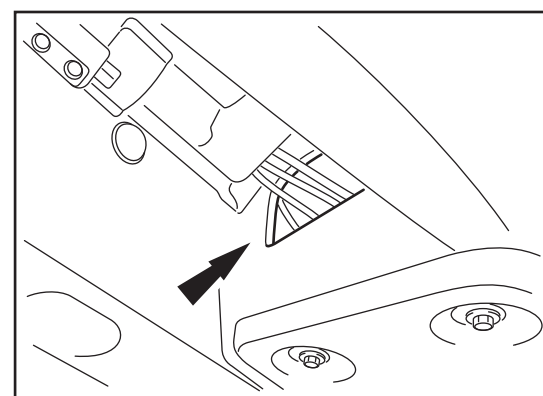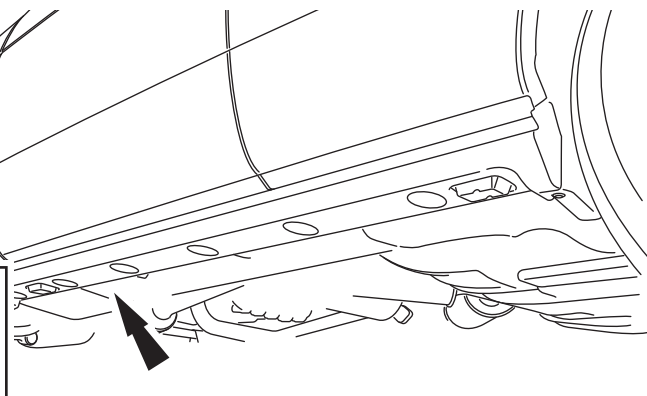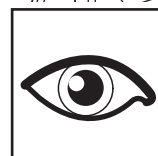


59

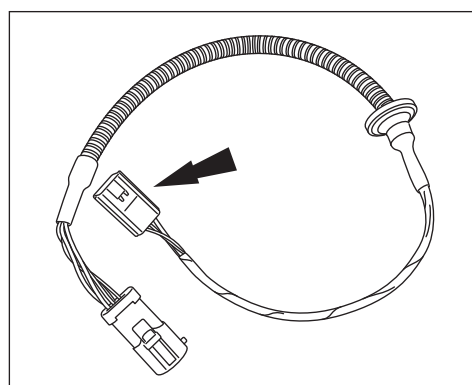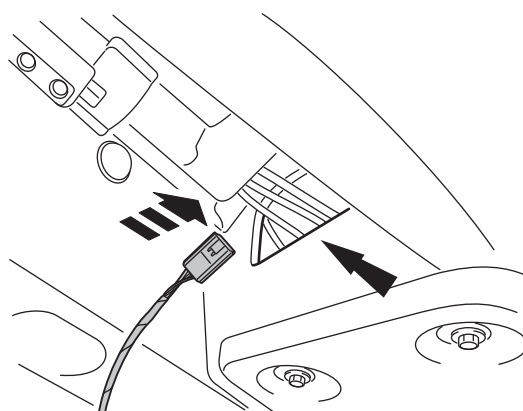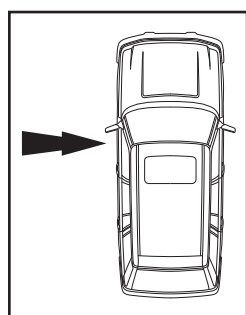

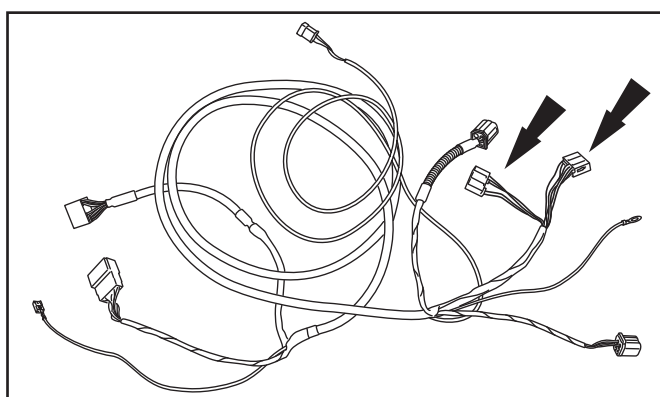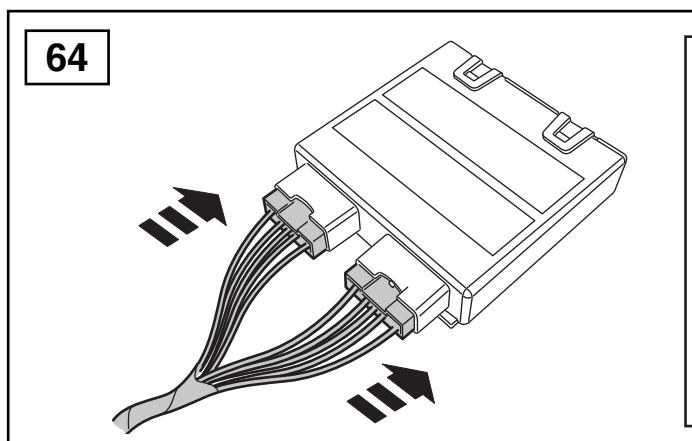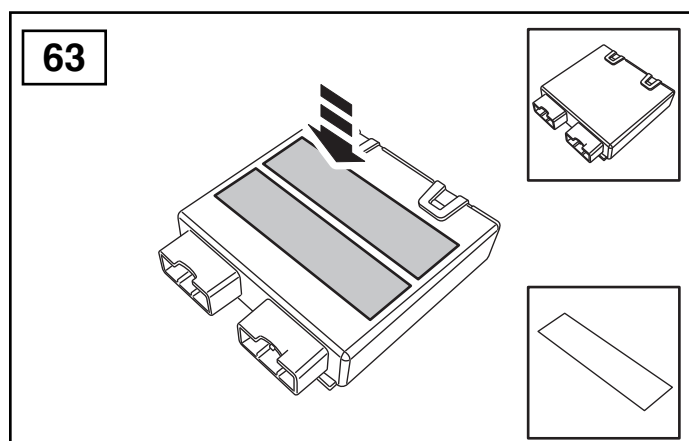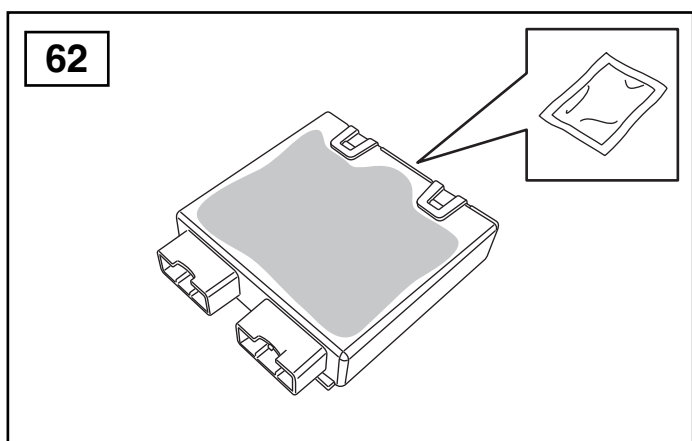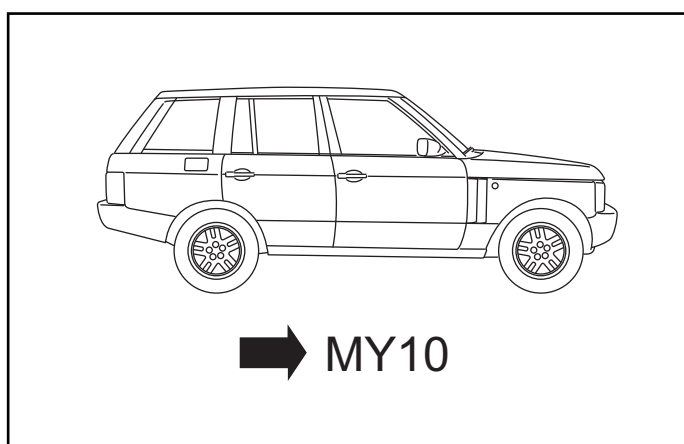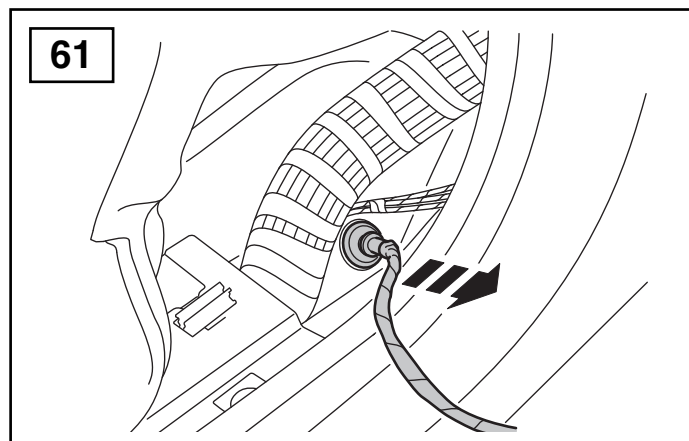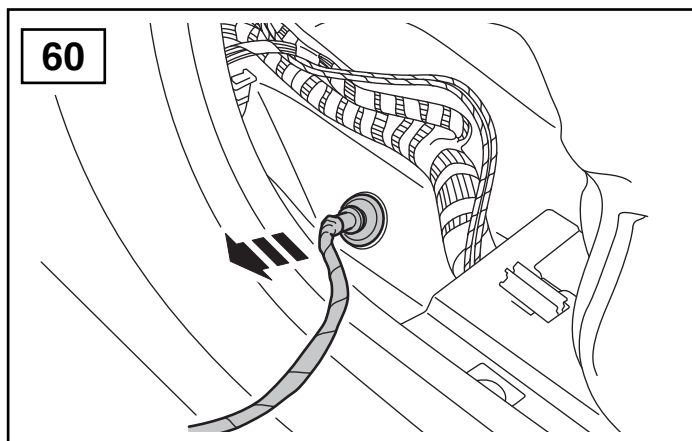


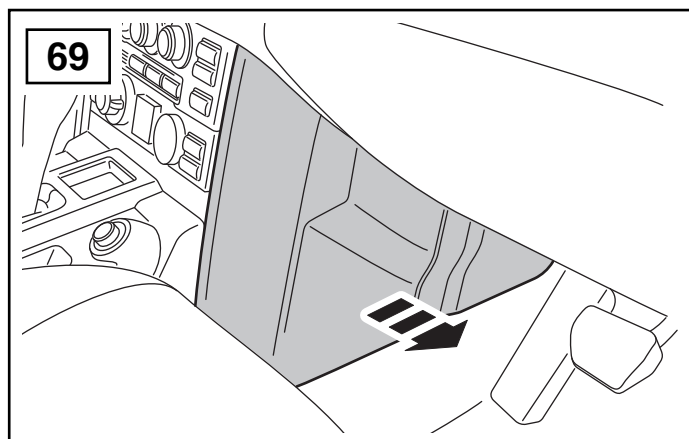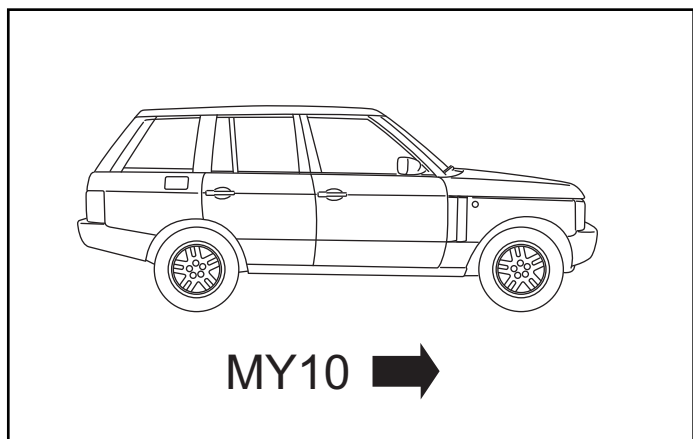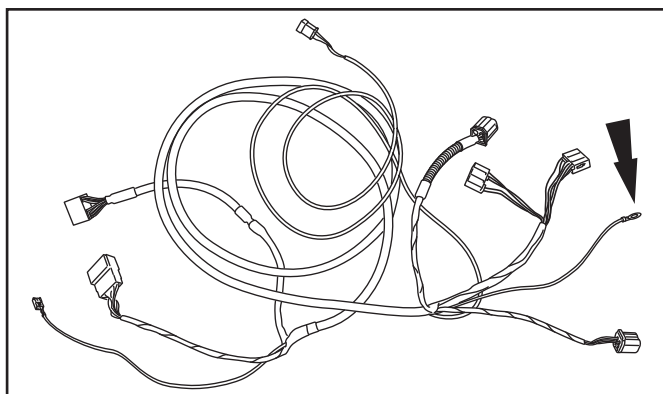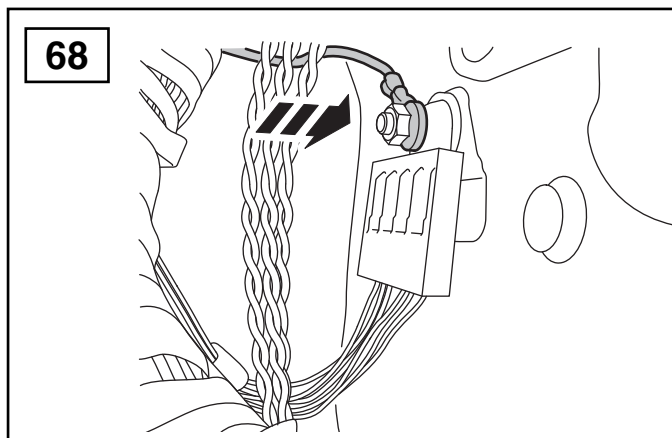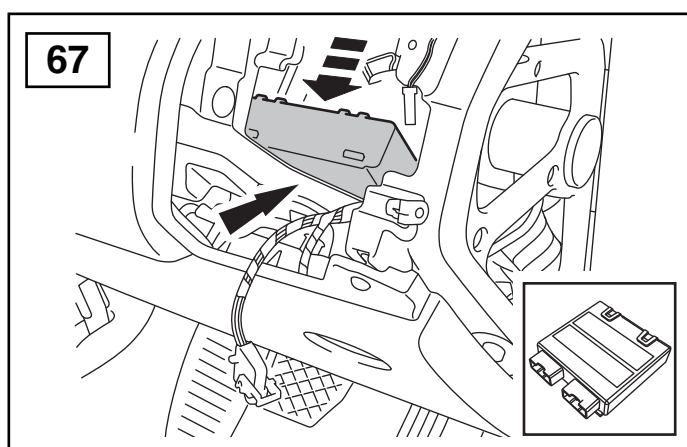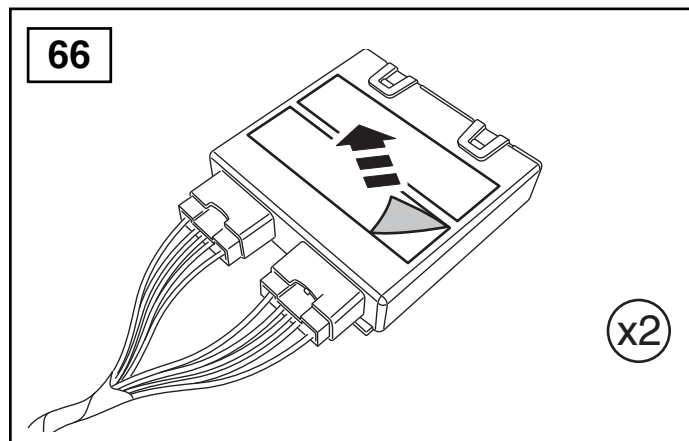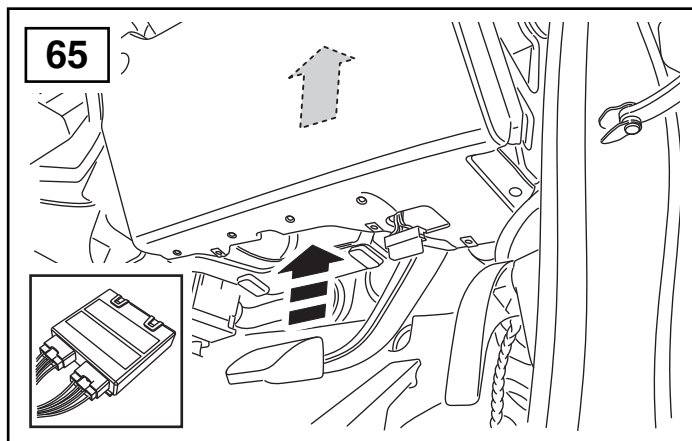




70

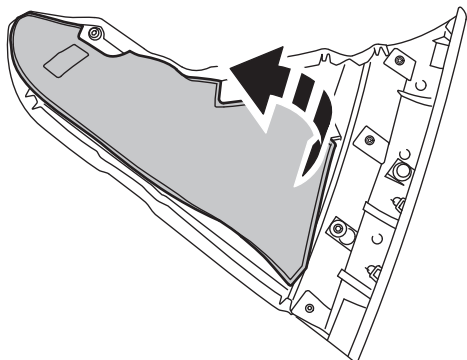



71

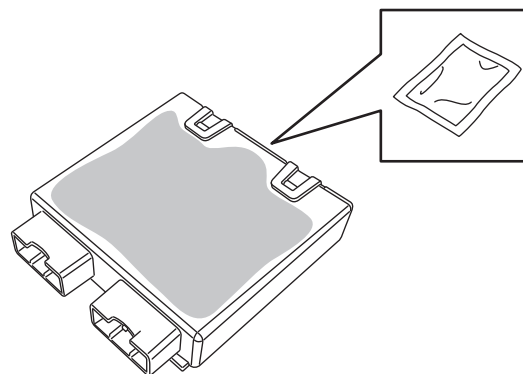


72

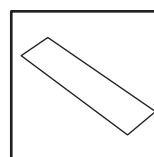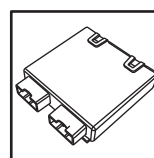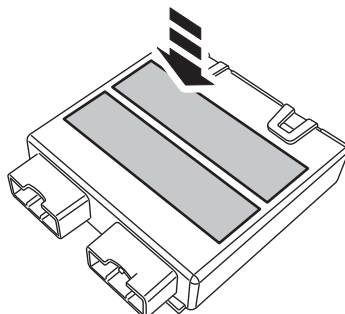




73

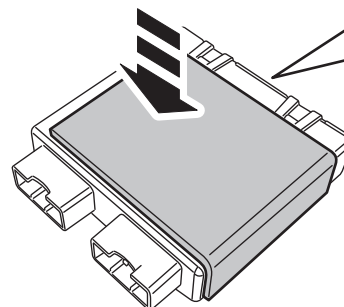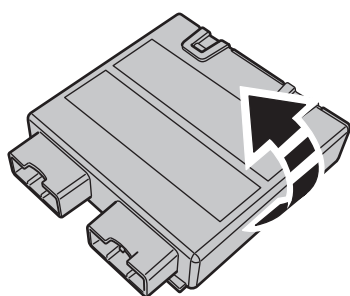

74


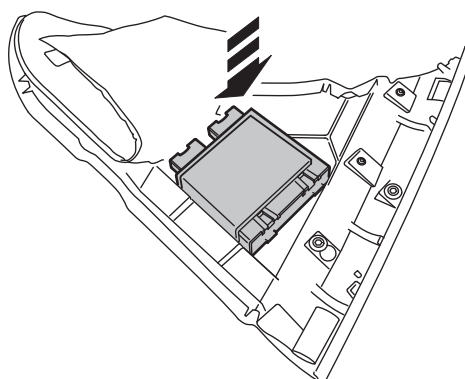


75

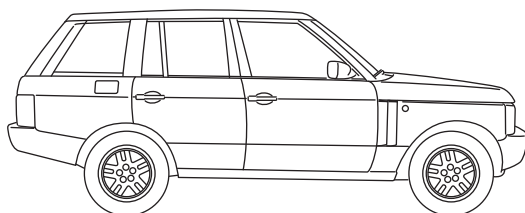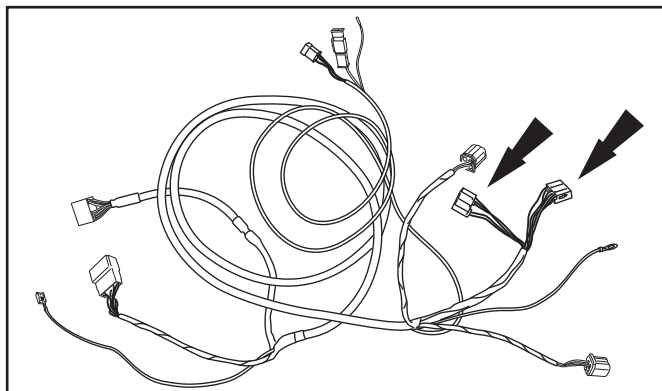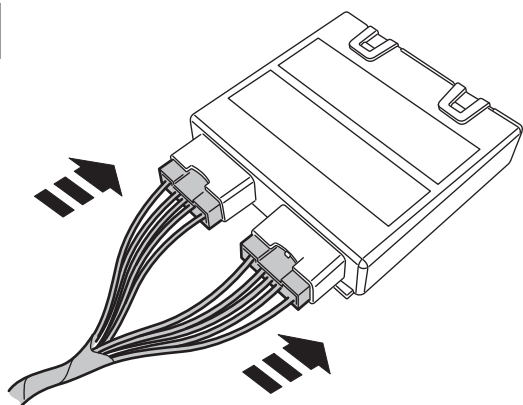


➡ MY10
MY10 ➡


76







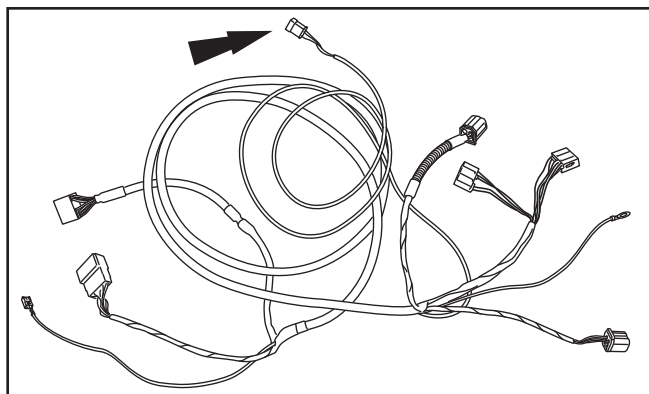
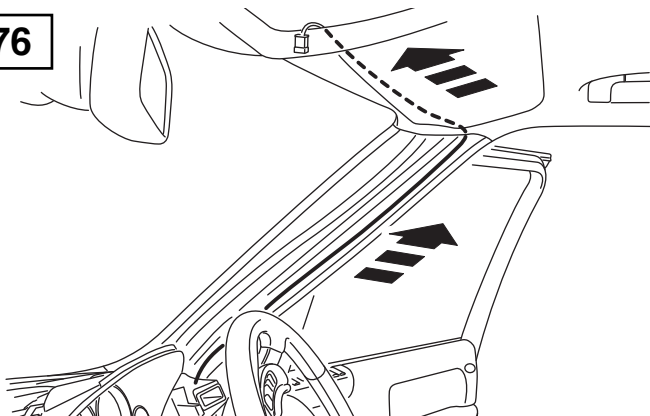










77





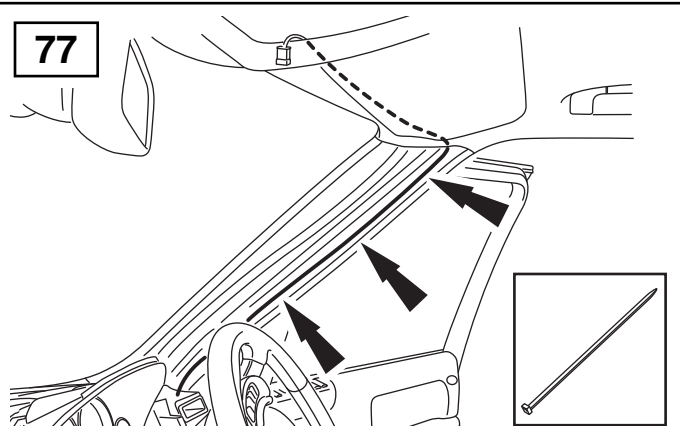






78

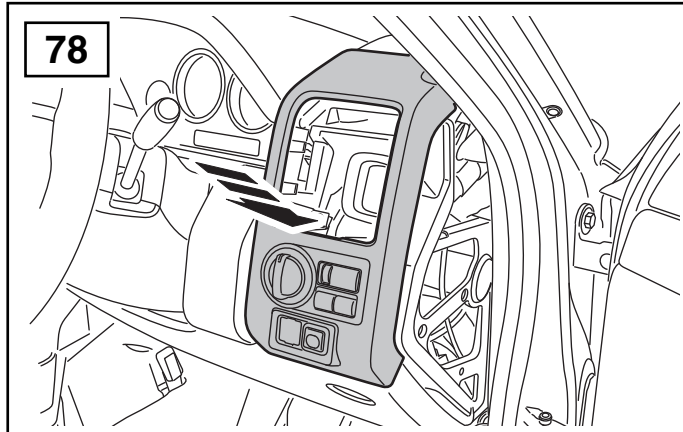

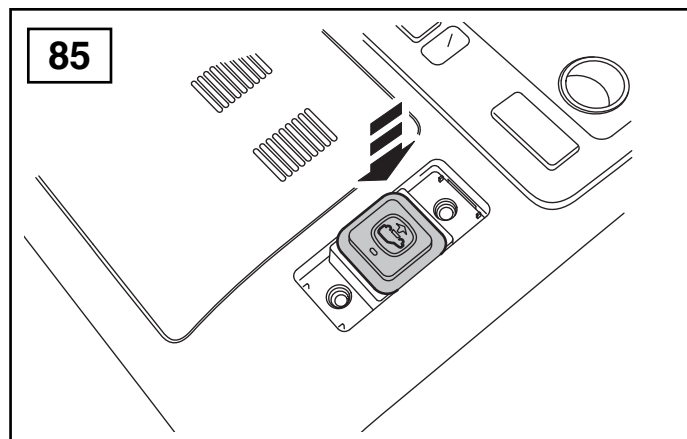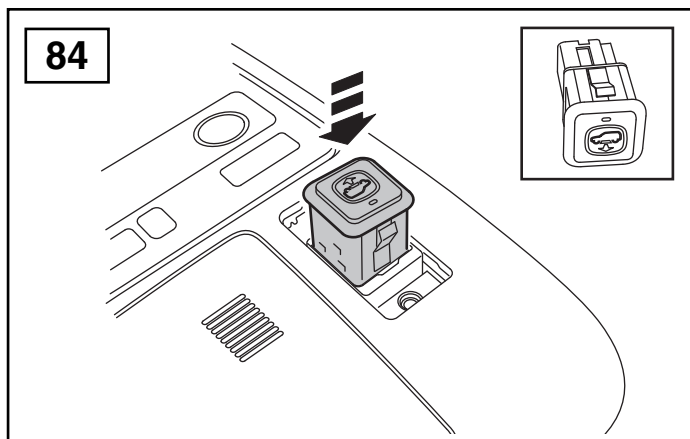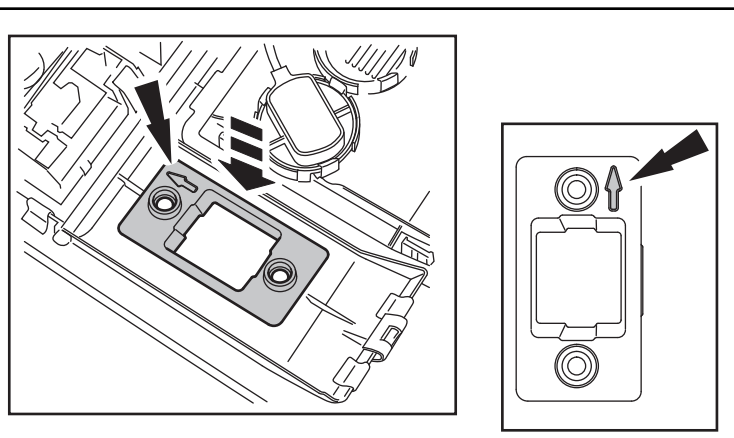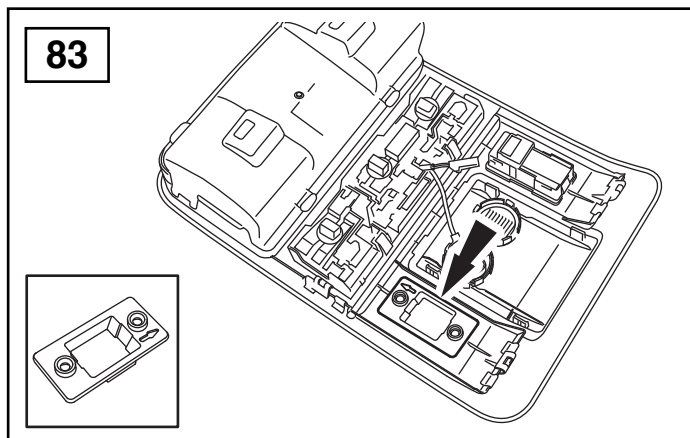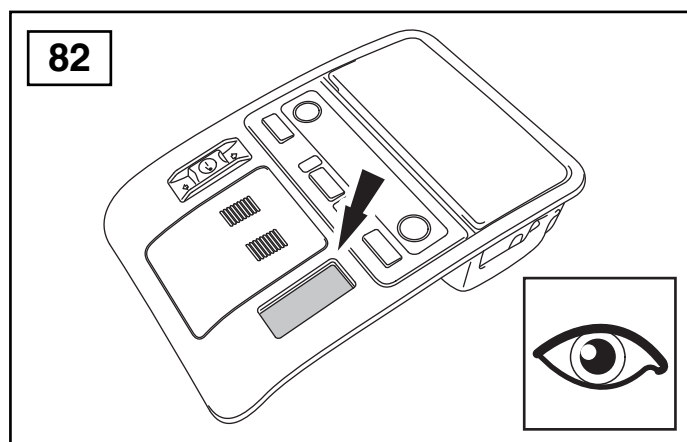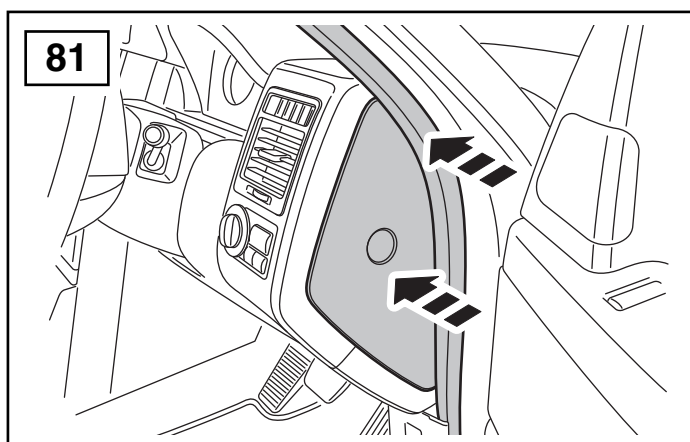
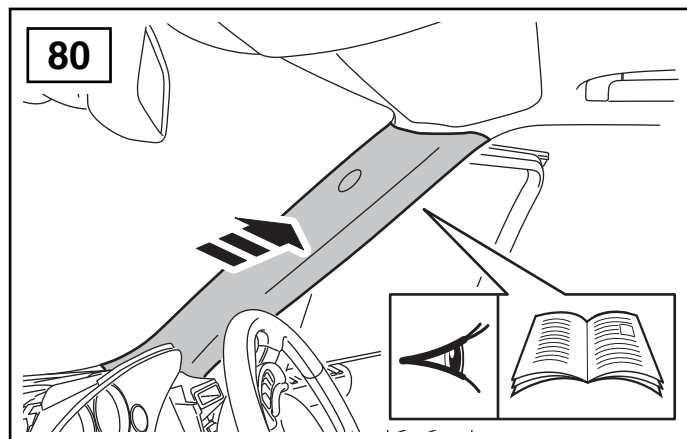
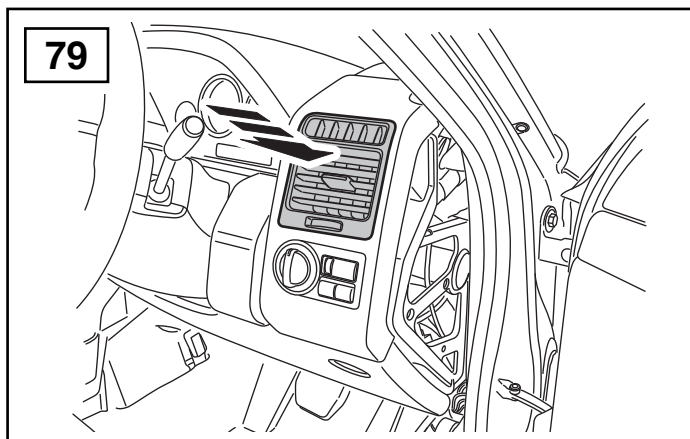


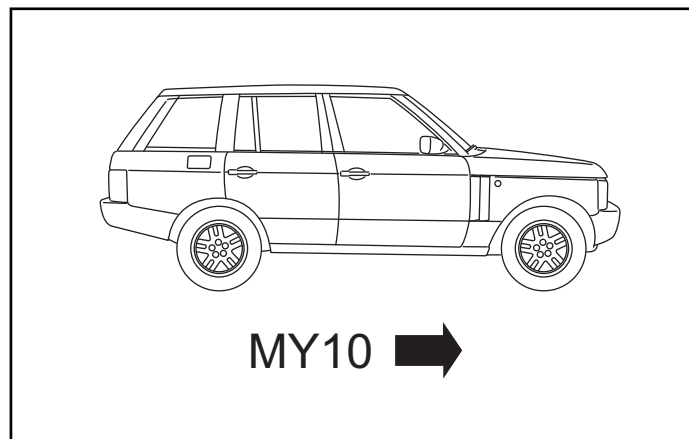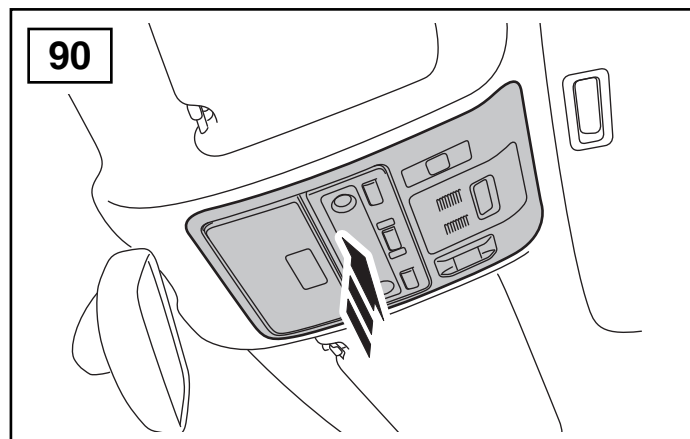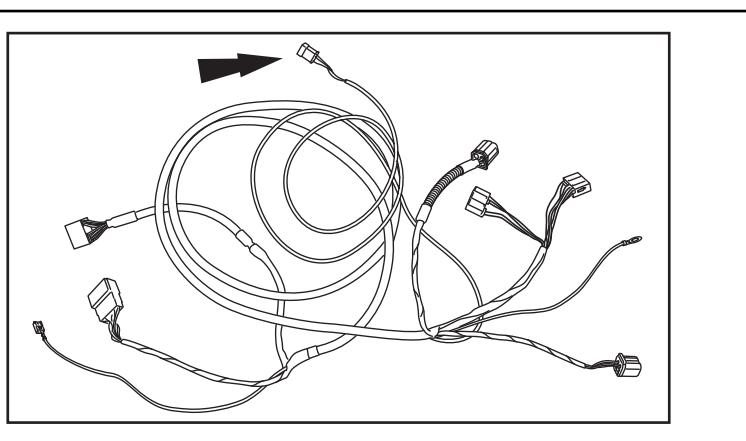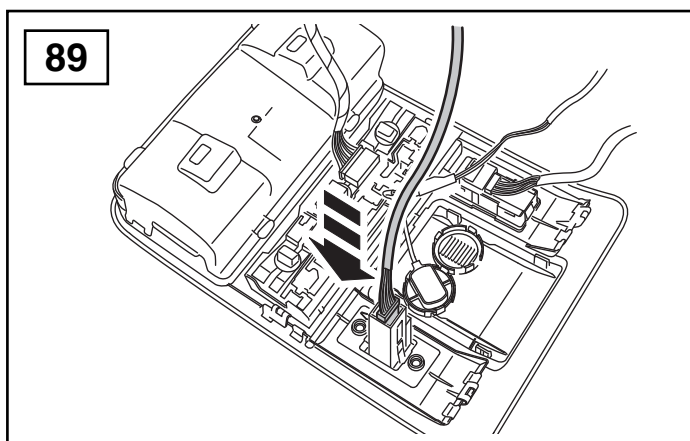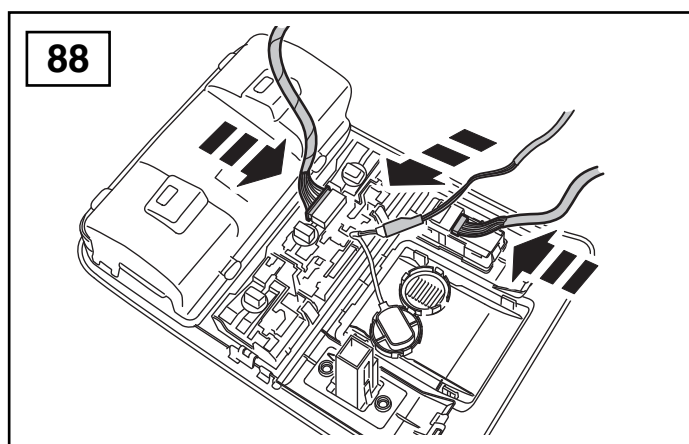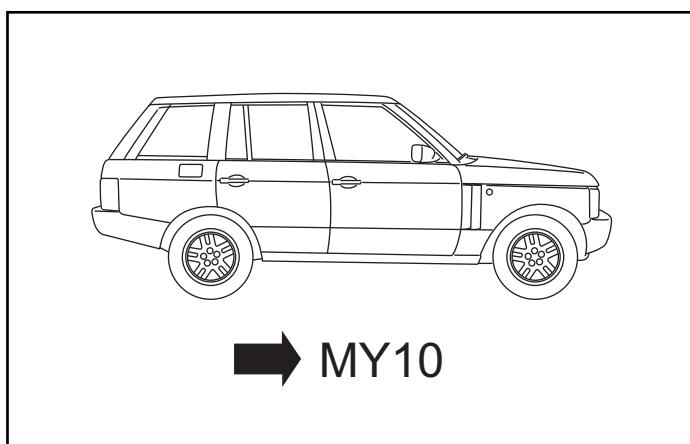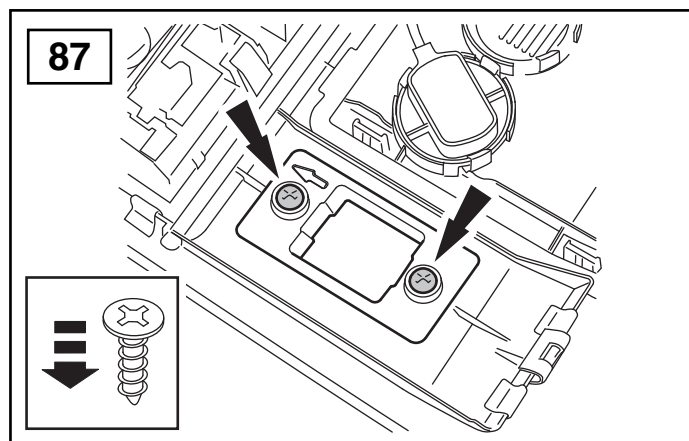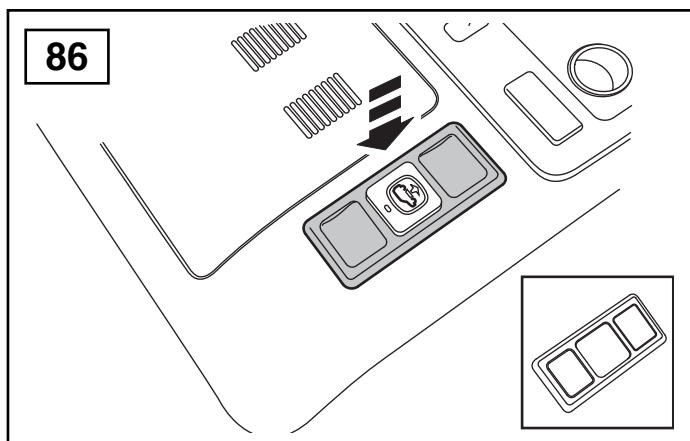

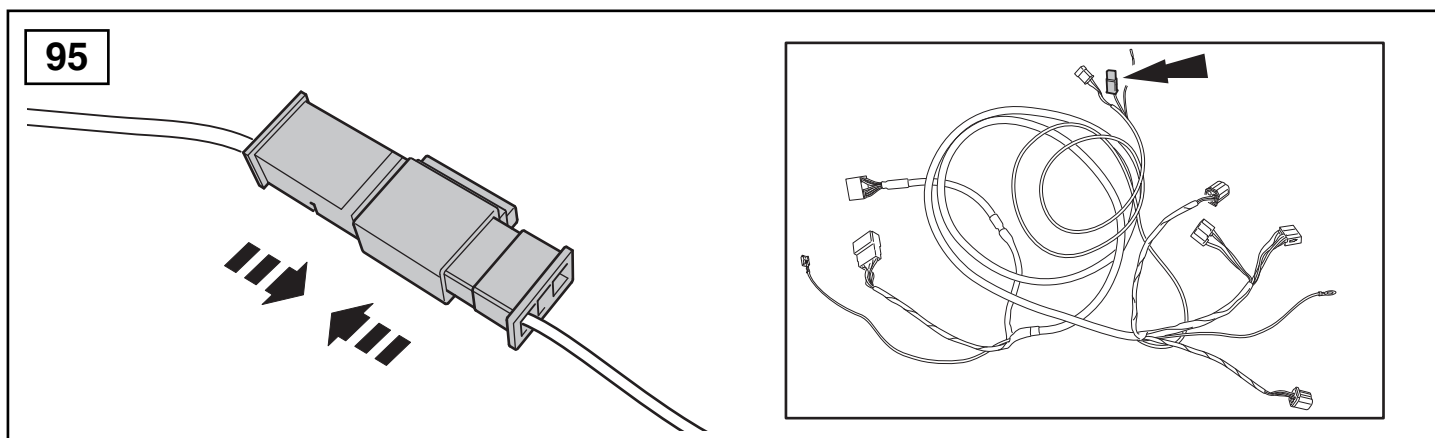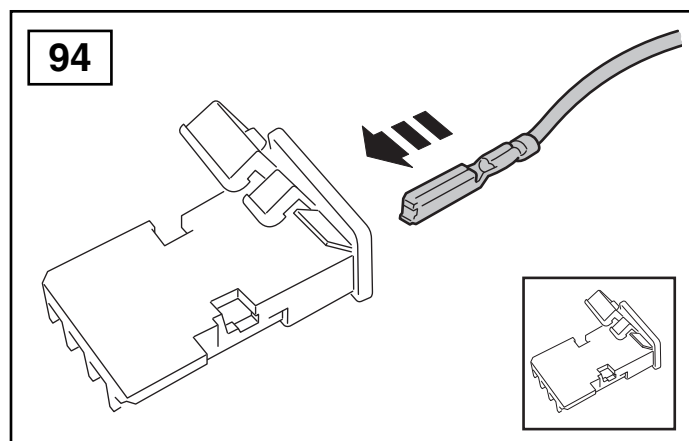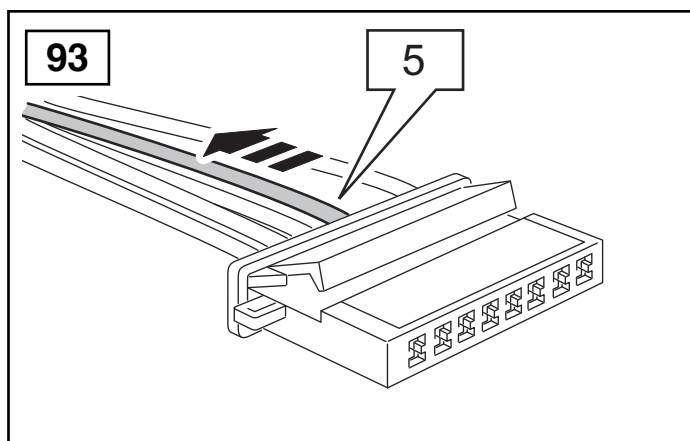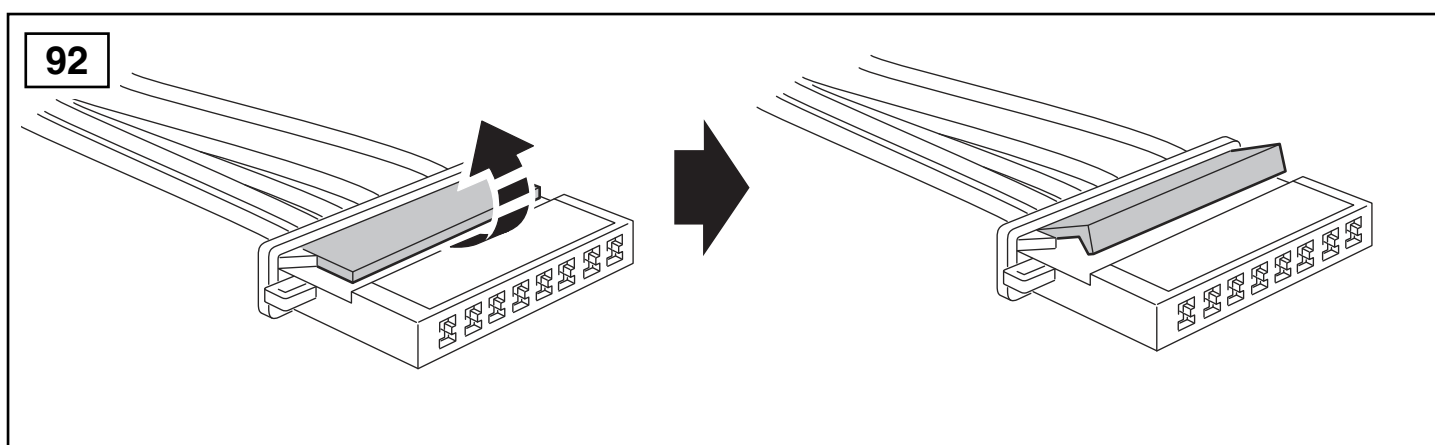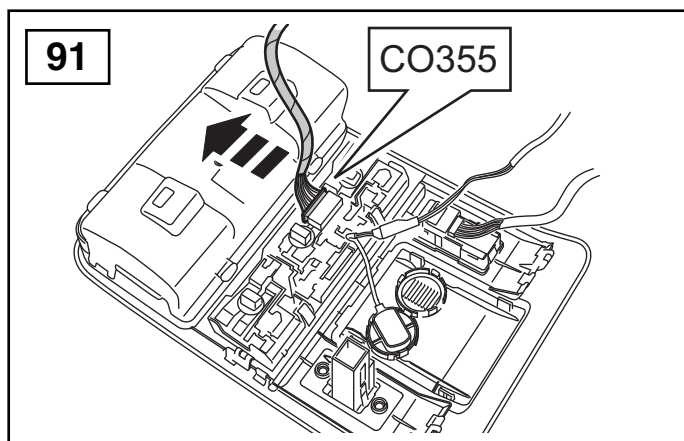

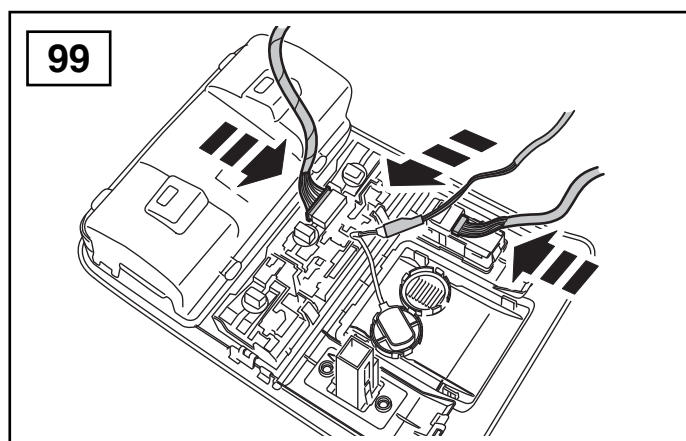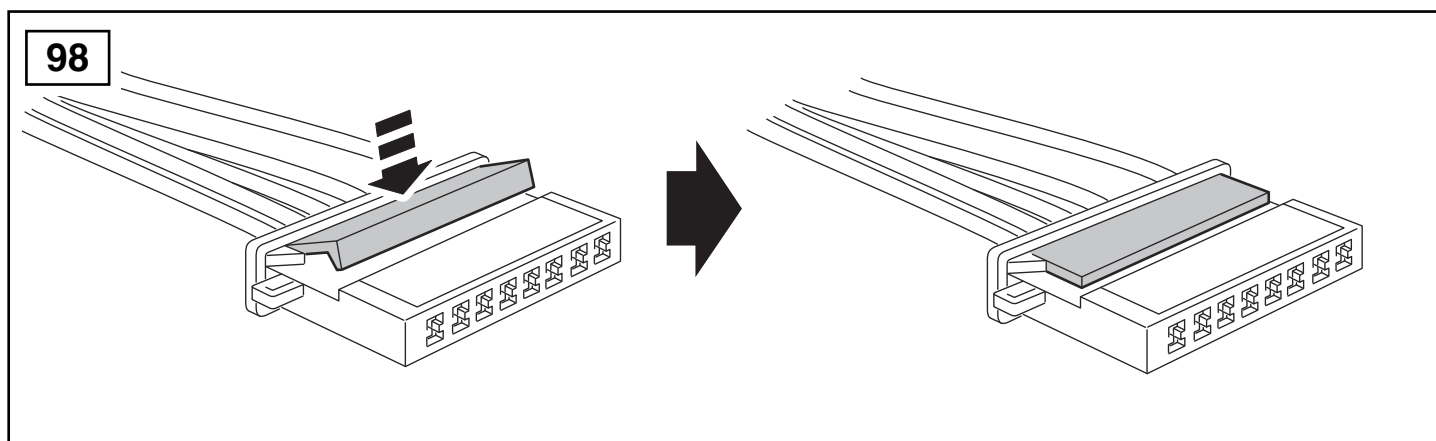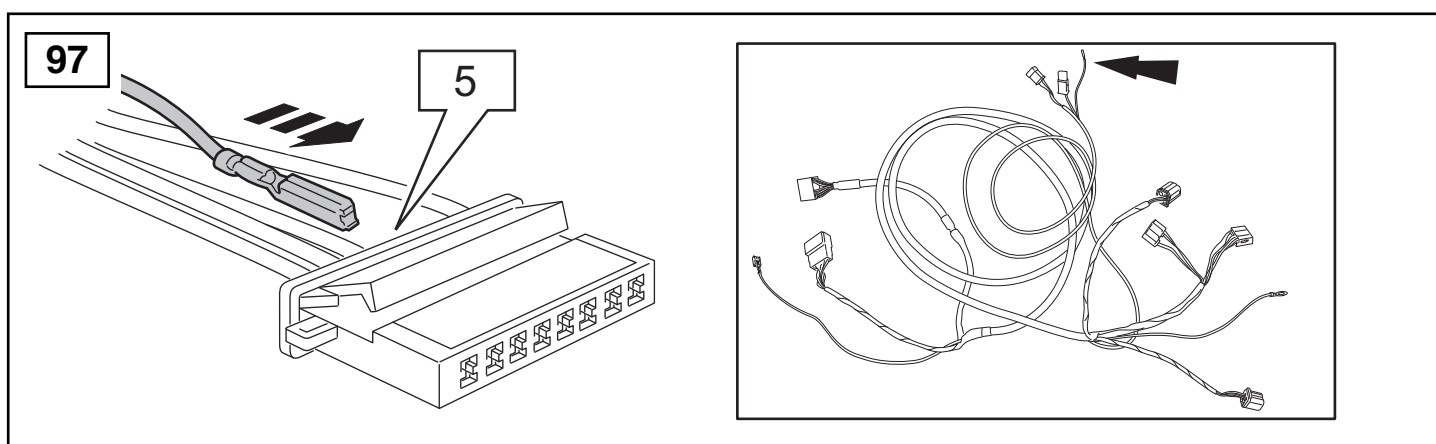
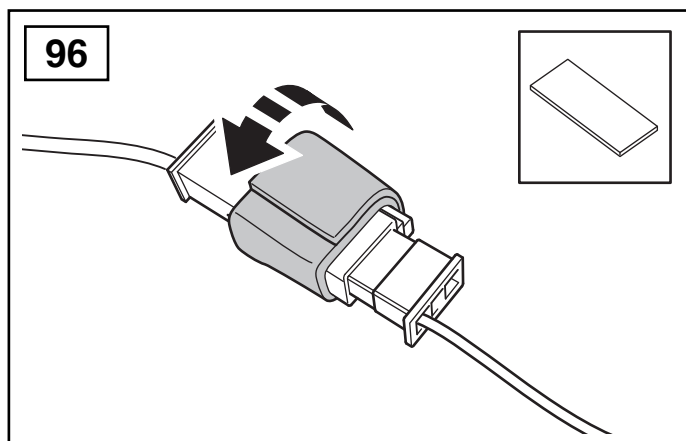


100

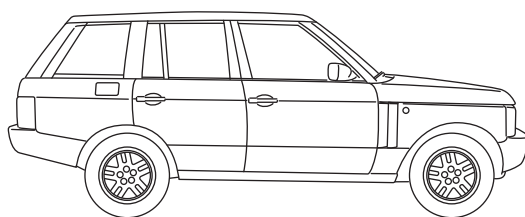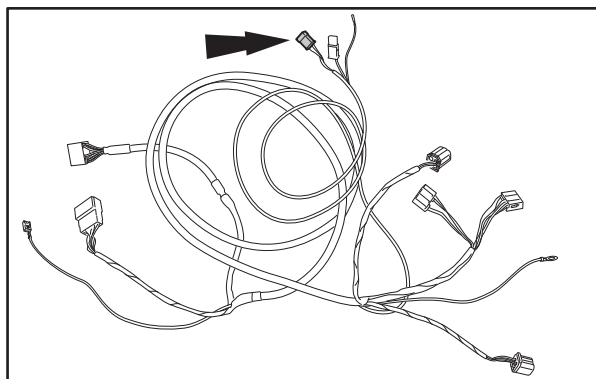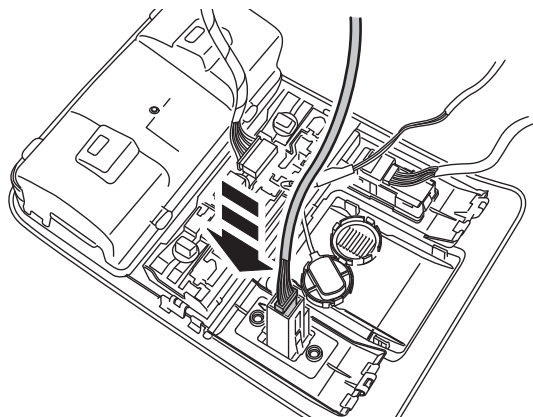





➔ MY10




101



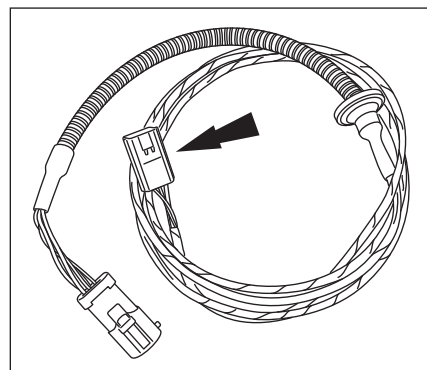
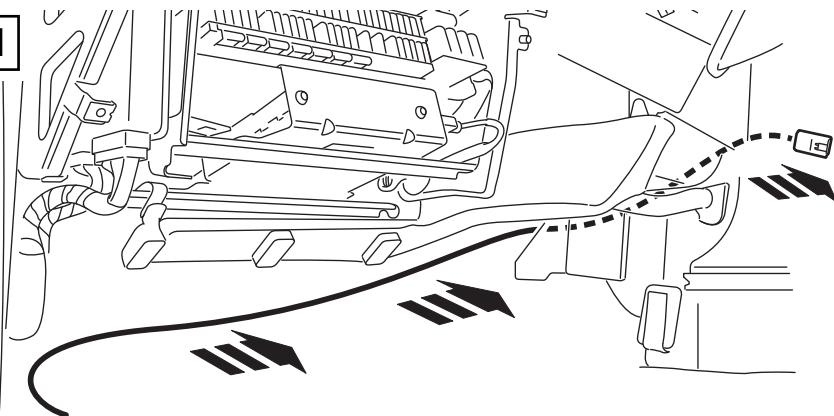









102

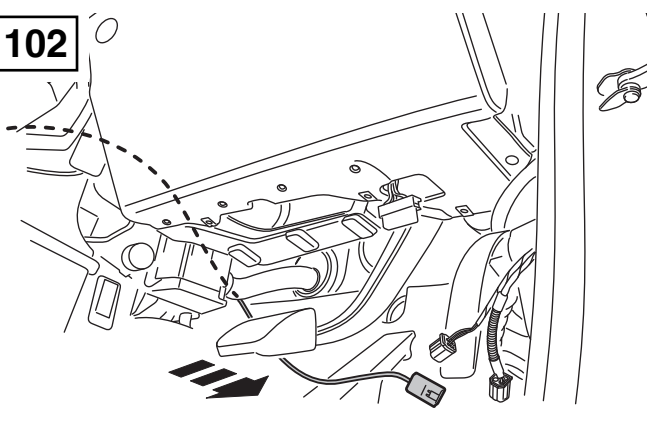

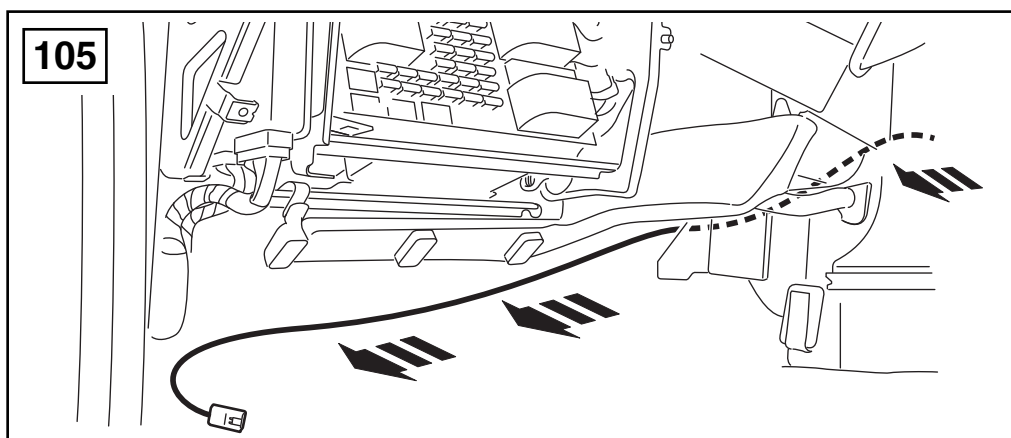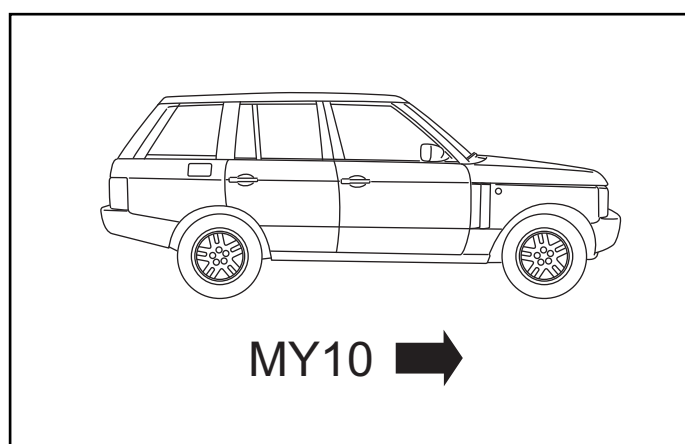
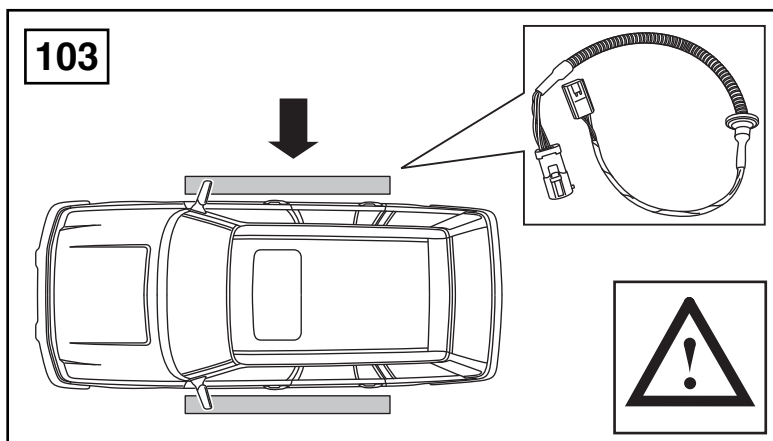


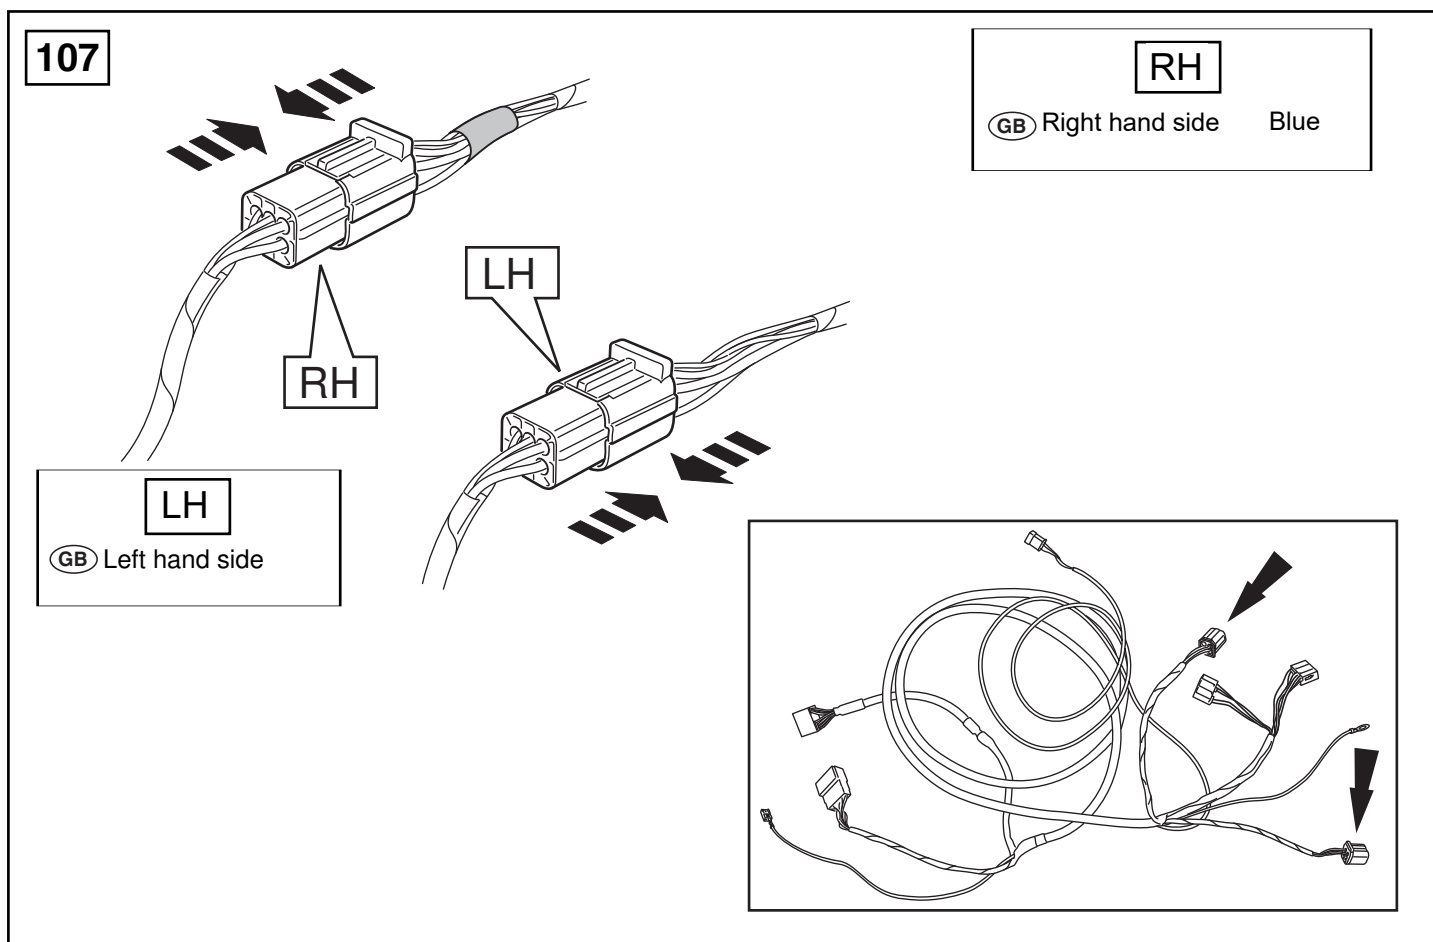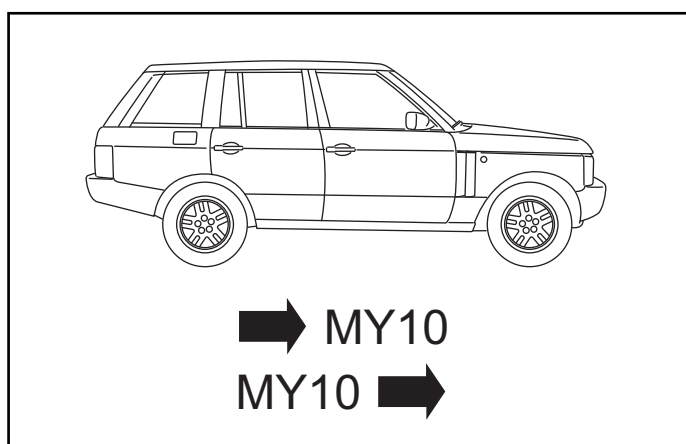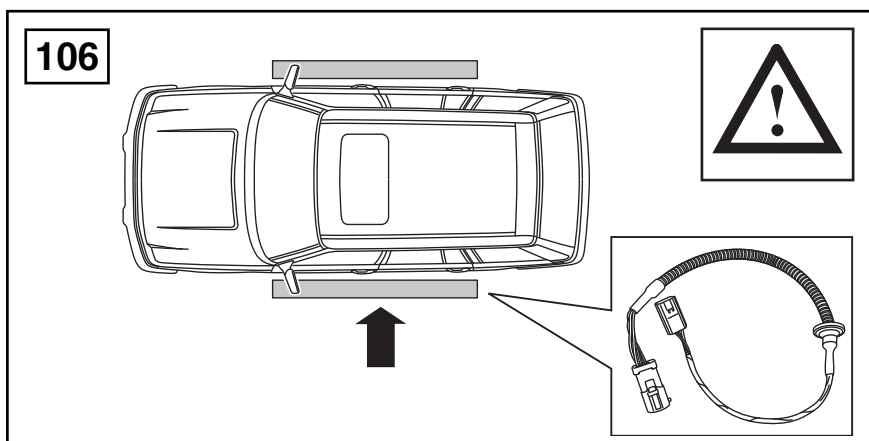

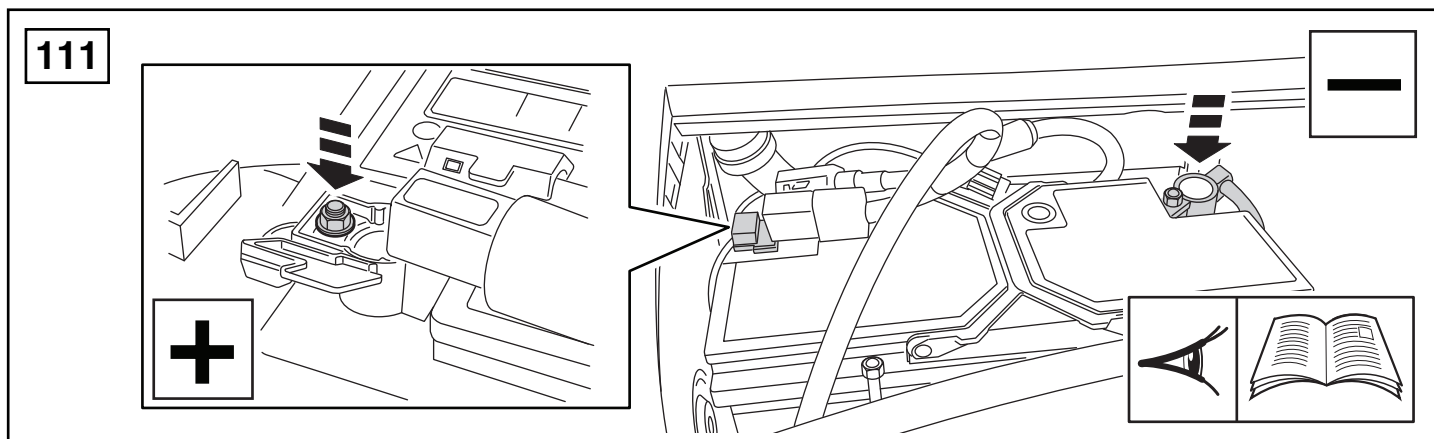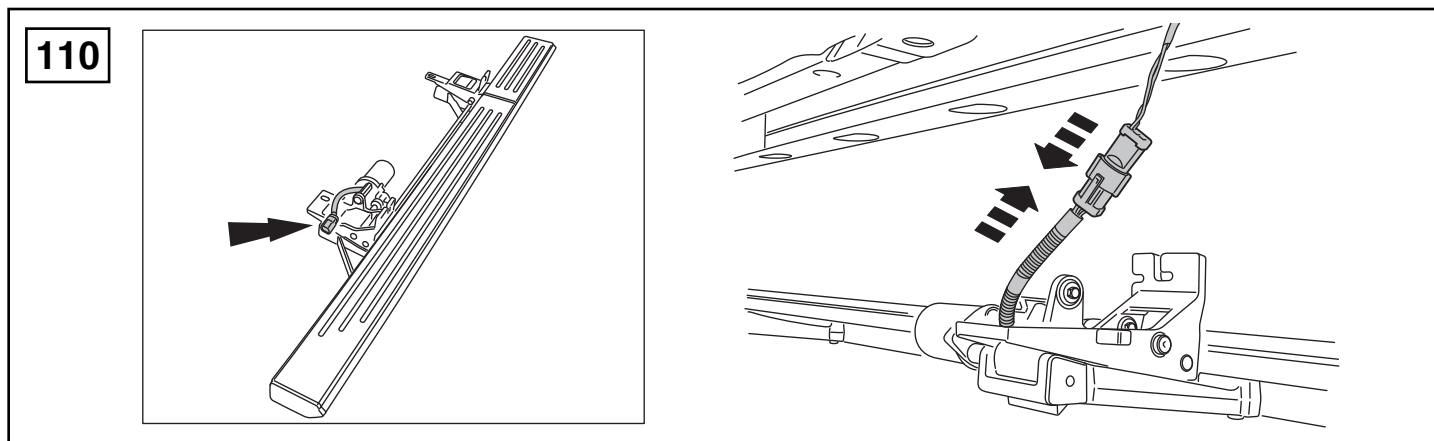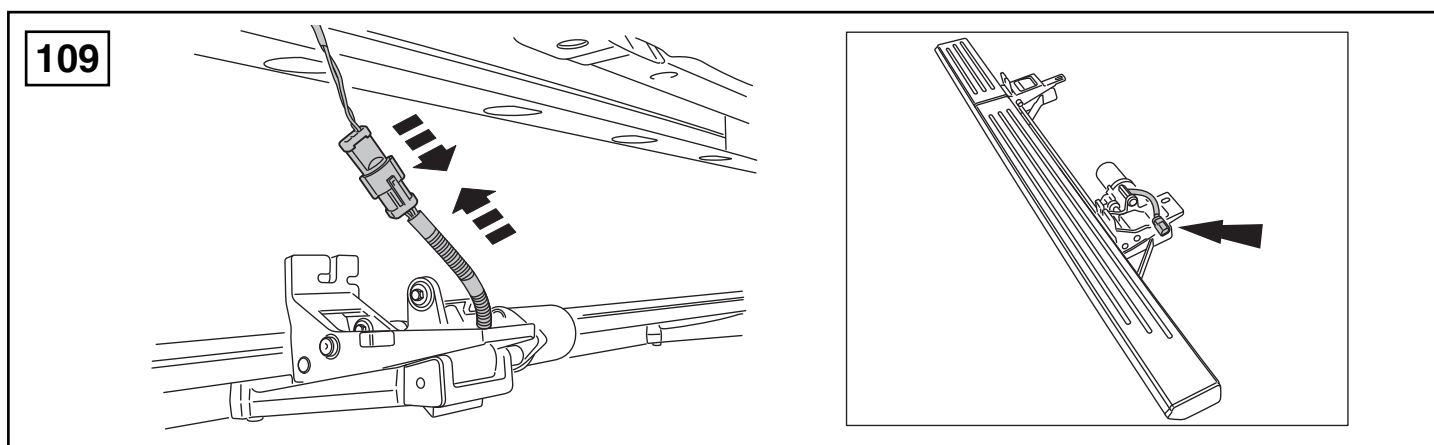
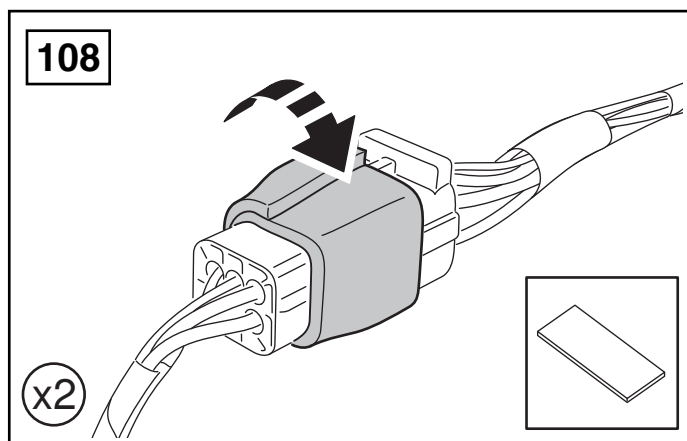


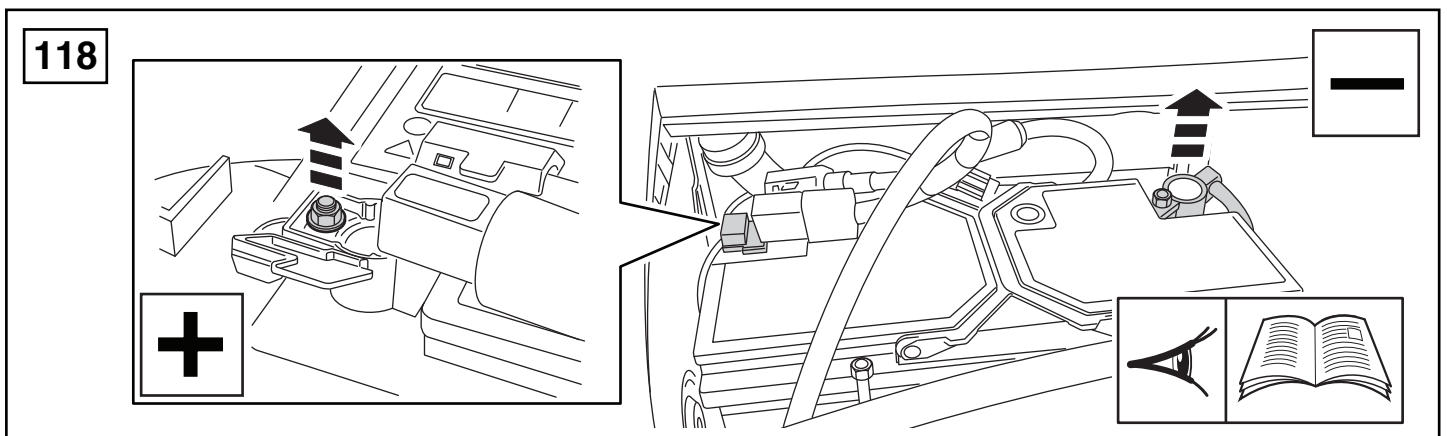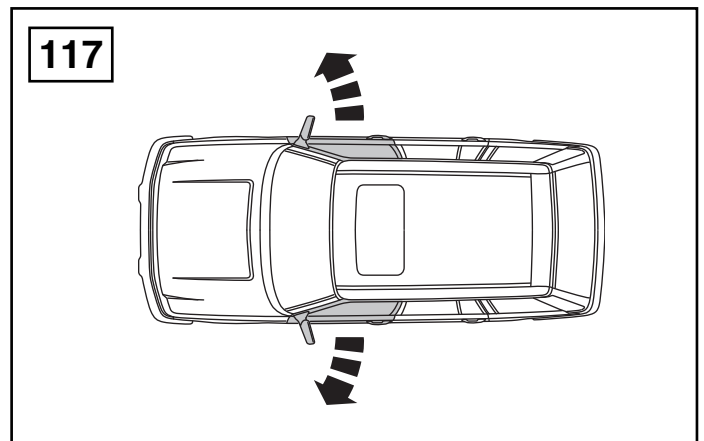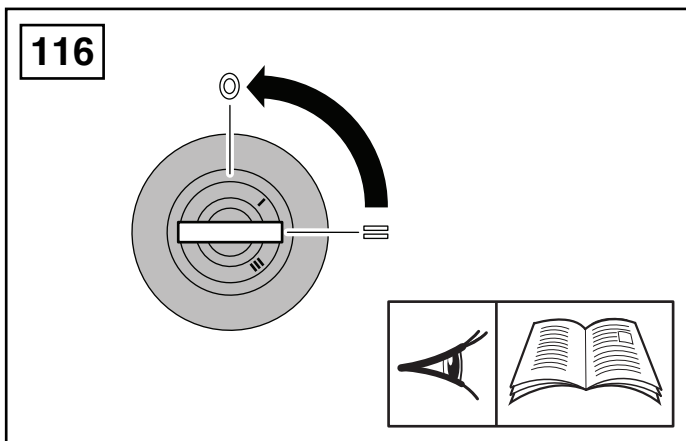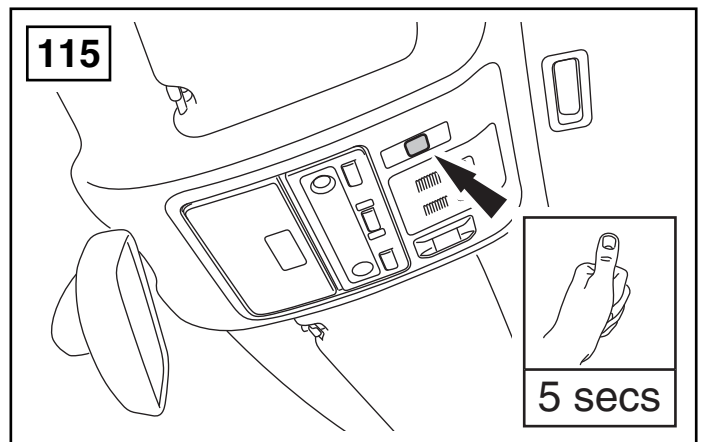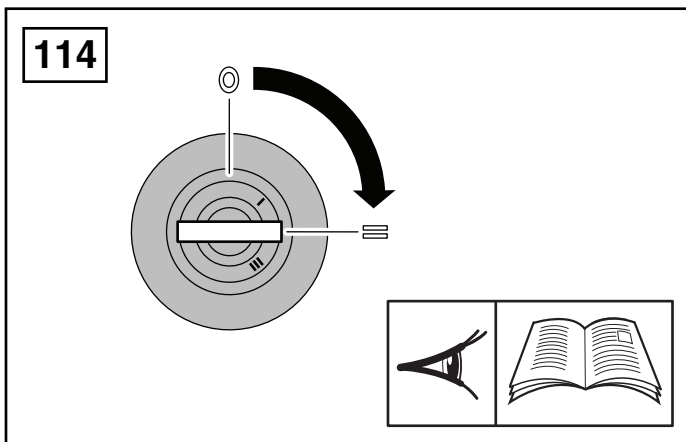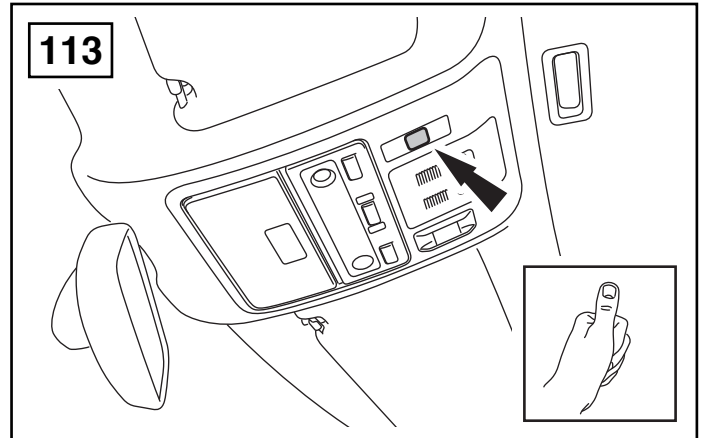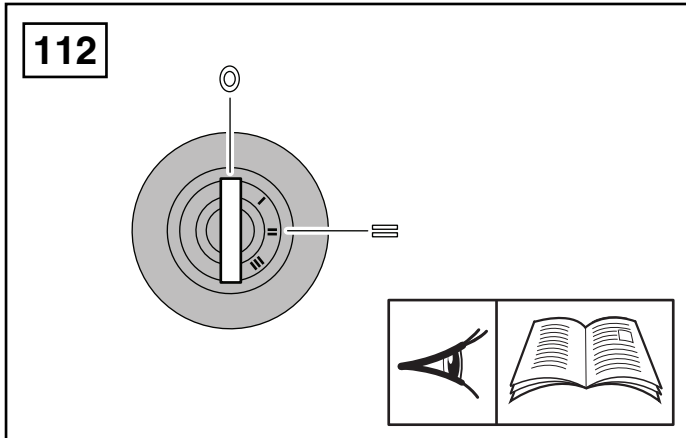


119

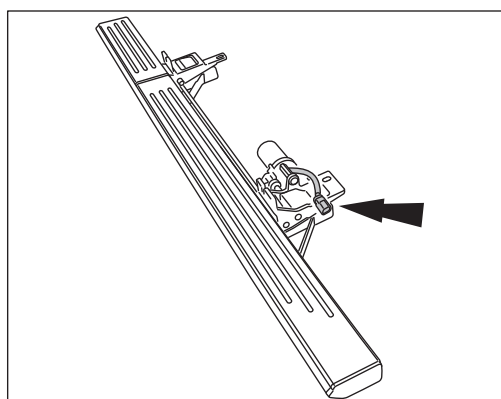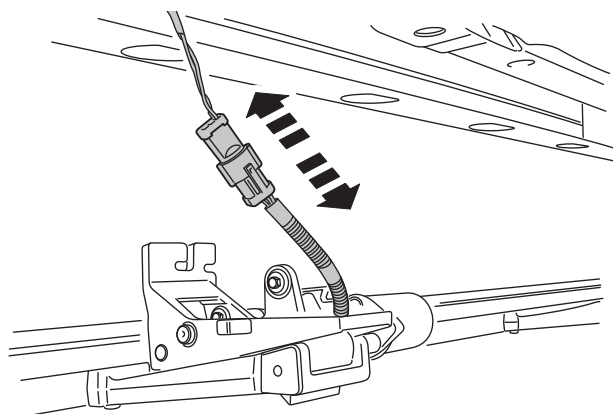


120

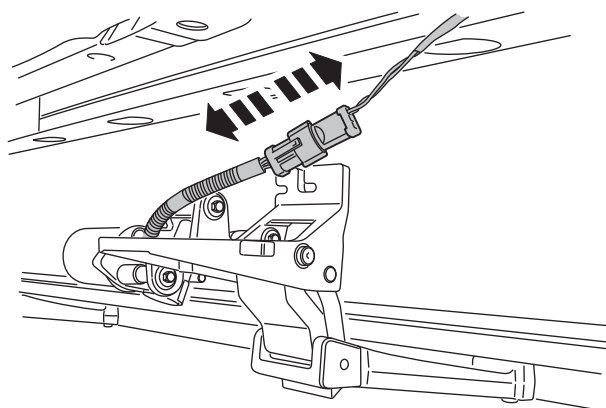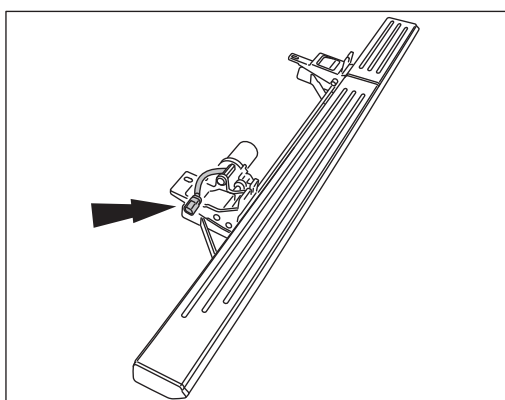


121

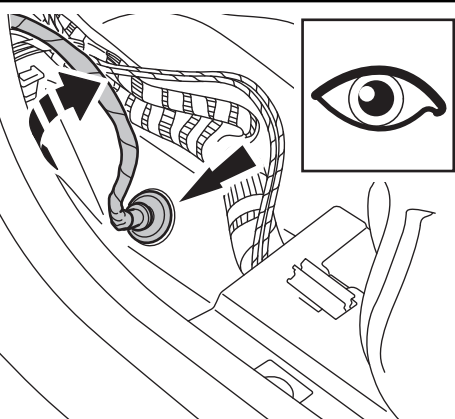


122







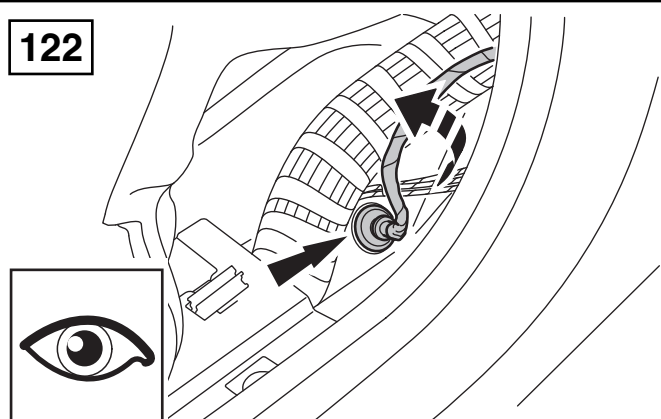


123

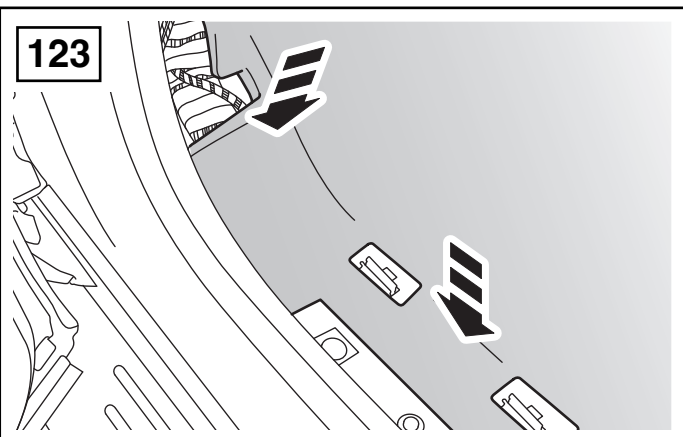



124

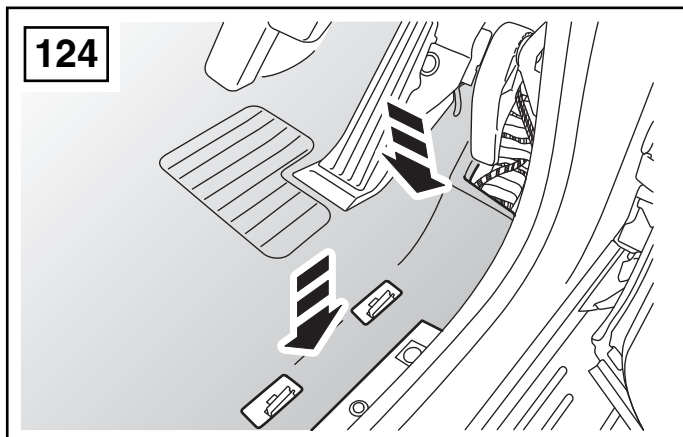

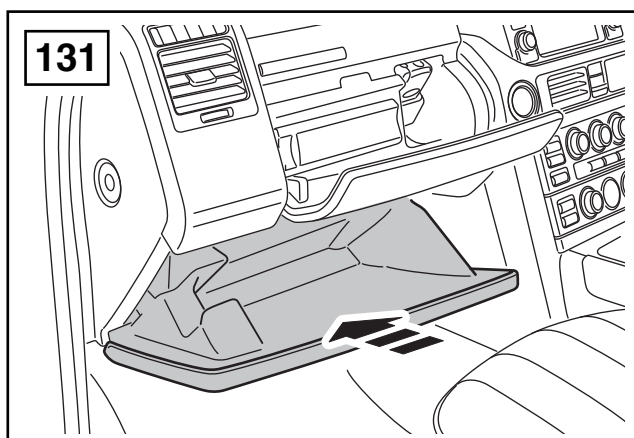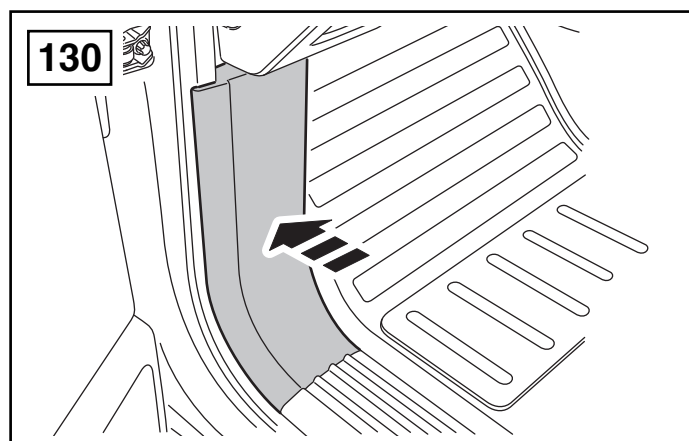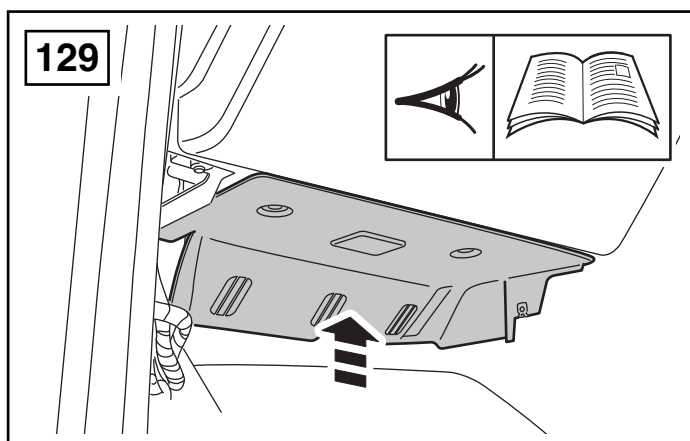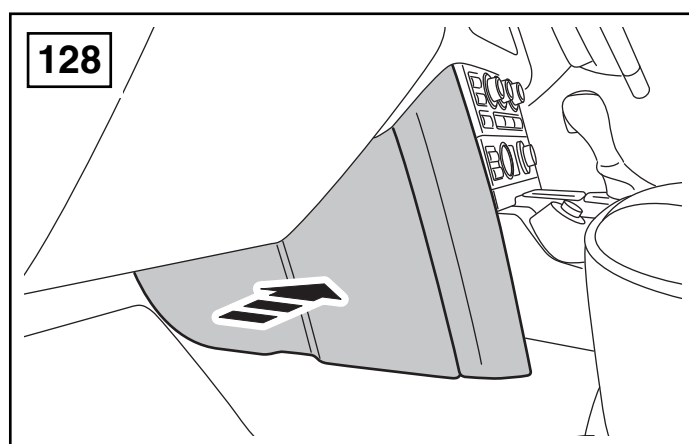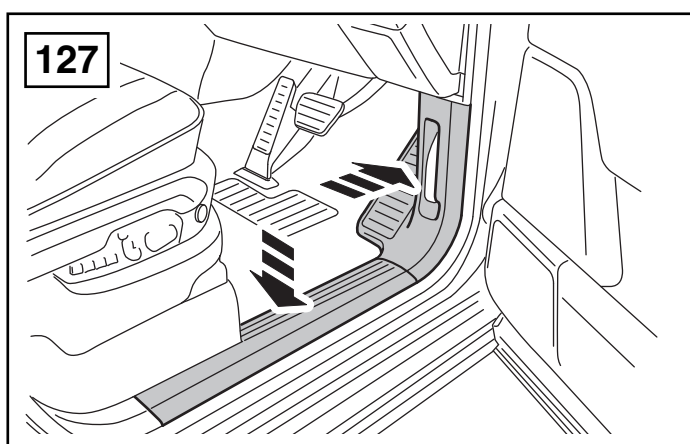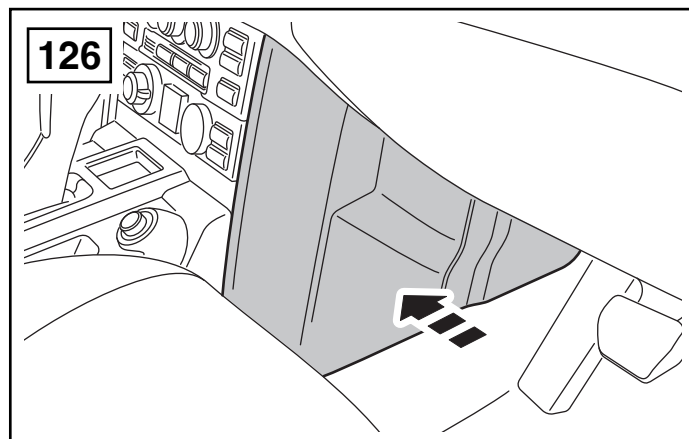
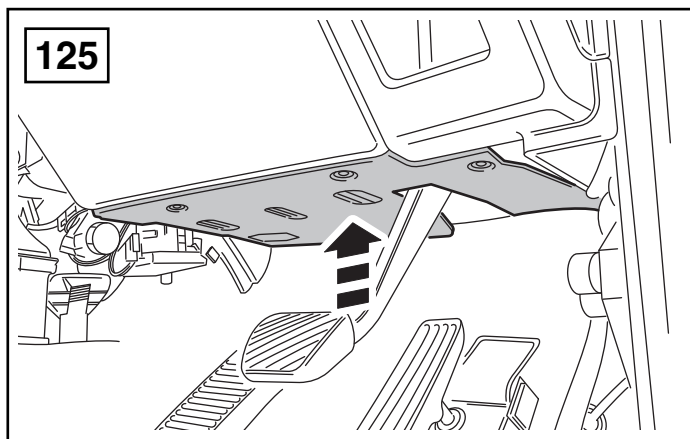


GB The following instructions are valid for both sides of the vehicle.



132

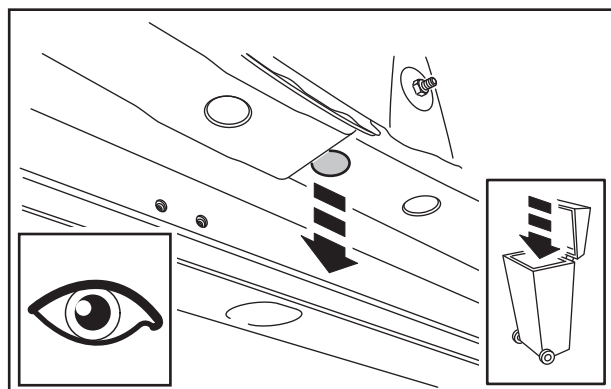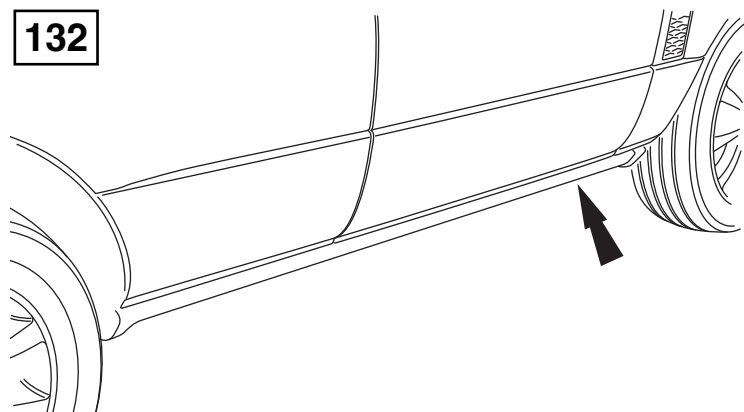



133

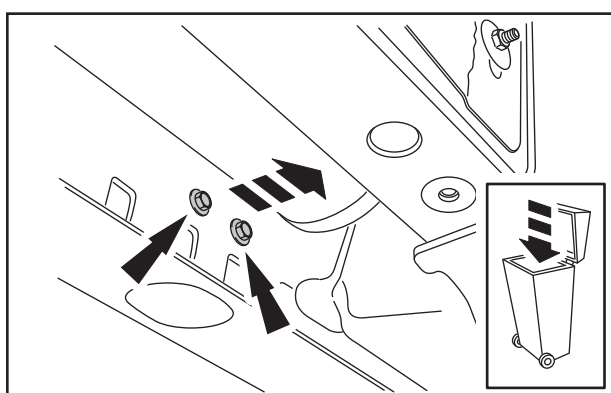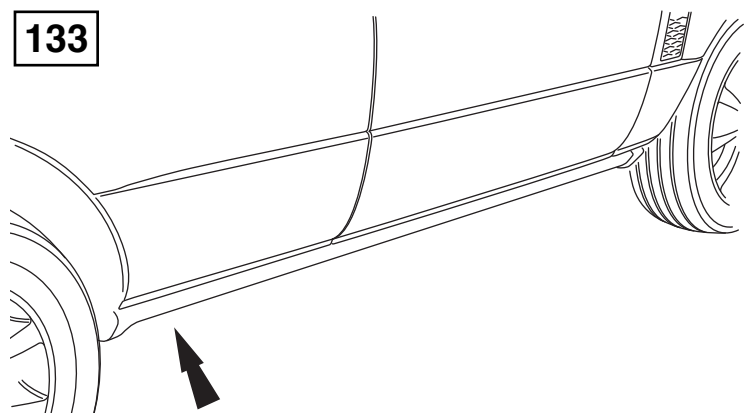




134

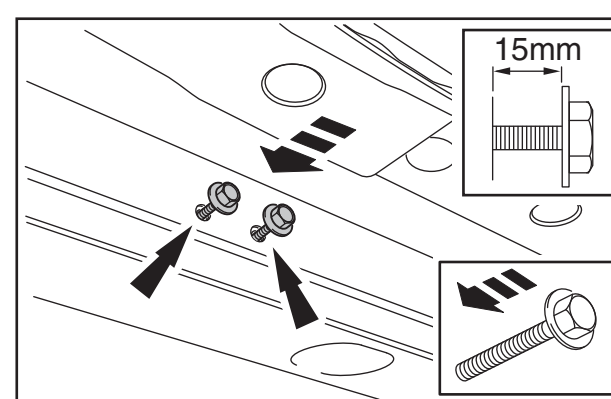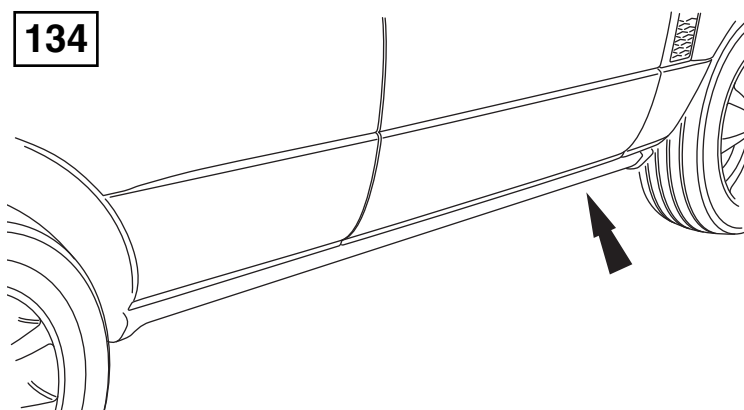



135

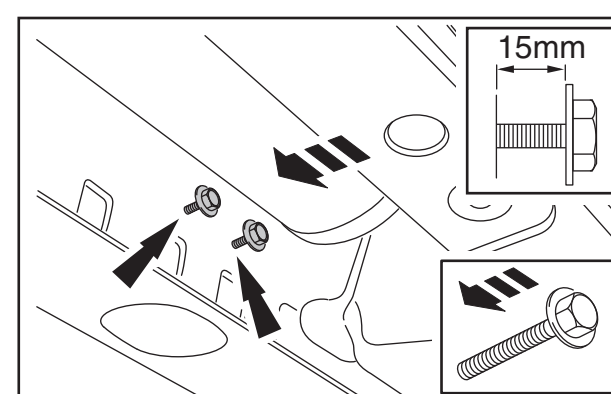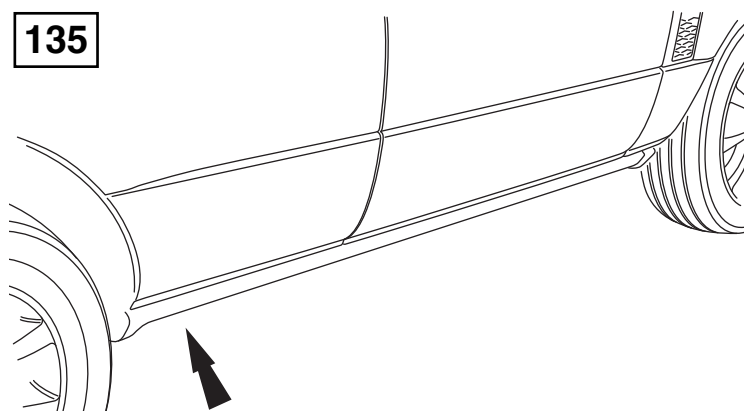



136




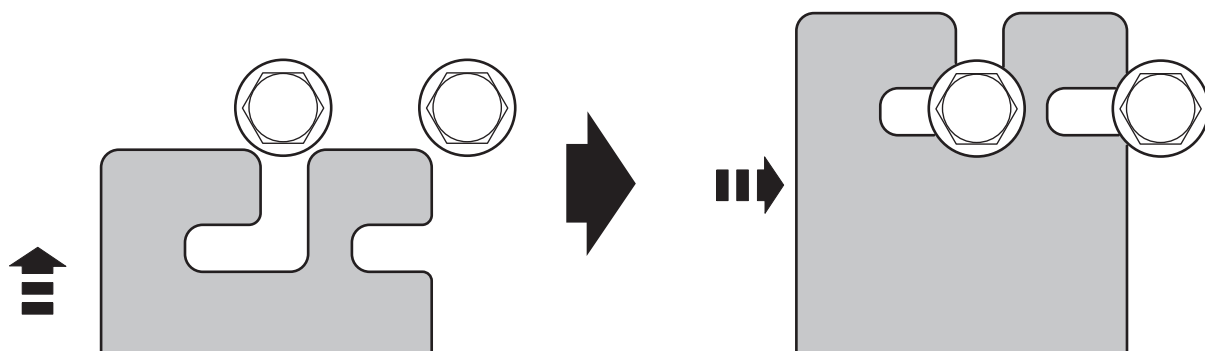
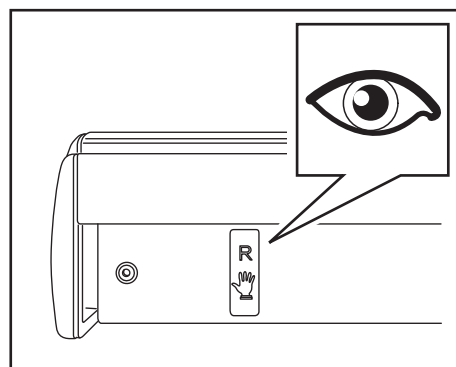
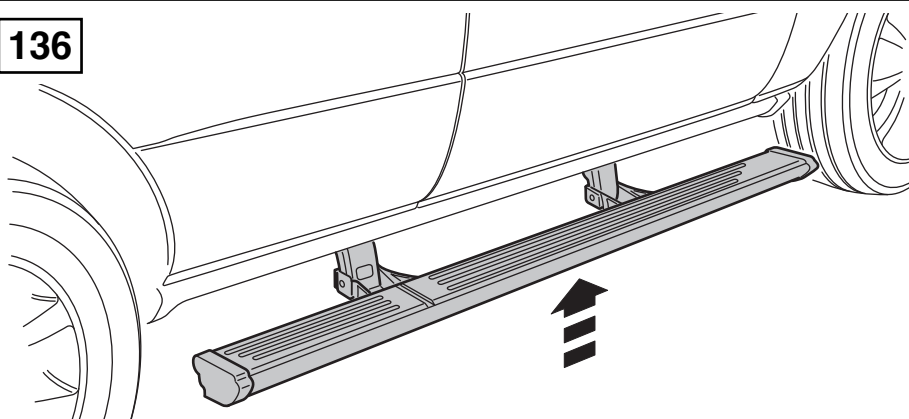








137




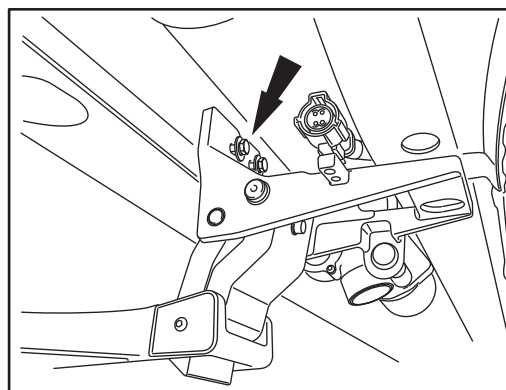
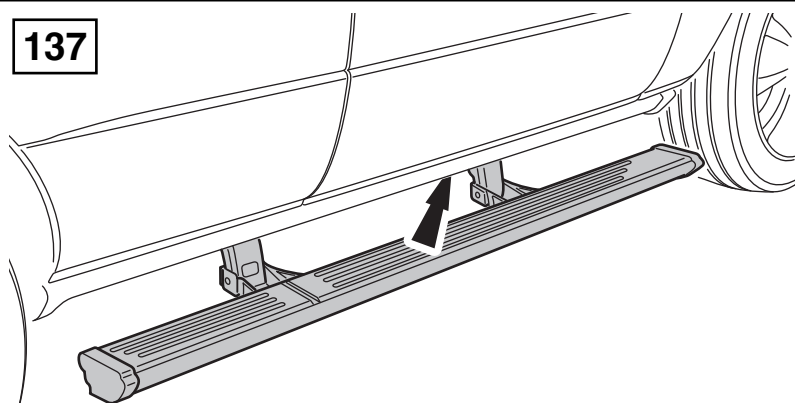


138

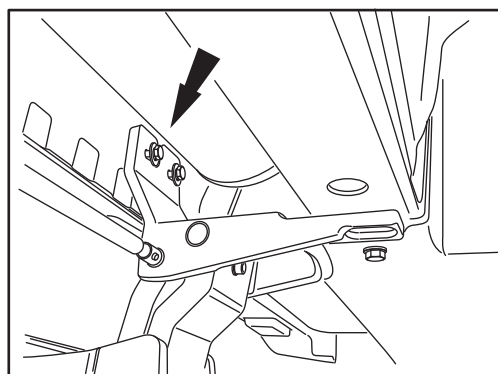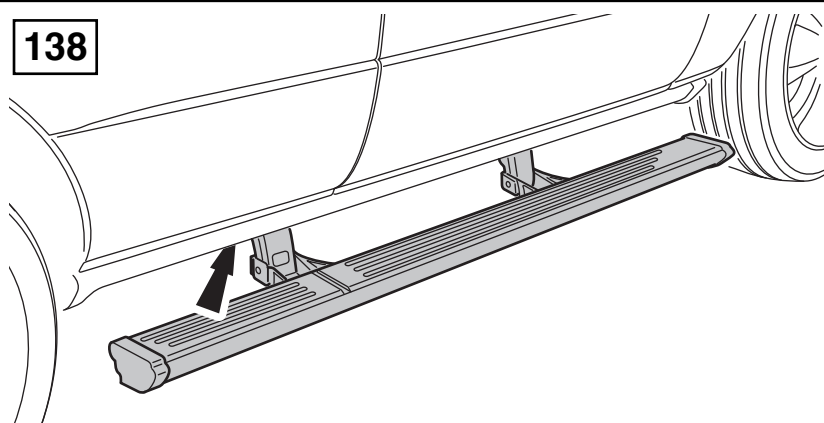

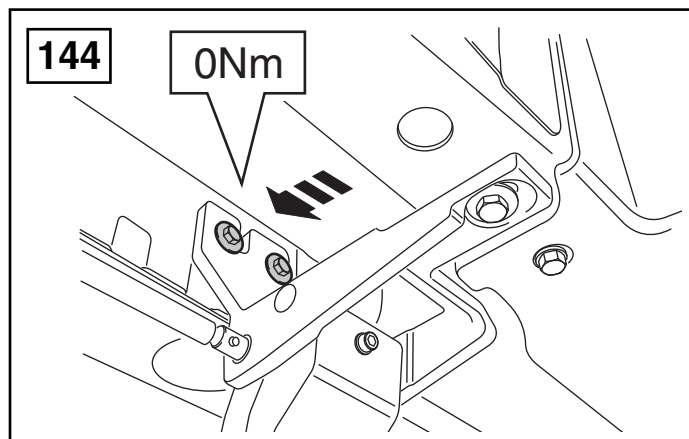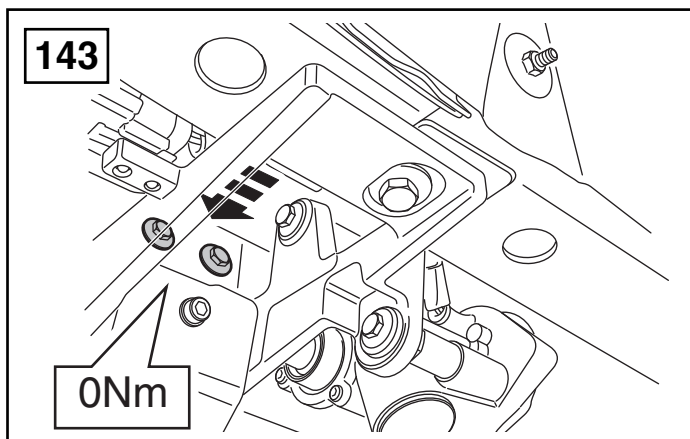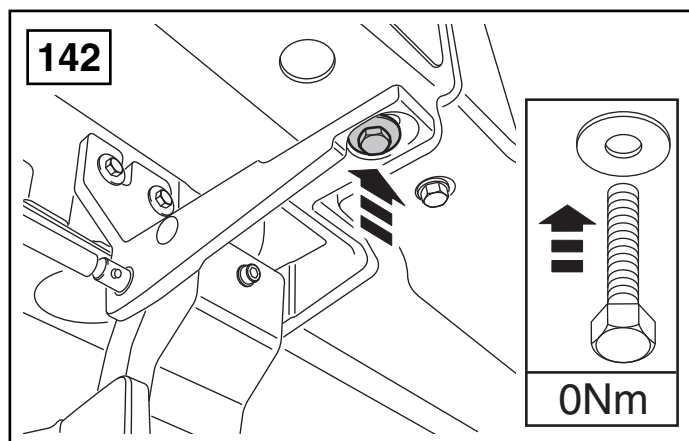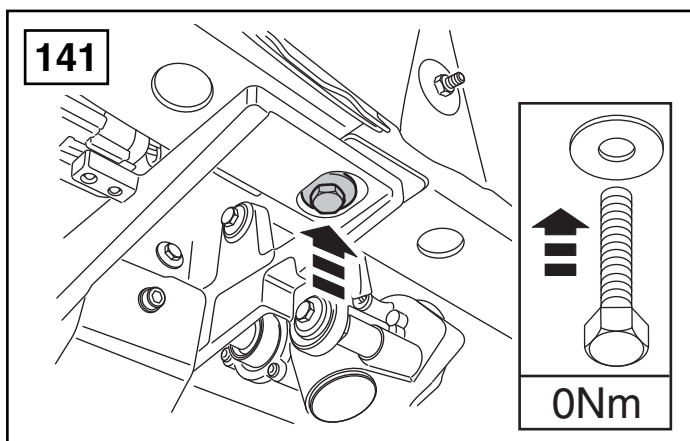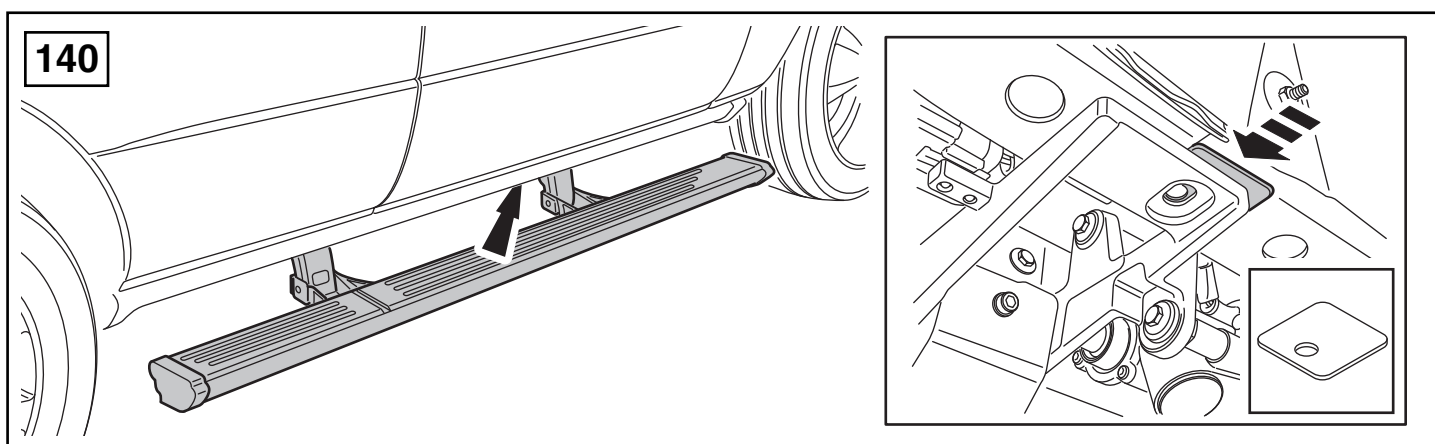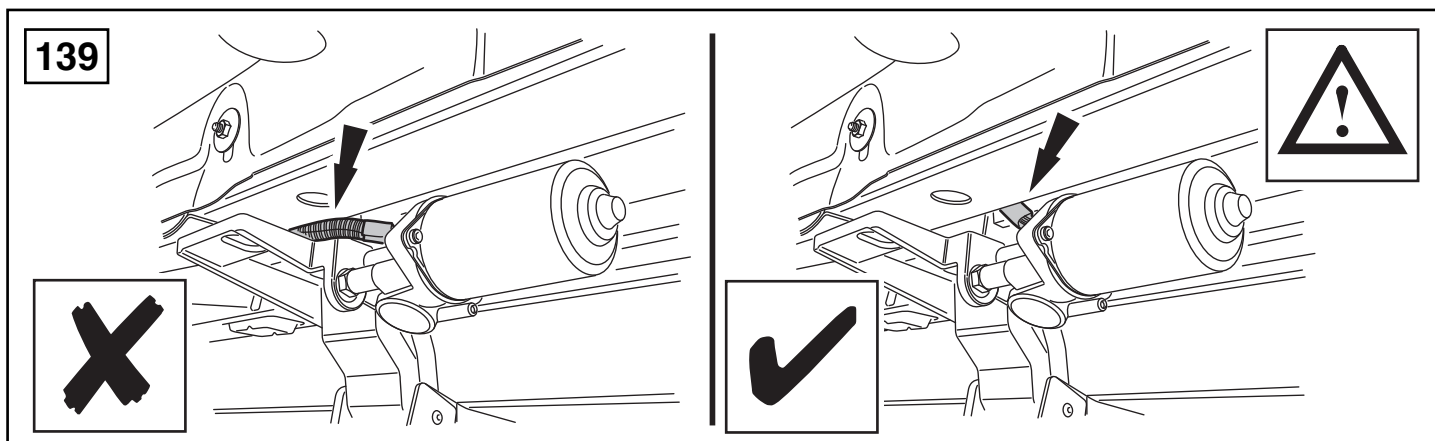

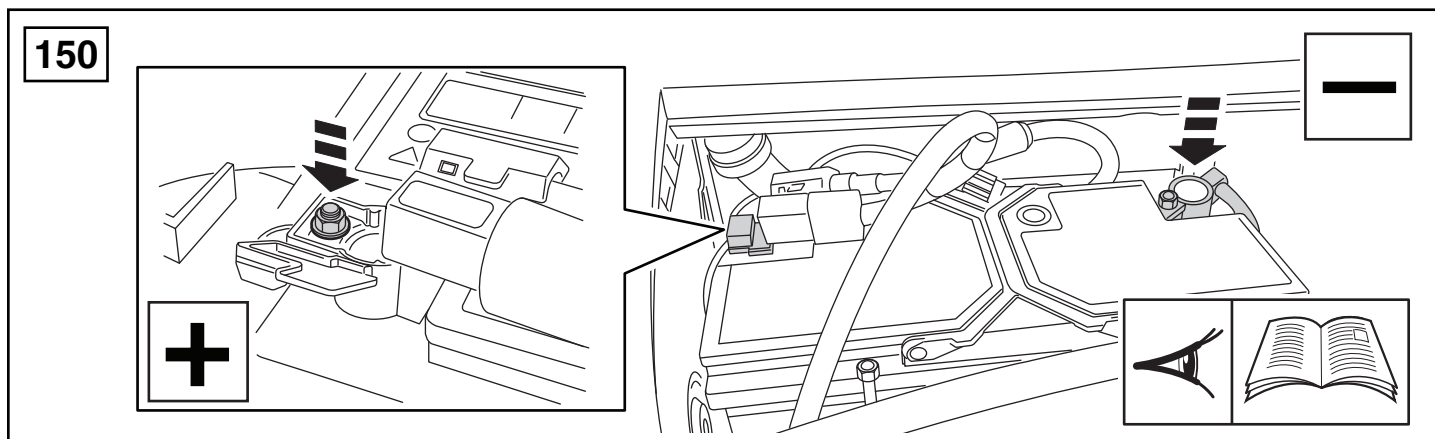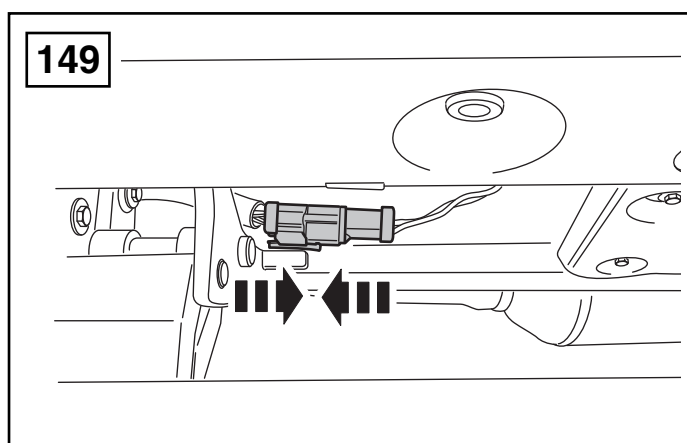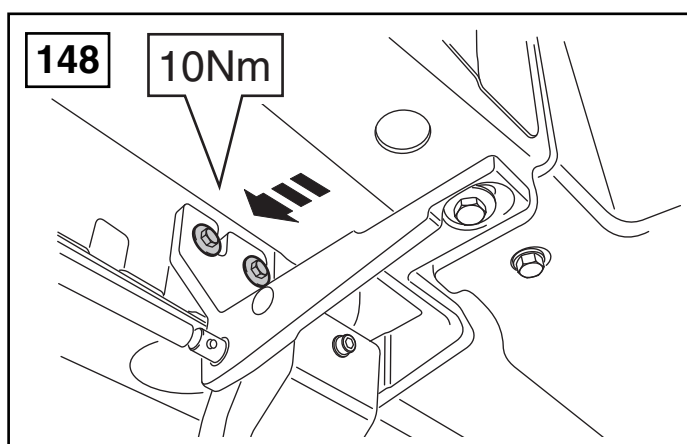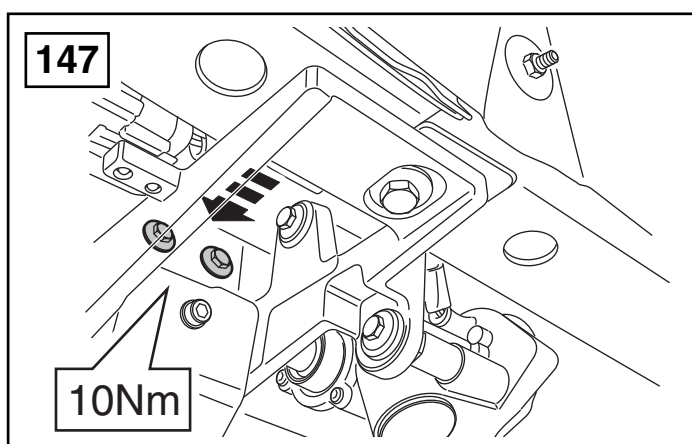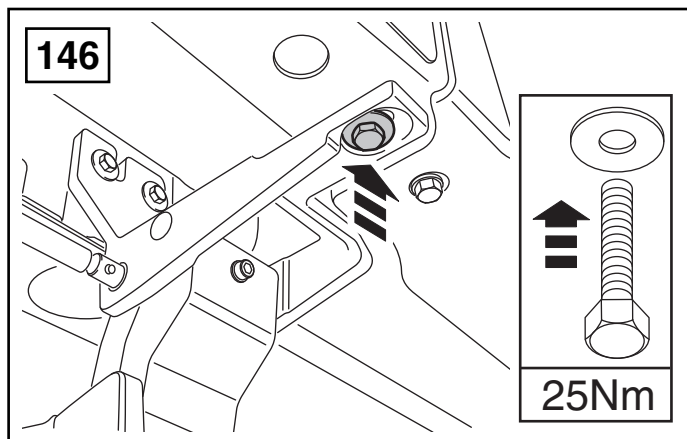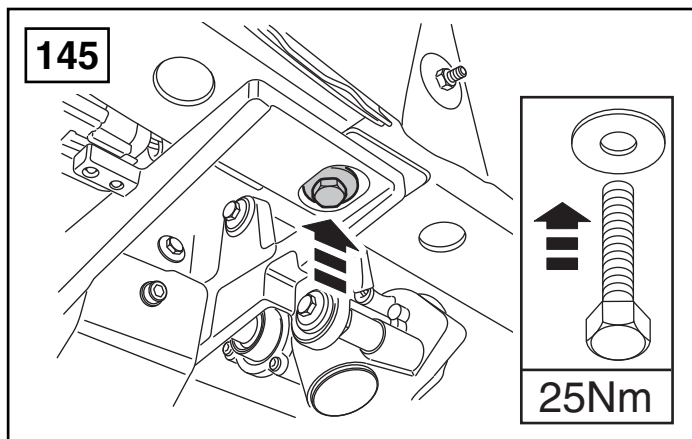

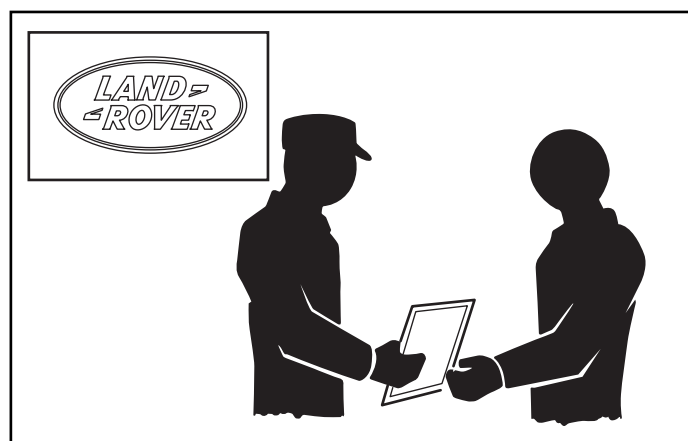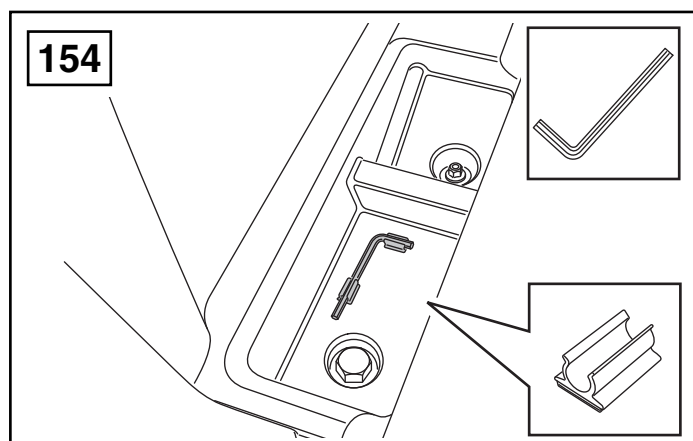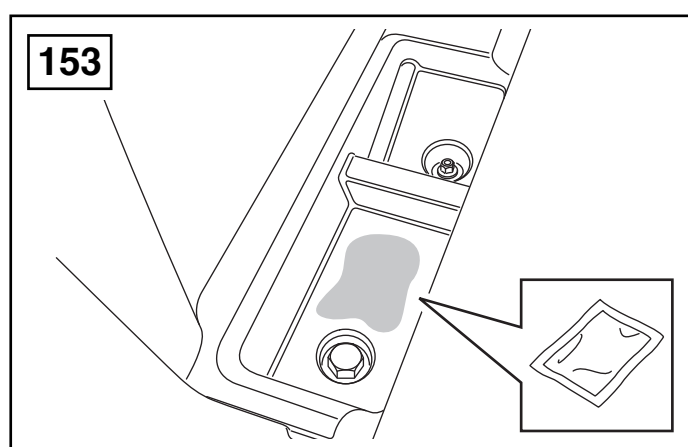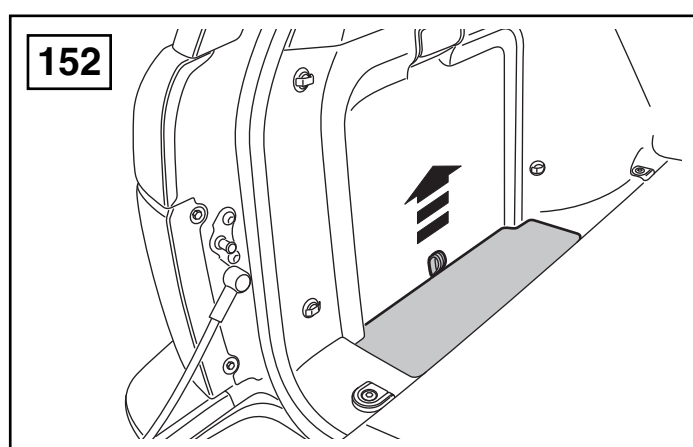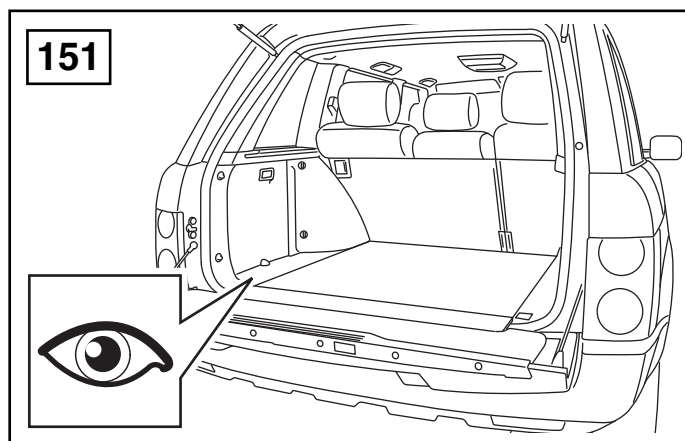



ACCESSORIES

WARNING

Accessories which are not properly fitted can be dangerous. Read the instructions carefully prior to fitting. Whilst fitting, comply with the instructions at all times. If in doubt, contact your nearest Land Rover Dealer.