



INSTALLATION INSTRUCTIONS

2019-2021 Subaru Ascent

Qty	Hardware	Qty	Hardware (Five bags)
2	Front Mounting Brackets	10	Drop Pins
2	Middle Mounting Brackets	10	Flat Washers
2	Rear Mounting Brackets	10	Lock Washers
		10	Nuts

Thank you very much for choosing our products.

Please read the installation instruction carefully before using our product and be sure to fully understand the contents mentioned above for subsequent installation.

In addition, please keep properly the installation instruction for product maintenance in future.

Attentions

- The following symbols are used in this installation instruction.



Caution

Relevant matters must be obeyed for safety.

Non-compliance may result in injury or other accidents.

Please read carefully and obey strictly.



Note

Relevant matters must be obeyed for the smooth installation and use.

- Non-compliance may cause the problems with vehicle. Please do not install that is not recorded in this instruction.
- Please forgive that we are not responsible for any consequences arising from the installation not according to our installation instruction.



1. Prepare tools and fender brackets.




2. Draw the installation position of the bracket on the fender.

3. Remove the screws on a part of the mudguard.



4. Cut off the excess mudguard and trim it clean.

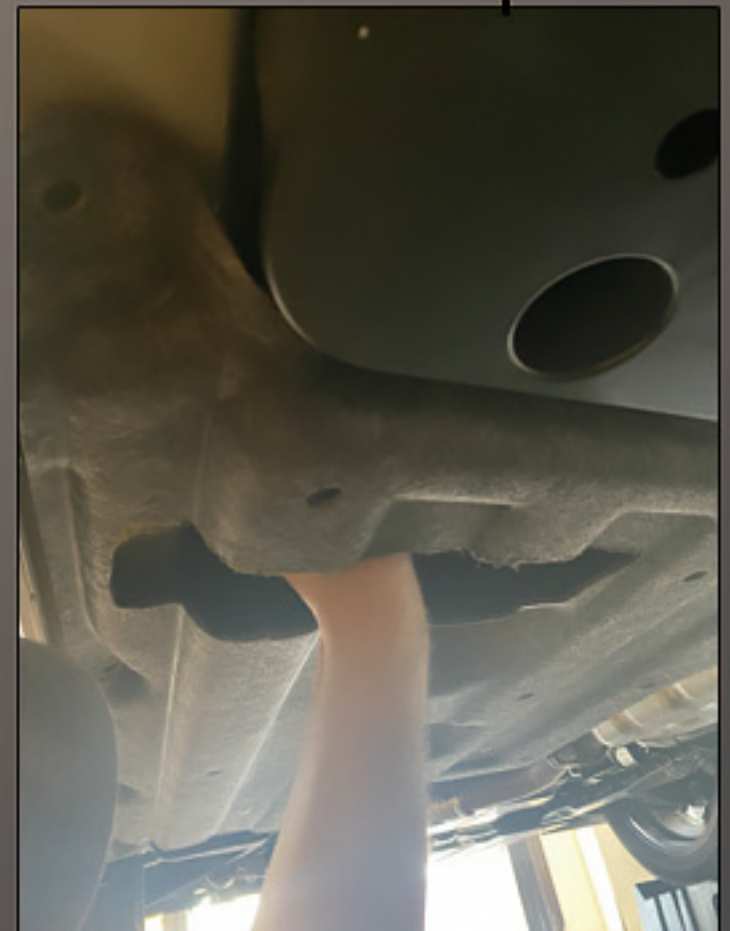



5. Install the bracket and fix it with an air gun.



6. At the front, middle, and rear of the car bottom
Install three brackets.

7. Prepare to install the pedal





8. Remove the parts on the mudguard.



9. Install the pedal, and open the door to check the height.

10. Install a fixed pedal.





11. Reconfirm the installation height of the pedal.



12. Pedal fixed installation completed



13. Complete the pedal installation.