











SANDWICH THE PERPENDICULAR FRAME RAILS BETWEEN THE PLATE AND BRACKET


10 B*

USE LONG BOLTS FOR ASB

C IS MOUNTED ON THE PRAME RAIL





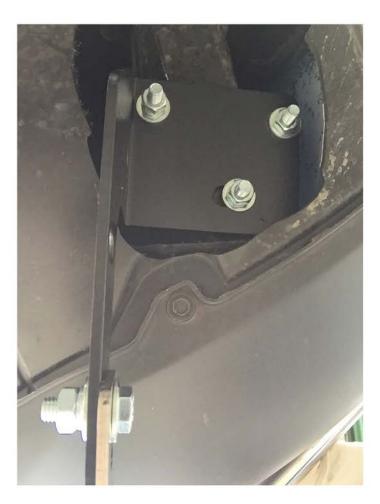



Driver's Side View