


# Warehouse Use Only

---

| Part #   | QUANTITY |
|----------|----------|
| D006     | 1        |
| D112     | 1        |
| G206     | 6        |
| H33W     | 6        |
| A500-54W | 3        |
| BG046    | 3        |
| A02      | 2        |
| A06      | 2        |
| A69      | 2        |


|             |                            |
|-------------|----------------------------|
| Part #:     | H1723W                     |
| Dimensions: | 8" X 8" X 55" (Telescopic) |
| Weight:     | ???                        |

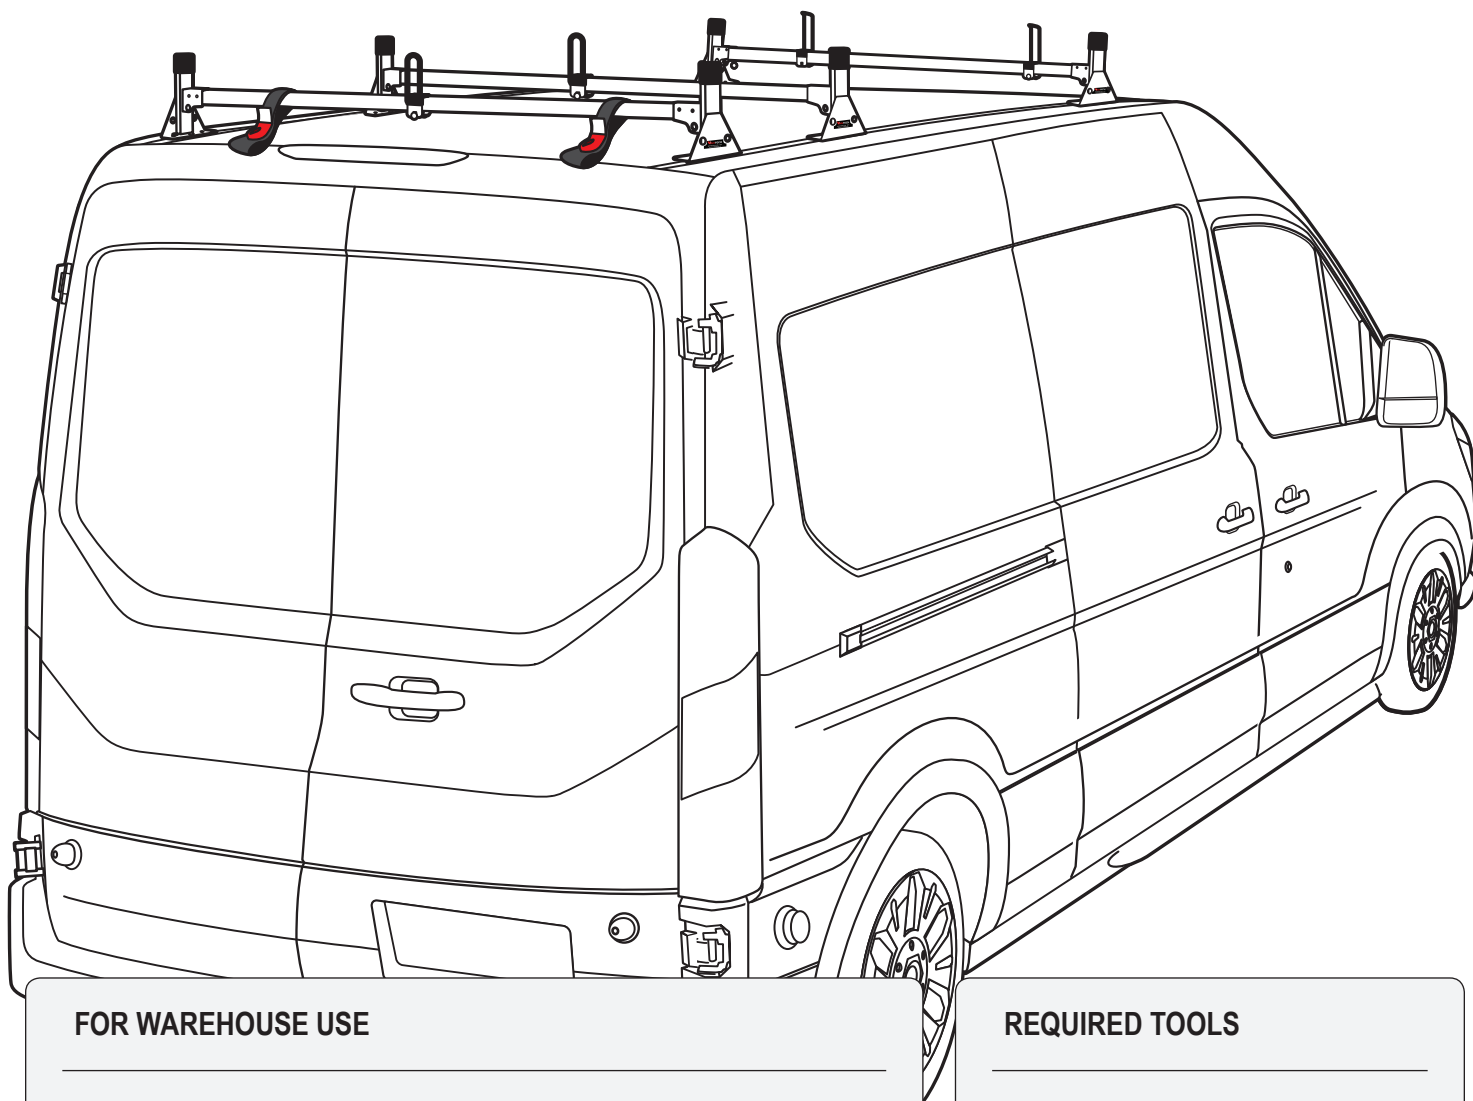

## FOR WAREHOUSE USE

Part #: H1723W  
System: H1 Series  
Material: Steel  
Fitment: Ford Transit Cargo Van 2015-On  
Color: White


## REQUIRED TOOLS

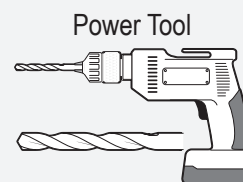









Phillips Head




1/2" Wrench




| PART#   | DESCRIPTION                  | QTY | ITEM  |
|---------|------------------------------|-----|---|
|         |                              |     | items not drawn to scale  |
| W008    | 5/16" X 3/4" WASHER          | 6   |    |
| W022    | 5/16" LOCK WASHER            | 6   |    |
| B018    | 1 3/4" X 5/16" CARRIAGE BOLT | 4   |    |
| B201    | TAP SCREW                    | 12  |    |
| B246    | M8-35 HEX BOLT               | 6   |    |
| N016    | 5/16" PLASTIC KNOB           | 4   |   |
| H33     | H1 MOUNTING BASE             | 6   |  |
| A500-54 | 2" X 1" X 54" CROSS BAR      | 3   |  |
| G206    | RUBBER SEAT 6"               | 6   |  |
| A02     | LADDER GUIDE                 | 2   |  |
| A06     | LADDER STOPPER               | 2   |  |
| A69     | EZ-VELCRO STRAP              | 2   |  |
| BG046   | PLASTIC BAR GUARD 46"        | 3   |  |

### EZ-Velcro Strap

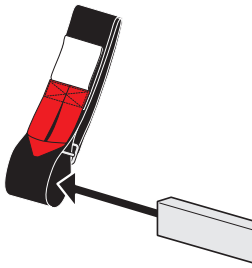

### Directions

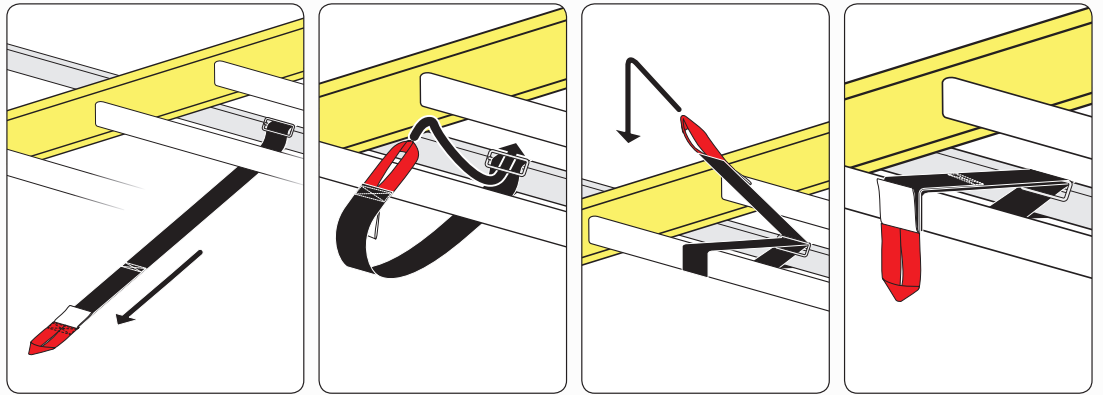

### PLASTIC BAR GUARDS FOR STEEL CROSS BARS

- Remove wax paper from plastic bar guard and adhere it to the top of the Cross Bar.

- Leave 4" on each end

