


# Warehouse Use Only

---

Part #	QUANTITY
D056	1
D110	1
G206	6
H34W	6
A613-54W	3
BG546	3
A02	2
A06	2
A69	2

Part #:	H1753W
Dimensions:	8" X 8" X 55" (Telescopic)
Weight:	???

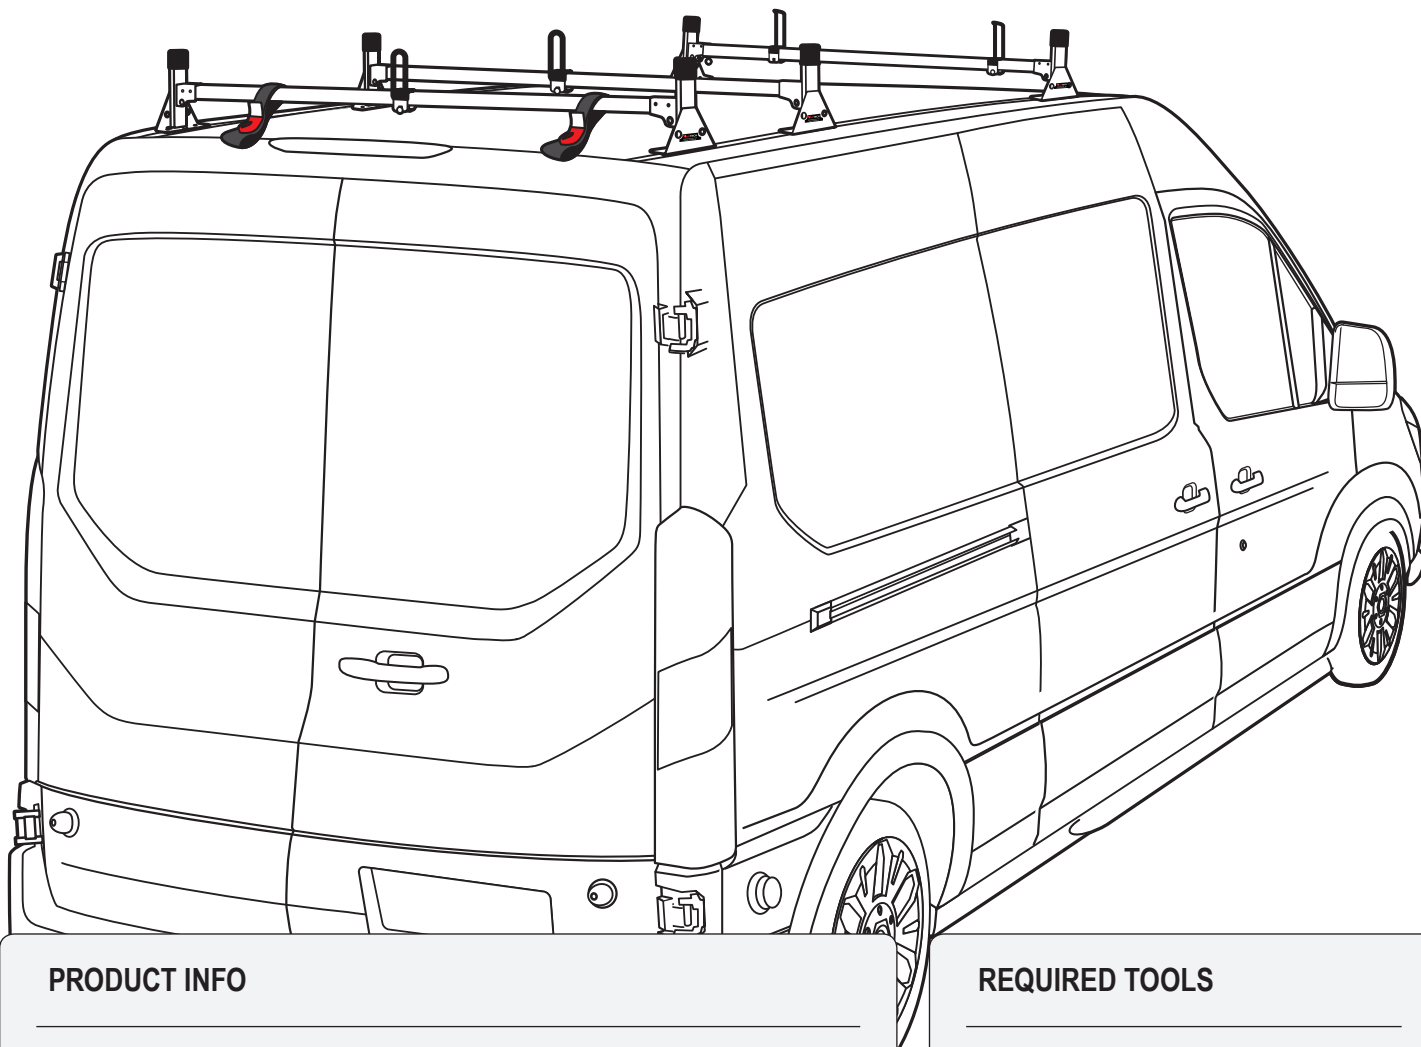


## PRODUCT INFO

Part #: H1753W  
System: H1 Series  
Material: Aluminum  
Fitment: Ford Transit Cargo Van 2015-On  
Color: White








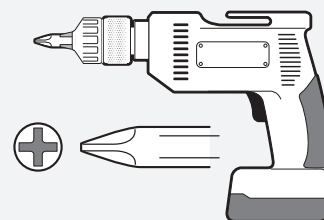


## REQUIRED TOOLS

Power Tool With Phillips Head




1/2" Wrench




PART#	DESCRIPTION	QTY	ITEM
			items not drawn to scale
W008	5/16" X 3/4" WASHER	6	
W022	5/16" LOCK WASHER	6	
B018	1 3/4" X 5/16" CARRIAGE BOLT	4	
B201	TAP SCREW	12	
B246	M8-35 HEX BOLT	6	
N016	5/16" PLASTIC KNOB	4	
H34	H1 MOUNTING BASE	6	
A613-54	2" X 1" X 54" CROSS BAR	3	
G206	RUBBER SEAT 6"	6	
A02	LADDER GUIDE	2	
A06	LADDER STOPPER	2	
A69	EZ-VELCRO STRAP	2	
BG546	RUBBER BAR GUARD 46"	3	

### EZ-Velcro Strap

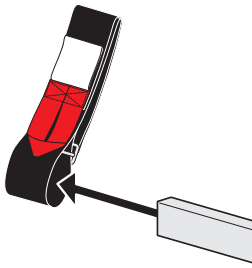









### Directions

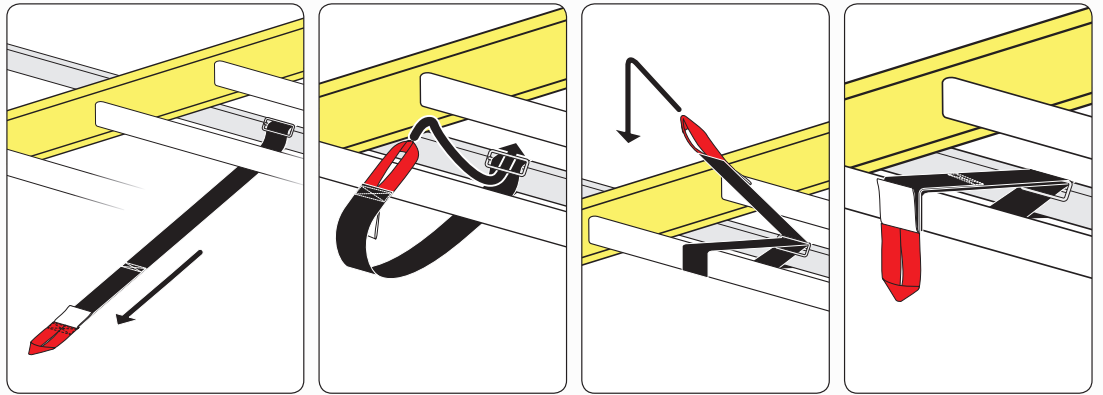

### RUBBER BAR GUARDS

- Press the rubber bar guard into the channels of cross bars
- Leave 4" on each end

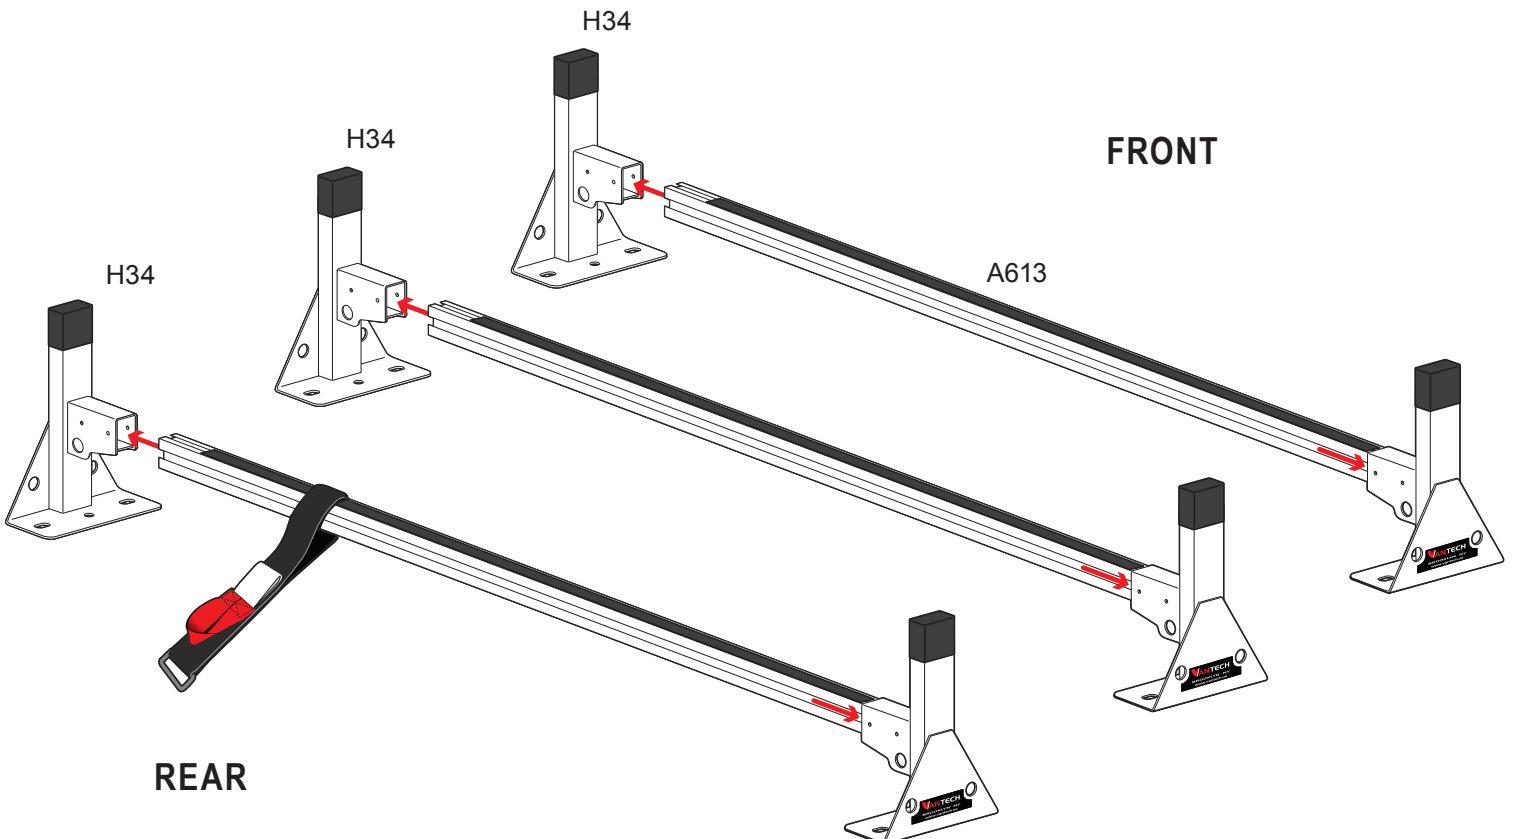

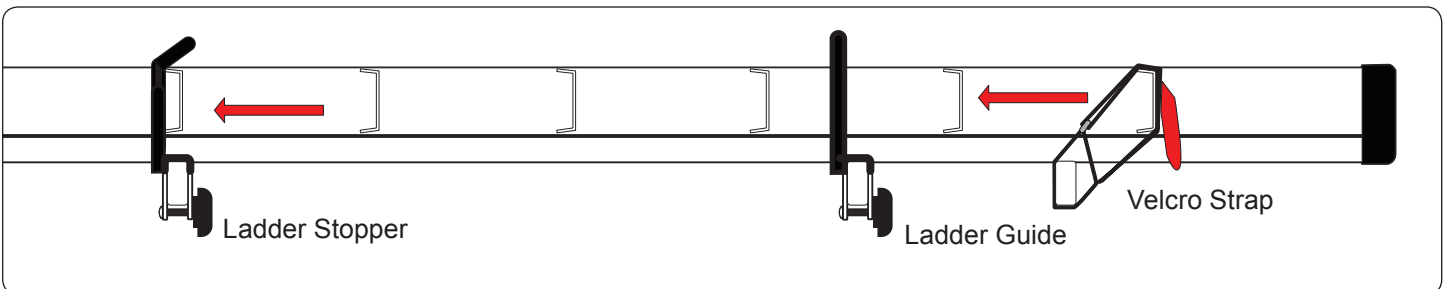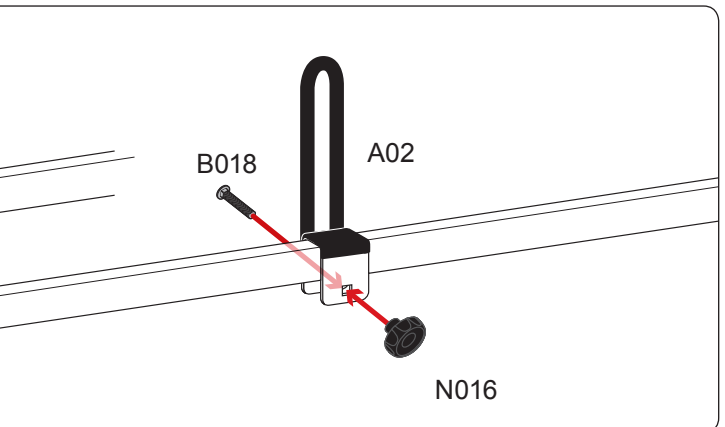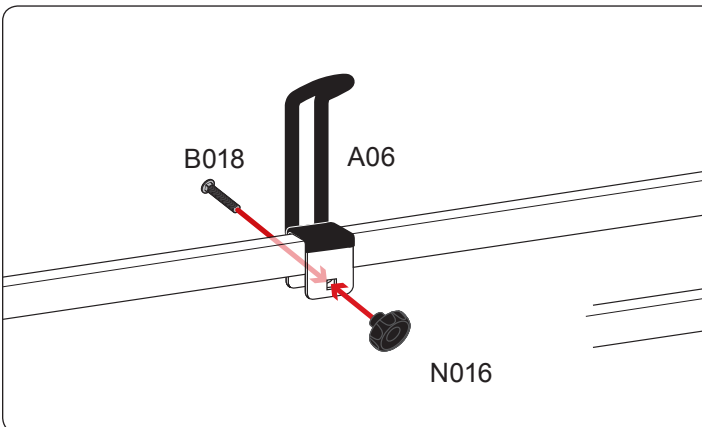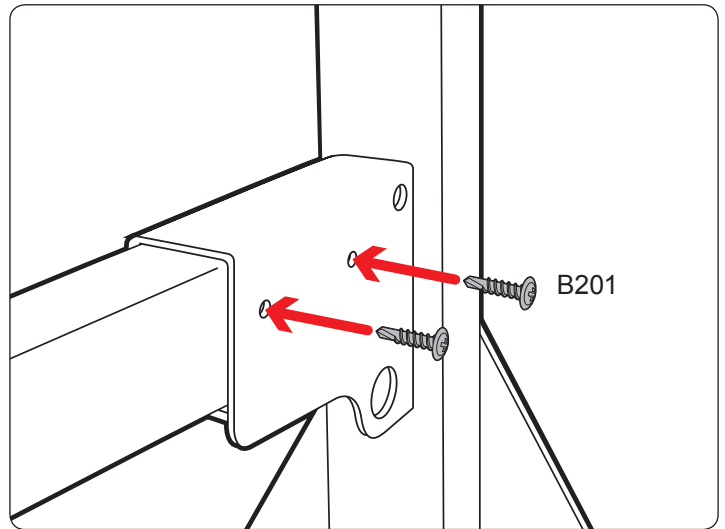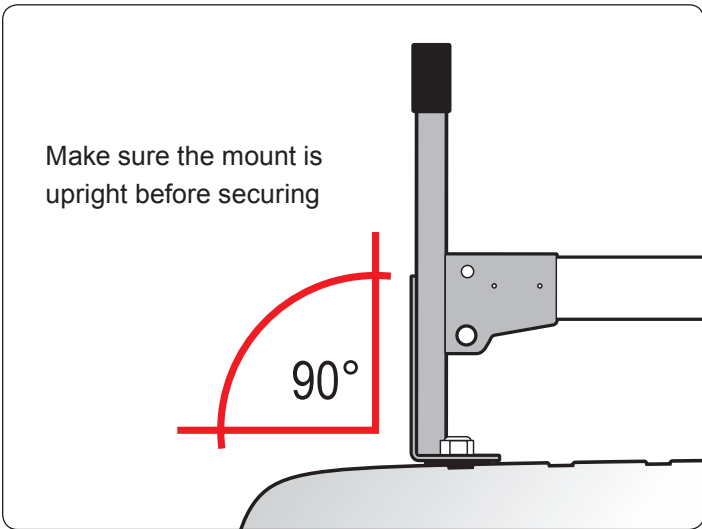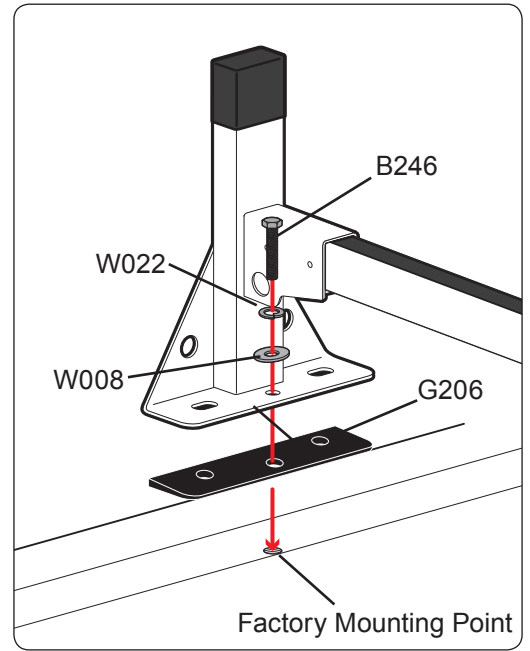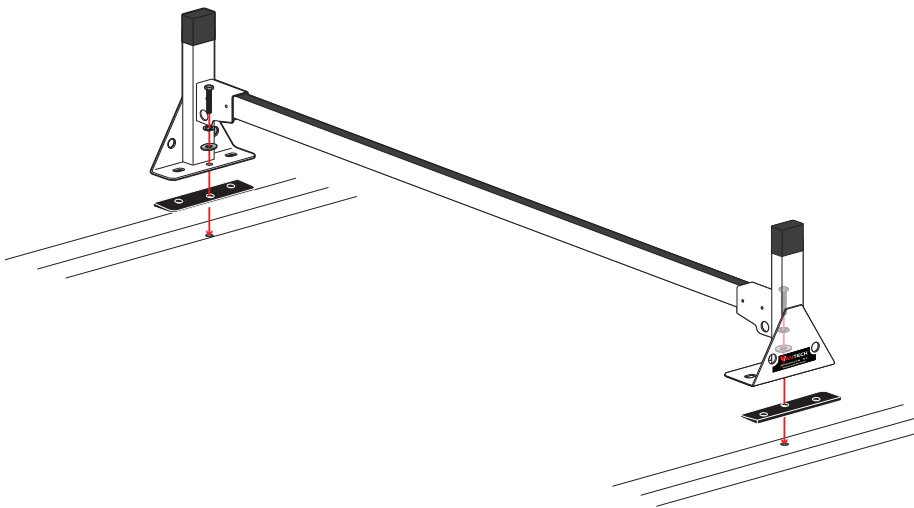

Vantech provides the best in truck and commercial van equipment.