


## Warehouse Use Only

Part #	QUANTITY
D251	1
D260	1
L100B	1 Box
A279-56B	2
L201	5

Part #:	L001B	
Dimensions:	4" X 4" X 57" (Telescopic)	
Weight:	???	





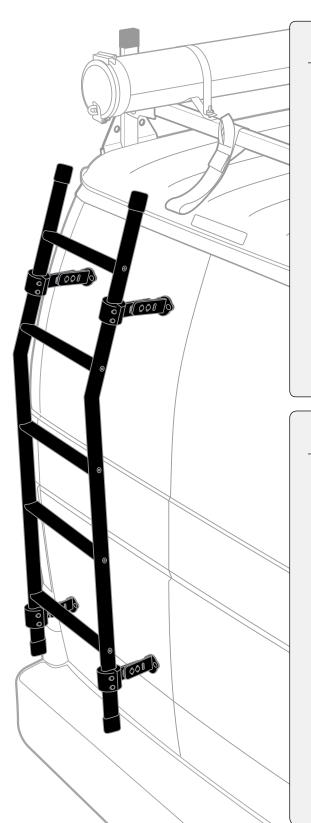

## **PRODUCT INFO**

Part #: L001B

System: Rear Access Ladder

Material: Aluminum

Fitment: Low Roof Vehicles


Color: Black

## **REQUIRED TOOLS**

Marker

Power Tool with 5/16" Drill bit






3/16" Allen Key Wrench


1/2" Wrench






PART#	DESCRIPTION	QTY	ITEM ITEM NOT DRAWN TO SCALE
SS-B117	5/16" X 1" BUTTON HEAD ALLEN BOLT	8	
SS-B119	5/16" 1 1/2" BUTTON HEAD ALLEN BOLT	8	
SS-B167	5/16" 1 1/2" ALLEN COUNTERSUNK BOLT	10	
SS-B251	1/4" X 1/2" CYLINDER HEAD ALLEN BOLT	16	
SS-N002	5/16" NUT	16	
SS-W008	5/16" X 3/4" WASHER	32	
SS-W022	5/16" LOCK WASHER	16	
Z279	ENDCAP	4	
GL001	GASKET	4	
M02	INTERIOR PLATE (2.25" BOLT TO BOLT)	4	
L001	LADDER ADAPTOR 1	4	
L002	LADDER ADAPTOR 2	4	
L003	LADDER ADAPTOR 3	4	
A279-56	LADDER SIDE RAIL 56" (ANGLED)	2	
L201	LADDER RUNG	5	

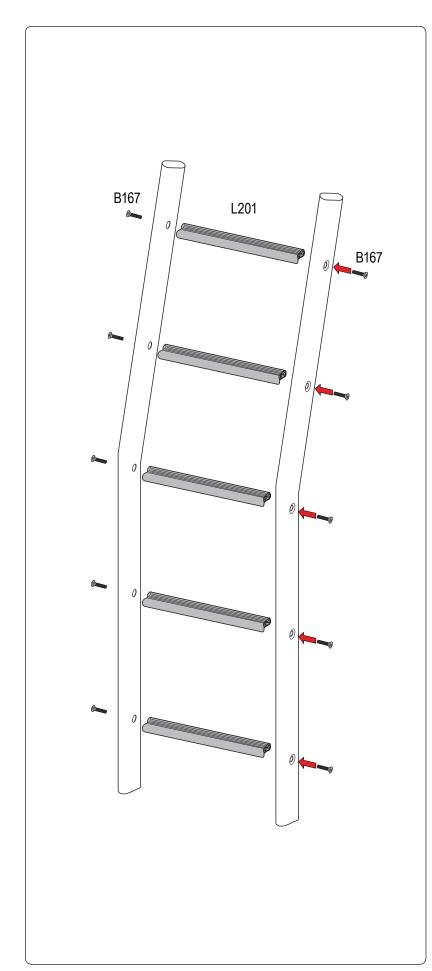


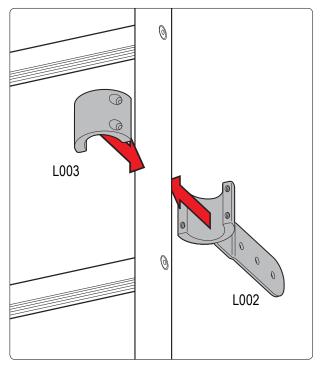


Repeat all steps 4 times for the 4 ladder mounts.

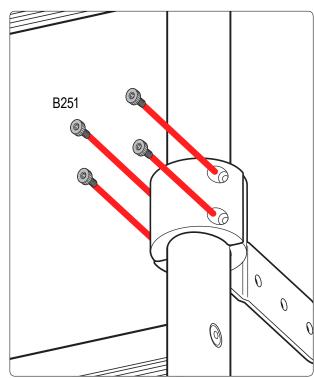


Do not completely tighten bolts so adjustments can be made later on.

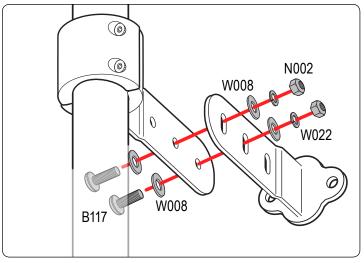



Depending on your curve of your vehicle you can use hole combinations to create different angles. Have 2 bolts per mount

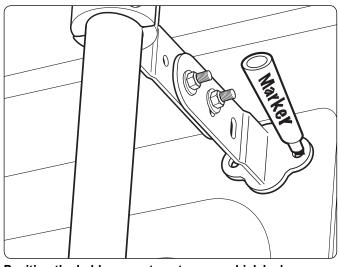



 $\label{position:position:position:position} \textbf{Position the ladder mounts onto your vehicle's door.}$ 

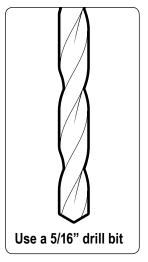

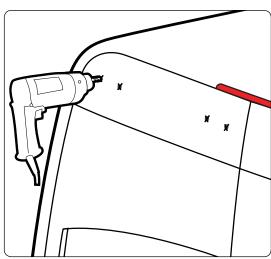

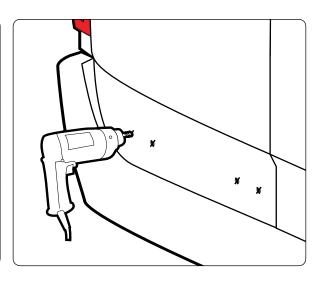

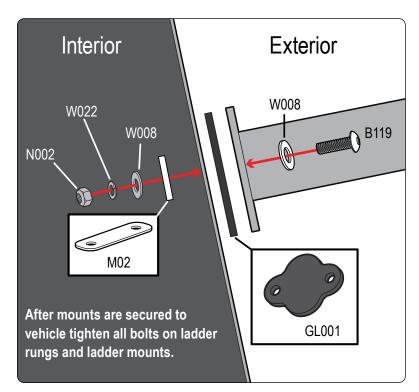

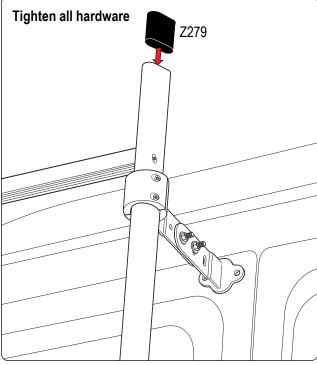

Discover other commercial van equipment on our website.